

- Manuals.plus /
- > Midea /
 - > Midea MLTW09M1BWW Portable Washer User Manual

Midea MLTW09M1BWW

Midea MLTW09M1BWW Portable Washer User Manual

Model: MLTW09M1BWW | Capacity: 0.9 cu. ft.

PRODUCT OVERVIEW

The Midea MLTW09M1BWW is a compact 0.9 cu. ft. portable washing machine designed for small living spaces such as apartments, RVs, and dorms. It features a stainless steel tub, LED display, and a transparent lid. This appliance offers multiple washing cycles and functions for efficient and convenient laundry care.





Figure 1: Front view of the Midea MLTW09M1BWW Portable Washer.

Space-Saving Design

This compact washer is able to fit into smaller and shallower spaces, making it perfect for bathrooms, balconys, and apartment



Bathroom



Balcony



Apartment

Figure 2: The compact design of the Midea MLTW09M1BWW allows it to fit into smaller spaces like bathrooms, balconies, and apartments.

SAFETY INFORMATION

Read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the power supply is reliably grounded and the voltage is within $\pm 15\%$ of the rating voltage (120 Volts).
- Do not connect to a hot water supply.
- Keep the appliance away from direct sunlight and heat sources.
- Do not wash items that are soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- The Child Lock function can be activated by pressing both the "Water Level" and "Extra Rinse" buttons simultaneously for 3 seconds. This locks the lid and prevents accidental use.
- Always unplug the washer from the power outlet before cleaning or performing any maintenance.

SETUP AND INSTALLATION

Follow these steps for proper installation of your portable washing machine.

Your browser does not support the video tag.

Video 1: Official Midea portable washer 0.9 cu. ft. installation guide. This video demonstrates the steps for installing the base cover, drain hose, and connecting the inlet hose to a faucet.

Installation Steps:

1. **Install the Bottom Cover:** Lay the washing machine gently on its side. Attach the bottom cover using the provided screws. This cover helps protect internal components.



Figure 3: Step 1 of installation: Installing the bottom cover.

2. **Connect the Water Hose:** Connect the water inlet hose to the designated inlet valve on the back of the washing machine. Ensure a secure connection to prevent leaks.

Easy Installation in 4 Simple Steps

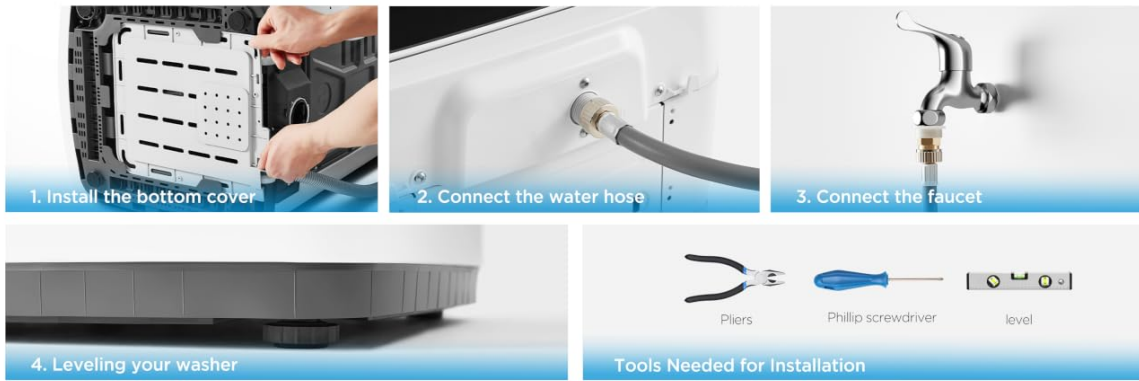


Figure 4: Step 2 of installation: Connecting the water hose.

3. **Connect to the Faucet:** Attach the other end of the water hose to your faucet. The quick connection adaptor is designed for easy attachment. Ensure the faucet connection is tight to prevent leaks.

Easy Installation in 4 Simple Steps

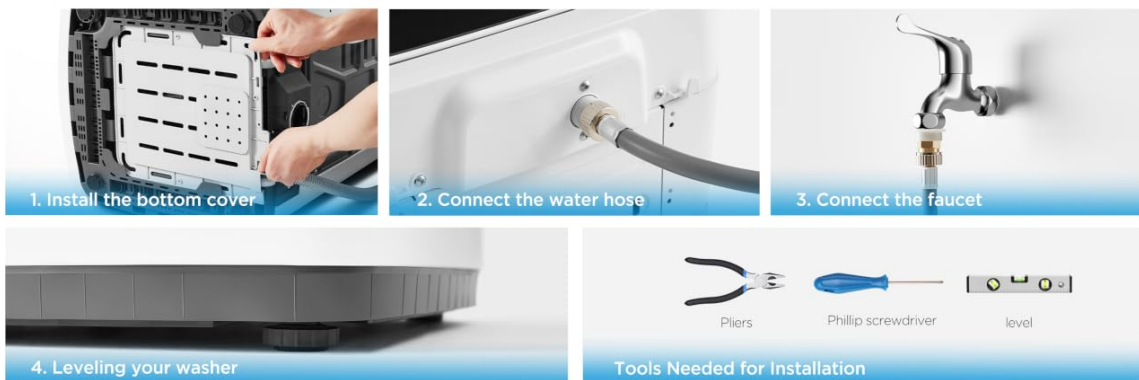


Figure 5: Step 3 of installation: Connecting to the faucet.

4. **Leveling Your Washer:** Adjust the leveling feet at the bottom of the washer to ensure it is stable and level. This prevents excessive vibration and noise during operation.

Easy Installation in 4 Simple Steps

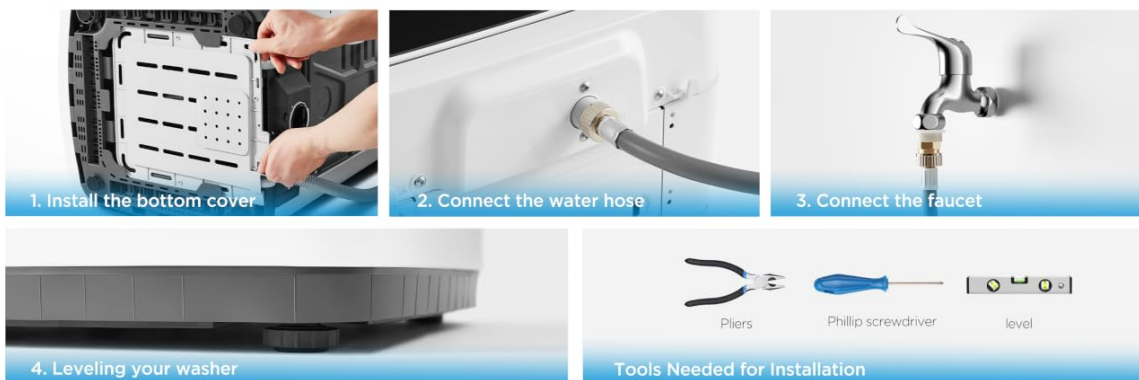


Figure 6: Step 4 of installation: Leveling the washer.

5. **Drainpipe Height Requirements:** The drainage pipe length is 1200mm. Ensure the drain hose is properly

positioned for drainage, either over the edge of a wash basin, in a laundry tub, or in a standpipe. The maximum height for the drain hose is 39 inches (99 cm) and the minimum is 32 inches (81 cm).



Figure 7: Proper drainpipe setup for the portable washer.

OPERATING INSTRUCTIONS

The Midea MLTW09M1BWW features a user-friendly control panel for easy operation.



Figure 8: The intuitive control panel for selecting wash programs and settings.

Washing Programs:

The washer offers 6 preset washing programs optimized for various fabric types and soil levels:

- **Normal:** Standard wash for everyday laundry.
- **Quick:** For small, lightly soiled loads, completing in approximately 15 minutes.
- **Spin Only:** Drains water and spins clothes to remove excess moisture.
- **Heavy:** For heavily soiled or bulky items.
- **Baby Care:** Gentle wash cycle suitable for delicate baby clothes.
- **Drum Clean:** Special cycle to clean the washer drum and remove residue.

Water Levels:

Select from 3 water levels (Large, Medium, Small) to suit the size of each load, optimizing water usage.

Figure 9: Water level selection guide for optimal washing.

Special Features:

- **Extra Rinse:** Adds 1 to 4 additional rinses to reduce detergent build-up, beneficial for sensitive skin.

Designed with Your Family in Mind



Extra Rinse

Adds 1 to 4 additional rinses to reduce detergent build-up



Child Lock

Activated by pressing both the "Water Level" and "Extra Rinse" buttons for 3 seconds




Baby Care

Reduces residue build-up from detergents and other potential irritants

Figure 10: Extra Rinse function for thorough cleaning.

- **Child Lock:** Press "Water Level" and "Extra Rinse" buttons simultaneously for 3 seconds to activate. This locks the control panel and lid, preventing unintended operation.

Designed with Your Family in Mind

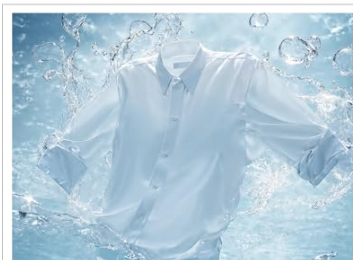


Extra Rinse

Adds 1 to 4 additional rinses to reduce detergent build-up



Child Lock

Activated by pressing both the "Water Level" and "Extra Rinse" buttons for 3 seconds

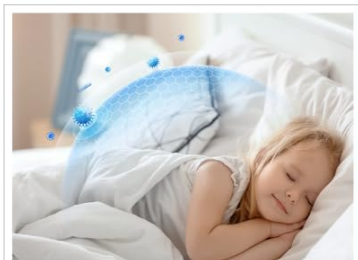

Baby Care

Reduces residue build-up from detergents and other potential irritants

Figure 11: Child Lock feature for enhanced safety.

- **Soft Close Glass Lid:** The transparent lid closes gently and quietly for safe operation and allows you to monitor the wash cycle.

Laundry Made Easier

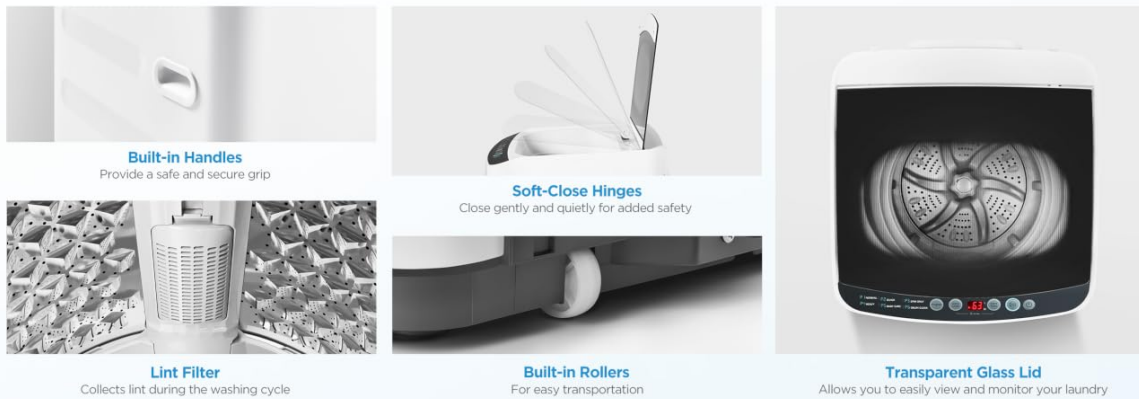


Figure 12: Soft-close lid and transparent design for convenience.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your Midea portable washer.

Drum Clean Function:

The Drum Clean function uses a powerful water flow to remove residue build-up, keeping the washer clean and odor-free. It is recommended to use this function periodically.

Drum Clean Function

Uses a powerful water flow to remove residue build-up keeping the washer clean and odor-free



Figure 13: The Drum Clean function helps maintain hygiene and prevent odors.

Stainless Steel Tub:

The durable, rust-resistant stainless steel tub features an improved surface design that helps prevent fabrics from snagging and being damaged. Wipe down the tub after use to prevent water spots and mineral buildup.

Stainless Steel Drum

Durable and rust-resistant design for reliable performance



Figure 14: The stainless steel tub is designed for durability and fabric protection.

Lint Filter:

The built-in lint filter collects lint during the washing cycle. Regularly clean the lint filter to ensure efficient operation and prevent lint transfer to clothes.

Laundry Made Easier

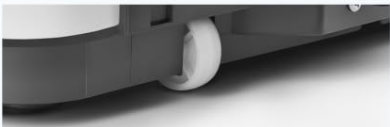


Figure 15: The lint filter collects debris and should be cleaned regularly.

TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your Midea portable washer.

Problem	Possible Cause	Solution
Washer does not start	Power cord not plugged in; Lid not closed properly; Program not selected.	Ensure power cord is securely plugged into a grounded outlet. Close the lid completely. Select a wash program and press Start/Pause.

Problem	Possible Cause	Solution
No water filling	Water supply faucet is off; Water inlet hose is kinked or blocked.	Open the water supply faucet. Straighten the water inlet hose and check for blockages.
Excessive vibration/noise	Washer is not level; Load is unbalanced.	Adjust the leveling feet to ensure the washer is stable. Redistribute the laundry evenly inside the tub.
Water leakage	Hoses are loose; Drain hose is improperly positioned.	Check all hose connections and tighten if necessary. Ensure the drain hose is correctly installed and not obstructed.
Clothes not clean	Too much laundry; Insufficient detergent; Incorrect wash program.	Reduce load size. Use appropriate amount of detergent for load size and soil level. Select a more suitable wash program (e.g., "Heavy").

SPECIFICATIONS

Brand: Midea

Model: MLTW09M1BWW

Capacity: 0.9 cu. ft.

Dimensions (D x W x H): 16.9 x 17.7 x 30.9 inches

Item Weight: 44 pounds

Color: White

Voltage: 120 Volts

Installation Method: Freestanding

Display Style: LED

Special Features: Drum Clean, Child Safety Lock, Transparent Lid, Built-in Handles, Rollers

Included Components: Drain Hose, Quick Connection Adaptor, Bottom Cover, Screws

Estimated Yearly Energy Cost: \$7 (with natural gas water heater)

WARRANTY AND SUPPORT

The Midea MLTW09M1BWW Portable Washer comes with a **1 Year Warranty** from the date of purchase. For technical support, troubleshooting assistance, or warranty claims, please contact Midea Customer Service. Refer to your purchase documentation for specific contact details or visit the official Midea website.

Online Resources:

- Midea Official Website: www.midea.com
- Midea Store on Amazon: [Midea Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DGGGNW7R>

More documents and user manuals: <https://manuals.plus/>