

[Manuals.plus](#) /

› [FLEXISPOT](#) /

› FLEXISPOT Dual Motor Power Lift Recliner Chair User Manual

FLEXISPOT XL6F-Cloud

FLEXISPOT Dual Motor Power Lift Recliner Chair User Manual

Model: XL6F-Cloud

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your FLEXISPOT Dual Motor Power Lift Recliner Chair. Failure to follow these instructions may result in injury or damage to the product.

- Always ensure the chair is placed on a stable, level surface.
- Keep hands, feet, and other body parts clear of all moving parts, especially during operation of the lift, recline, massage, and heating functions.
- Do not allow children or pets to play on or around the chair, especially when it is in motion.
- Do not exceed the maximum weight capacity of 300 lbs (136 kg).
- Unplug the chair from the power outlet before cleaning or performing any maintenance.
- Do not use the chair if any parts are damaged or missing. Contact customer support immediately.
- Avoid spilling liquids on the chair, especially near electrical components.

PRODUCT OVERVIEW

The FLEXISPOT Dual Motor Power Lift Recliner Chair is designed for enhanced comfort and accessibility, featuring independent control of the backrest and footrest, massage, and heat functions.

Key Features:

- **Dual Motor System:** Allows independent adjustment of the backrest and footrest for personalized comfort.
- **Lay Flat Reclining:** Reclines to a near 180° flat position for deep relaxation or therapeutic rest.
- **Power Lift Assistance:** Gently lifts the chair to assist users in standing up easily.
- **Massage & Heat Therapy:** Features 8 massage points with 3 modes and 3 intensity settings, plus a lumbar heating function.

- **Premium Comfort:** Upholstered in soft Egyptian velvet with thick padding and ergonomic wooden armrests.
- **Convenient Design:** Includes dual side pockets for storage and tool-free assembly.



The FLEXISPOT Dual Motor Power Lift Recliner Chair in blue, showcasing its design and features.

Product Dimension



The recliner chair integrated into a modern living room environment.



Illustration of the 8 massage points and lumbar heating area on the recliner.

SETUP AND ASSEMBLY

Your FLEXISPOT recliner is designed for quick and easy assembly, typically taking about 30 minutes without the need for additional tools.

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the two boxes (Box A and Box B). Ensure all components listed in the packing list are present.
2. **Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the chair base. Push down firmly until both brackets click securely into place simultaneously. This may require two people.
3. **Connect Armrest Cushions:** Zip the armrest cushions onto the main chair frame.
4. **Connect Power Cables:** Locate the power cables extending from the chair and connect them according to the diagram in the included quick start guide. Ensure all connections are secure.

5. **Plug In:** Plug the power adapter into a wall outlet.



OPERATING INSTRUCTIONS

The FLEXISPOT recliner is operated using the wired remote control. Familiarize yourself with the buttons before use.

Using the Remote Control:

- **Recline/Incline:** Use the dedicated buttons to independently adjust the backrest and footrest. Press and hold to achieve desired angles, from upright to a full 180° lay-flat position.
- **Power Lift:** Press the lift button to gently raise the chair, assisting you to a standing position. The chair will tilt forward approximately $30^\circ \pm 5^\circ$.
- **Massage Function:** Activate the massage feature using the designated button. Cycle through 3 modes and 3 intensity settings. The 8 massage points target the back, lumbar, and legs.
- **Heat Function:** Turn on the lumbar heating function with its specific button. There are 3 heating levels available.
- **Massage Timing:** Set the duration for the massage function using the timing button.

 **8** Massage Points

 **3** Massage Modes

 **3** Heating Levels

 **3** Massage Timing



The chair supports various reclining positions for reading, watching TV, and napping (155°-160°).



Demonstration of the power lift assistance, tilting the chair forward to aid standing.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your recliner.

- **Regular Cleaning:** Vacuum the fabric regularly using a soft brush attachment to remove dust and debris.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner designed for upholstery, testing on an inconspicuous area first.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong detergents, as these can damage the fabric and finish.
- **Protect from Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading of the fabric.
- **Check Connections:** Periodically check all electrical connections and ensure they are secure.

Power Lift Assistance



The chair features durable chenille fabric and comfortable sponge filling, requiring gentle care.

TROUBLESHOOTING

If you encounter issues with your recliner, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Chair does not respond to remote control.	Power cord unplugged; loose connection; power outage.	Ensure power cord is securely plugged into both the chair and the wall outlet. Check for power at the outlet. Verify all internal connections are firm.
Motor operates slowly or weakly.	Overload; low voltage; motor wear.	Ensure weight capacity is not exceeded. Check power supply for stable voltage. If issue persists, contact customer support.
Backrest detaches or feels loose.	Backrest not fully engaged during assembly.	Ensure both metal brackets on the backrest are fully and simultaneously inserted into the chair base slots until they click securely.
Massage or heat function not working.	Loose connection; internal fault.	Check all electrical connections. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model Name	XL6F-Cloud
Color	Blue
Product Dimensions	30"D x 36.6"W x 42.5"H
Item Weight	105.8 pounds
Maximum Weight Capacity	300 lbs (136 kg)
Material	Egyptian Velvet (Fabric), Foam (Fill Material), Steel (Frame)
Reclining Positions	Up to 180° Lay Flat
Massage Points	8 (Back, Lumbar, Legs)
Massage Modes/Intensity	3 Modes, 3 Intensity Settings
Heat Function	Lumbar Heating, 3 Levels
UPC	810072868275

WARRANTY INFORMATION

FLEXISPOT stands behind the quality of its products. This recliner comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact FLEXISPOT customer support.

Return Policy:

You are allowed to return or exchange the furniture within 30 days of when you receive it, provided it meets the return policy conditions.

Optional Protection Plans:

Extended protection plans are available for purchase to provide additional coverage beyond the standard warranty period. These plans offer peace of mind for potential future repairs or replacements.

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly plan covering eligible purchases)

CUSTOMER SUPPORT

For any questions, assistance, or troubleshooting not covered in this manual, please contact FLEXISPOT customer support.

Email: contact@flexispot.com

Phone: +1 (855) 585-5618

Online: Visit the official FLEXISPOT store on Amazon or their website for FAQs and additional resources.



Contact details for FLEXISPOT customer support.