

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEXiBOOK](#) /

› [LEXiBOOK Crosslander Phantom RC65 Remote Control Racing Car Instruction Manual](#)

LEXiBOOK RC65

LEXiBOOK Crosslander Phantom RC65 Remote Control Racing Car Instruction Manual

Model: RC65 | Brand: LEXiBOOK

INTRODUCTION

This manual provides essential information for the safe and optimal operation of your LEXiBOOK Crosslander Phantom RC65 Remote Control Racing Car. Please read it thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

WARNING! Not suitable for children under 3 years. Choking Hazard - Small parts. Always supervise children during operation. Do not operate near water or in wet conditions. Keep fingers, hair, and loose clothing away from moving parts. Do not modify the product. Use only specified batteries and charging equipment.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x LEXiBOOK Crosslander Phantom RC65 Remote Control Racing Car
- 1 x Classic Remote Control
- 1 x Gesture Wrist Remote Control
- 1 x Charging Station (USB cable included)
- 2 x Rechargeable Batteries (for car)
- 1 x Water Dropper (for smoke effect)
- 1 x Instruction Manual (this document)



Image: The LEXiBOOK Crosslander Phantom RC65 car, classic remote, gesture remote, and charging station displayed in its retail packaging.

SETUP GUIDE

1. Battery Installation

To install the rechargeable battery in the RC car:

1. Locate the battery compartment on the underside of the car.
2. Use a small screwdriver to open the battery compartment cover.
3. Connect the rechargeable battery to the car's battery connector, ensuring correct polarity.
4. Place the battery inside the compartment and close the cover securely with the screw.

For the remote controls, insert 2 AA batteries (not included) into the classic remote and ensure the gesture remote is charged (it has a built-in rechargeable battery).

Your browser does not support the video tag.

Video: Demonstrates how to install and charge the battery for a remote control car, including connecting the battery and using the charging station.

2. Charging the Car Battery

Your Crosslander Phantom RC65 comes with two rechargeable batteries to extend playtime. To charge a battery:

1. Ensure the car's power switch is in the "OFF" position before charging.
2. Connect the USB cable from the charging station to a USB power source (e.g., computer, USB wall adapter).
3. Open the charging slot on the car (usually located under a small flap on the top).
4. Connect the Type-C end of the charging station cable to the car's charging port.
5. The charging indicator on the station will show charging status. Disconnect once fully charged.

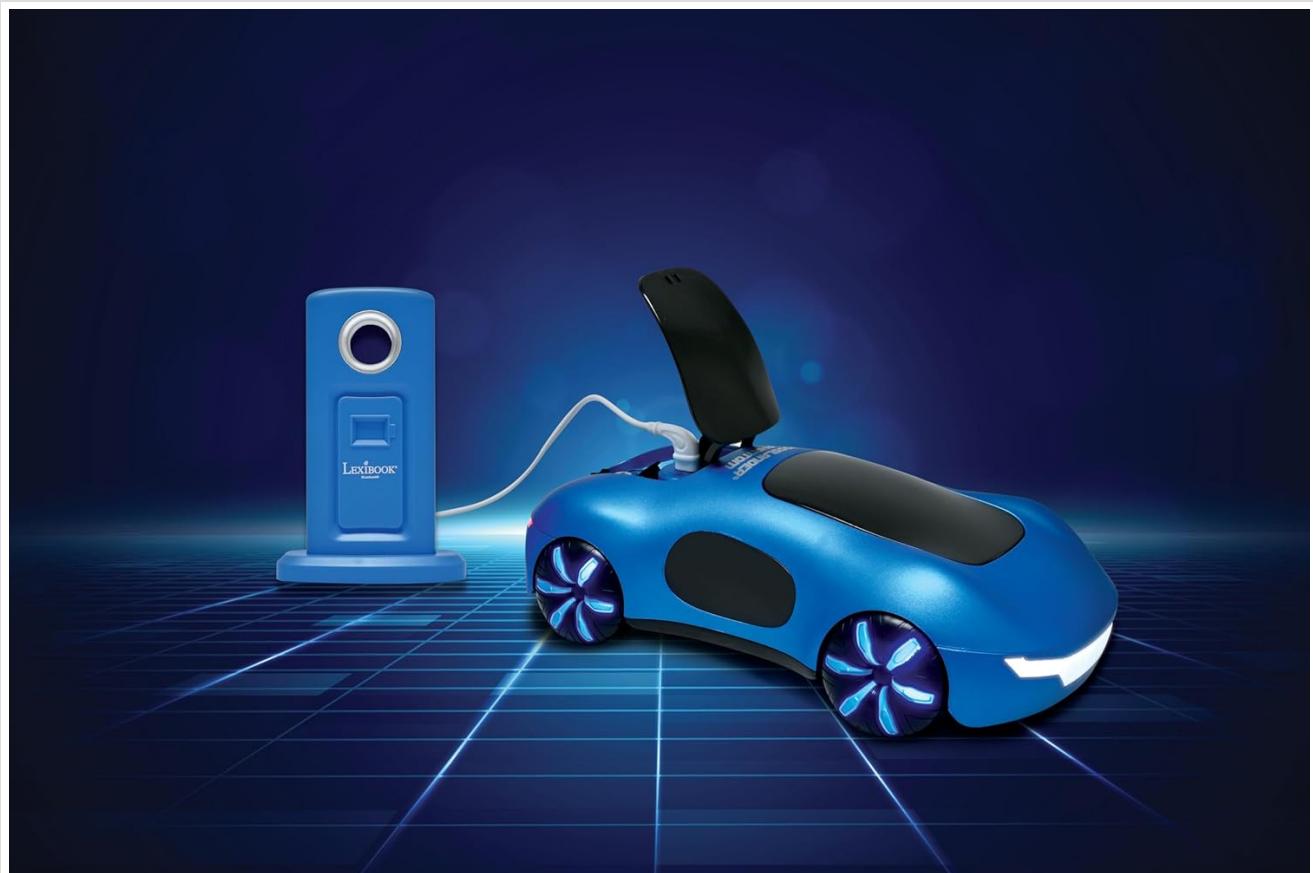


Image: The LEXiBOOK Crosslander Phantom RC65 car connected to its charging station via a USB cable, indicating the charging process.

3. Activating Smoke Jets

The Crosslander Phantom RC65 features exciting smoke jets. To activate them:

1. Locate the water inlet on the car (often near the charging slot).
2. Use the provided water dropper to carefully fill the water tank with clean water. Do not overfill.
3. Once filled, the smoke effect can be activated via the remote control during operation.

Your browser does not support the video tag.

Video: Demonstrates the smoke jet feature of a LEXiBOOK Crosslander RC car, showing water being added and the smoke effect in action.

OPERATING INSTRUCTIONS

Your Crosslander Phantom RC65 offers dual control options for a dynamic racing experience.

1. Powering On

Turn on the power switch on the underside of the car. Then, turn on your preferred remote control (classic or gesture). The car and remote should automatically pair.

2. Classic Remote Control

The classic remote control provides precise button-based navigation:

- **Directional Joysticks:** Control forward, backward, left, and right movements.
- **Drift Mode Button:** Activates specialized drift maneuvers.
- **360° Spin Button:** Initiates a full 360-degree rotation.
- **Smoke Jet Button:** Activates the rear smoke jets (ensure water tank is filled).
- **Light/Sound Buttons:** Control the car's dynamic light and sound effects.



Image: A child using the classic remote control to operate the LEXiBOOK Crosslander Phantom RC65, which is emitting smoke from its rear jets.

3. Gesture Wrist Remote Control

Experience intuitive control with the gesture wrist remote:

- Wear the wrist remote securely on your hand.
- Move your hand forward, backward, left, or right to control the car's direction.
- Specific hand gestures or button presses on the wrist remote may activate special functions like drift, 360° spins, or smoke jets. Refer to the remote's specific instructions for detailed gesture commands.

Your browser does not support the video tag.

Video: Demonstrates the gesture control feature of an RC car, showing how hand movements with a wrist remote translate into car actions, including smoke effects.



Image: A child's hand wearing the gesture wrist remote control, positioned next to the LEXiBOOK Crosslander Phantom RC65 car on an outdoor path.

4. Key Features and Maneuvers

- **High Speed:** Achieves speeds up to 15 km/h.
- **8-Direction Movement:** Navigate in all cardinal and intercardinal directions.
- **Side Drifts & 360° Spins:** Perform dynamic stunts with dedicated controls.
- **4-Wheel Drive:** Provides enhanced traction and control.
- **45° Incline Climbing:** Capable of tackling challenging terrains.
- **Dynamic Lights & Sound:** Enhances the racing experience.

Your browser does not support the video tag.

Video: Official product video for the LEXiBOOK Crosslander Phantom RC65, showcasing its various features including smoke jets, lights, sounds, drift mode, and dual control options.

Your browser does not support the video tag.

Video: Demonstrates the stunt capabilities of a Lexibook Extreme Crosslander RC car, including 360-degree rotations, multi-directional movement, and navigating obstacles.

MAINTENANCE

- **Cleaning:** Wipe the car with a soft, dry cloth after use. Avoid using water or harsh chemicals directly on electronic components.
- **Battery Care:** Always remove batteries from the remote controls when not in use for extended periods. Fully charge the car's rechargeable batteries before storage and periodically during long storage to maintain battery health.
- **Storage:** Store the car and accessories in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Car does not respond to remote.	Low battery in car or remote; not paired; power switch off.	Charge car battery, replace remote batteries, ensure both are powered on and paired.
Smoke jets not working.	Water tank empty; clogged nozzle.	Refill water tank with clean water. Gently clean the nozzle if clogged.
Car gets stuck or moves erratically.	Obstruction; low battery; interference.	Clear path, charge batteries, move to an area with less interference.

SPECIFICATIONS

Brand: LEXiBOOK

Model: RC65

Product Dimensions: 9.6 x 5.1 x 2.8 inches

Item Weight: 1.15 pounds

Manufacturer Recommended Age: 6 years and up

Car Batteries: Rechargeable (2 included)

Classic Remote Batteries: 2 AA batteries (not included)

Gesture Remote Batteries: Rechargeable (built-in)

Max Speed: Up to 15 km/h

Features: Smoke jets, dynamic lights, sound effects, drift mode, 360° spins, 8-direction movement, 4-wheel drive, 45° incline climbing.



Image: The LEXiBOOK Crosslander Phantom RC65 car, highlighting its 1:14 scale, smoke, light, sound, battery, and speed features through surrounding icons.


WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided on the product packaging or visit the official LEXiBOOK website. Keep your proof of purchase for warranty claims.

Manufacturer: Lexibook

Release Date: October 22, 2024

Related Documents - RC65

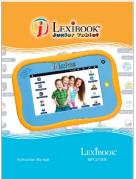	<p>Lexibook Junior Tablet MFC270EN Instruction Manual - Setup, Features, and Safety Guide</p> <p>Comprehensive instruction manual for the Lexibook Junior Tablet (MFC270EN). Learn how to set up, navigate, use apps, connect to Wi-Fi, and follow safety guidelines for this educational and entertaining device.</p>
	<p>Lexibook Crosslander® PRO RC Fire Truck RCP20 Instruction Manual</p> <p>Download the official instruction manual for the Lexibook Crosslander® PRO RC Fire Truck (RCP20). Learn about safe operation, setup, power supply, product features, and maintenance for your remote-controlled toy.</p>
	<p>Lexibook Crosslander Slide RC Car (RC58) User Manual and Instructions</p> <p>Comprehensive user manual for the Lexibook Crosslander Slide RC car (Model RC58). Includes setup, operation, safety guidelines, charging instructions, specifications, and warranty information.</p>

	<p><u>Crosslander PRO RC Dump Truck Instruction Manual</u></p> <p>User manual and safety instructions for the Lexibook Crosslander PRO RC dump truck (Model RCP10). Learn how to operate, charge, and maintain your remote-controlled toy truck.</p>
	<p><u>Lexibook CROSSLANDER TWIST RC Car (RC59D) - User Manual</u></p> <p>Comprehensive user manual for the Lexibook CROSSLANDER TWIST RC car (model RC59D), covering safety instructions, setup, operation, charging, specifications, maintenance, warranty, and environmental disposal.</p>
	<p><u>Lexibook MOTO CROSSLANDER RC Moto User Manual and Instructions</u></p> <p>Comprehensive user manual for the Lexibook MOTO CROSSLANDER RC Moto, covering safety instructions, setup, operation, specifications, and maintenance. Learn how to charge and control your RC motorcycle.</p>