

[Manuals.plus](#) /

› [Dtirszxy](#) /

› Dtirszxy Replacement Remote Control User Manual for Bush Blaupunkt TVs

Dtirszxy Remote Control

Dtirszxy Replacement Remote Control User Manual

For Bush and Blaupunkt TV Models

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Dtirszxy Replacement Remote Control. This remote is designed to function with various Bush and Blaupunkt television models. Please read this manual carefully to ensure proper use and to maximize the lifespan of your remote control.

Note: While this replacement remote is designed for broad compatibility, it may not operate all features present on your original television remote. Main functions are fully supported.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating correct battery placement.

2. Initial Use

This Dtirszy Replacement Remote Control is designed for immediate use with compatible Bush and Blaupunkt TV models. No programming or pairing is required. Simply install the batteries, point the remote towards your television's infrared receiver, and begin operation.

Compatibility: If your specific TV model is not listed in the product description, please verify compatibility before use. Contact customer support if you are unsure.

OPERATING INSTRUCTIONS

To operate your television, point the remote control directly towards the TV's signal receiving window. Ensure there are no obstructions between the remote and the TV.



Image: Front view of the remote control, highlighting various function buttons.

Button Functions Overview

Button	Function
Power (Red)	Turns the TV on or off.
DTV / RADIO / USB / DVD	Selects input sources or modes.
0-9 (Number Buttons)	Direct channel selection.
TV GUIDE	Accesses the Electronic Program Guide.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the television channel.

Button	Function
MUTE	Mutes or unmutes the TV audio.
MENU	Opens the TV's main menu.
EXIT	Exits the current menu or function.
Navigation (Up/Down/Left/Right) & OK	Navigates through menus and confirms selections.
SOURCE	Selects input sources (HDMI, AV, etc.).
INFO	Displays information about the current program or input.
ASPECT	Adjusts the screen aspect ratio.
SLEEP	Sets a sleep timer for the TV.
AUDIO	Selects audio tracks or modes.
SUBTITLE / DISPLAY	Controls subtitles or displays on-screen information.
Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Skip)	Controls playback for connected media devices (e.g., DVD player, USB).
Colored Buttons (Red, Green, Yellow, Blue)	Functions vary depending on the TV model and current menu. Often used for teletext or specific smart TV features.
3D	Activates or deactivates 3D mode on compatible TVs.

MAINTENANCE

Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which can damage the remote control.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly installed with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range (approximately 10 meters).
- **Some functions do not work:**

- As a replacement remote, some advanced or specific functions of your original TV remote may not be supported. This is normal for universal or replacement remotes.
- Verify your TV model's compatibility.

SPECIFICATIONS

Brand	Dtirszyx
Model	Replacement Remote Control
Connectivity Technology	Infrared (IR)
Compatible Devices	Bush and Blaupunkt Televisions (various models including DH-1418, DH-2096, 24/F207F, 24/207FDVD-W, 32/133DVDB, 39/401UHD, 42/333ART3D, 22/207FDVD, 24/207FDVD-S)
Maximum Range	10 Meters (approx. 33 feet)
Batteries Required	2 x AAA (not included)
Color	Black

WARRANTY AND SUPPORT

Warranty Information

This Dtirszyx Replacement Remote Control comes with a**90-day No-Worry Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the main functions of the remote operate as intended. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, compatibility inquiries, or support needs, please contact our customer service team. We aim to provide an 18-hour online reply service.

Contact Email: Refer to your purchase documentation or seller information for the specific contact email address. Before contacting support, please ensure you have checked the troubleshooting section of this manual and confirmed battery installation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DGGMVL39>

More documents and user manuals: <https://manuals.plus/>