

[Manuals.plus](#) /

› [ECD Germany](#) /

› ECD Germany 16L Electronic Security Safe Instruction Manual

ECD Germany 3936a7bc-658f-4204-a37a-6443f0a7ed3e

ECD Germany 16L Electronic Security Safe Instruction Manual

Model: 3936a7bc-658f-4204-a37a-6443f0a7ed3e

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your ECD Germany 16L Electronic Security Safe. Please read this manual thoroughly before using the safe to ensure proper functionality and security. Keep this manual for future reference.



Image: Front view of the ECD Germany 16L Electronic Security Safe, showcasing its compact design and digital keypad.

Safety Information

- Always store the emergency keys in a secure location away from the safe. Do not store them inside the safe.
- Ensure the safe is securely mounted to a wall or floor to prevent unauthorized removal.
- Do not expose the safe to extreme temperatures or humidity.
- Keep the digital keypad clean and dry.
- Replace batteries promptly when the low battery indicator appears to avoid being locked out.
- Do not attempt to force the safe open if the mechanism is jammed. Use the emergency key or consult customer support.

Package Contents

Please check the package contents carefully. If any items are missing or damaged, contact your retailer.

- 1 x ECD Germany 16L Electronic Security Safe
- 2 x Emergency Security Keys
- 4 x AA Batteries (for initial use)
- 4 x Anchor Bolts (for mounting)

- 1 x Removable Intermediate Shelf
- 1 x Protective Felt Mat (pre-installed)
- 1 x Instruction Manual (this document)



Image: Overview of the digital safe, highlighting its sturdy steel construction, included mounting material, security keys, and battery operation.

SETUP

1. Battery Installation


1. Locate the battery compartment on the inside of the safe door.
2. Open the battery cover.
3. Insert 4 x AA batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.

SICHERES, STABILES DESIGN

SAFE, STABLE DESIGN



3 mm stabiler Stahl
3 mm sturdy steel

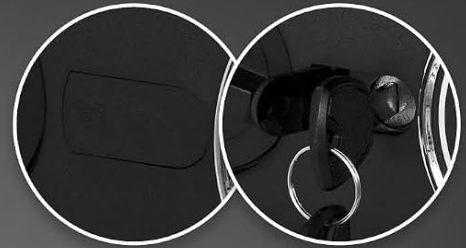

Verdecktes Schlüsselloch
Concealed keyhole



Schützende Filzmatte
Protective felt mat



**4 vorgebohrte Montagelöcher
an Boden und Rückseite**
4 pre-drilled mounting holes
on the base and back



**Batteriefach
für 4x AA-Batterien**
Battery compartment
for 4x AA batteries



2 Verriegelungsbolzen
2 locking bolts

Image: Detailed view of the safe's interior, showing the battery compartment for 4x AA batteries and the two locking bolts.

2. Initial Opening and PIN Code Setup

Upon first use, the safe must be opened with the emergency key to set your personal PIN code.

1. Insert one of the emergency keys into the concealed keyhole, usually located behind a small cover on the keypad panel.
2. Turn the key clockwise to unlock the safe.
3. While the safe door is open, locate the red reset button on the inside of the door, near the hinge.
4. Press the red reset button. You will hear a beep, and the yellow indicator light on the keypad will illuminate.
5. On the keypad, enter your desired 3 to 8 digit PIN code.
6. Press the "A" or "#" button to confirm your new PIN code. You will hear a confirmation beep.
7. Test your new PIN code with the door open before closing it. Enter the PIN, then turn the knob to ensure the bolts retract.

8. Remove the emergency key and store it in a safe place outside the safe.



**Einfacher Zugang über individuellen 3-8 stelligen
PIN-Code oder einen der Sicherheitsschlüssel**
Easy access via individual 3-8 digit PIN code
or one of the security keys

Batteriebetrieben
Battery operated

Image: Visual guide demonstrating how to access the safe using either the digital PIN code or the security key.

3. Mounting the Safe (Optional but Recommended)

The safe features pre-drilled holes on the back and bottom for secure mounting to a wall or floor. This significantly enhances security.

1. Choose a suitable location for mounting, such as inside a closet, cabinet, or directly to a wall stud or concrete floor.
2. Mark the drilling points through the pre-drilled holes on the safe's back or bottom onto the mounting surface.
3. Drill pilot holes into the marked locations using an appropriate drill bit for your surface (wood, concrete, etc.).
4. Align the safe with the drilled holes.
5. Insert the provided anchor bolts through the safe's holes and into the drilled holes in the wall/floor.
6. Tighten the anchor bolts securely until the safe is firmly attached.

ZUSÄTZLICHE MONTAGE FÜR DOPPELTE SICHERHEIT

ADDITIONAL ASSEMBLY FOR DOUBLE SAFETY



Inkl. 4 Bolzenanker
Incl. 4 bolt anchors



Mit Montagematerial und vorgebohrte Löcher
für eine zusätzliche Wand- oder Bodenmontage
With mounting material and pre-drilled holes
for an additional wall or floor mounting

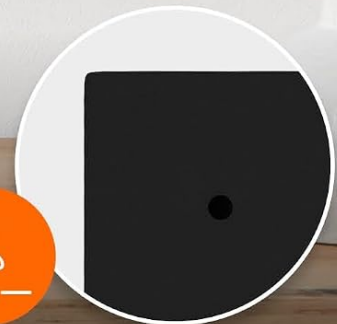


Image: Illustration of the safe with included bolt anchors and a diagram showing the pre-drilled holes for wall or floor mounting.

OPERATING INSTRUCTIONS

1. Opening the Safe with PIN Code

1. Enter your 3 to 8 digit PIN code on the digital keypad.
2. Press the "A" or "#" button.
3. If the code is correct, the green indicator light will illuminate, and you will hear a beep.
4. Within 5 seconds, turn the knob clockwise to open the safe door.
5. If an incorrect code is entered three times consecutively, the keypad will lock for 20 seconds. Further incorrect attempts will increase the lockout time.

2. Opening the Safe with Emergency Key

This method is for emergency access, such as forgotten PIN or dead batteries.

1. Locate the concealed keyhole on the keypad panel.
2. Insert the emergency key and turn it clockwise.
3. While holding the key turned, rotate the knob clockwise to open the safe door.
4. Once open, you can replace batteries or reset the PIN code if needed.

3. Closing and Locking the Safe

1. Close the safe door firmly.
2. Turn the knob counter-clockwise to engage the locking bolts. The safe is now locked.

4. Using the Internal Sensor Light

The safe is equipped with an internal sensor light that illuminates when the door is opened, providing visibility inside.

- The light automatically activates when the door is opened.
- It will turn off automatically after a short period or when the door is closed.

SICHERER PLATZ FÜR WERTSACHEN
SAFE PLACE FOR VALUABLES

1x Mit rausnehmbarem Zwischenboden
With removable intermediate shelf

2 Sicherheitsschlüssel
2 security keys

H 25 x B 35 x T/D 25 cm

Internal dimensions (from inset):
Width: 33 cm
Top section height: 12 cm
Shelf height: 16,5 cm
Bottom section height: 12 cm

Image: The safe's interior, illustrating the removable intermediate shelf and internal dimensions for storing valuables.

MAINTENANCE

1. Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or keypad.

2. Battery Replacement

When the low battery indicator (red light) illuminates on the keypad, it is time to replace the batteries. Follow the battery installation steps in the "Setup" section. Always use 4 new AA alkaline batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with PIN code.	Incorrect PIN entered; Dead batteries; Keypad locked due to multiple incorrect attempts.	Re-enter correct PIN; Replace batteries; Wait for lockout period to expire or use emergency key.
Keypad does not respond.	Dead batteries; Loose battery connection.	Replace batteries; Ensure batteries are correctly inserted.
Safe door does not close properly.	Obstruction in the door frame; Locking bolts not fully retracted.	Check for obstructions; Ensure the knob is fully turned counter-clockwise to extend bolts.
Cannot set new PIN code.	Reset button not pressed; PIN not confirmed with "A" or "#" button.	Ensure reset button is pressed while door is open; Confirm PIN with "A" or "#" button.

SPECIFICATIONS

Feature	Detail
Model Number	3936a7bc-658f-4204-a37a-6443f0a7ed3e
Capacity	16 Liters
External Dimensions (L x W x H)	35 x 25 x 25 cm (13.8 x 9.8 x 9.8 inches)
Weight	7.5 kg (16.5 lbs)
Material	Powder-coated Steel
Locking Mechanism	Electronic PIN Code (3-8 digits) and Emergency Key
Power Source	4 x AA Batteries
Mounting	Pre-drilled holes for wall or floor mounting

Feature	Detail
Special Features	2 solid chrome steel locking bolts, Removable intermediate shelf, Protective felt mat, Internal sensor light

DIGITALER TRESOR

DIGITAL SAFE

16L

H 25 x B 35 x T/D 25 cm



Stabiler Stahl

Sturdy steel



Inkl. Montagematerial

Incl. mounting material



2 Sicherheitsschlüssel

2 security keys



Batteriebetrieben

Battery operated

Image: Visual representation of the safe's external dimensions and key features.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the purchase documentation or contact ECD Germany directly through their official website or the retailer where the product was purchased. Please have your model number (3936a7bc-658f-4204-a37a-6443f0a7ed3e) and proof of purchase ready when contacting support. You can visit the ECD Germany store on Amazon for more information:[ECD Germany Store](#)

© 2025 ECD Germany. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question