

- Manuals.plus /
- › Ohniyou /
 - › Ohniyou 48" Flush Mount Ceiling Fan User Manual

Ohniyou 097X

Ohniyou 48" Flush Mount Ceiling Fan User Manual

Model: 097X

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Ohniyou 48" Flush Mount Ceiling Fan with Lights. Designed for quiet operation and customizable lighting, this fan enhances comfort in various indoor spaces. Please read this manual thoroughly before installation and use to ensure safe and efficient operation.

PACKAGE CONTENTS

Before beginning installation, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not attempt to install the fan and contact customer support.



Image: All components included in the Ohniyou 48" Flush Mount Ceiling Fan package, including fan blades, motor, mounting plate, remote control, and light kit.

- Fan Blades (x5)
- Motor Assembly
- Mounting Plate
- Lamp Tray (Light Board)
- Blade Holders (x5)
- Receiver
- Remote Control and Bracket
- Instruction Manual
- Screw Pack
- Accessory Bag for Blade
- Accessory Bag for Hanger Bracket
- Power Wire
- Wiring Cap
- Fan Blades Balance Fixture

INSTALLATION GUIDE

Follow these steps carefully for proper installation. Professional installation is recommended if you are unsure about any steps.

Step 1: Prepare Fan Blades

Choose your preferred blade color (white or vintage white). Attach each fan blade to its corresponding blade holder using the provided screws. Ensure screws are tightened securely.

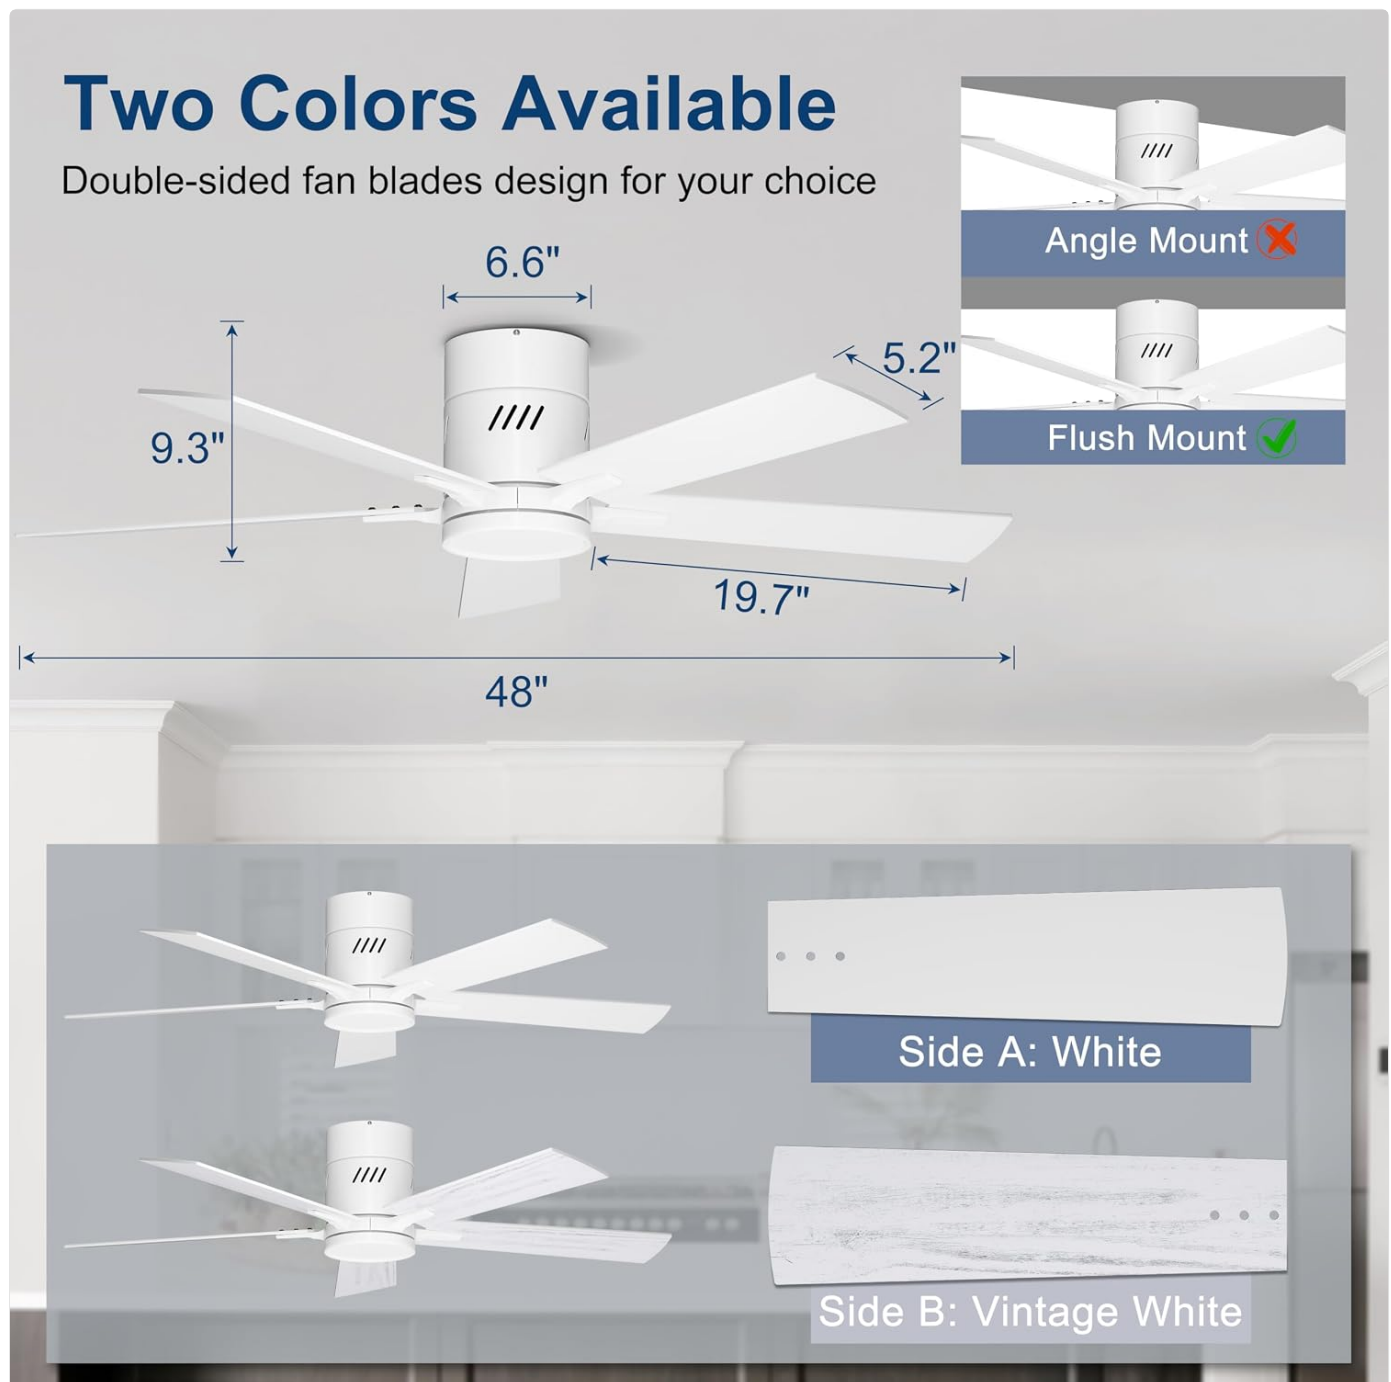


Image: Illustration showing the two available blade colors (white and vintage white) and key dimensions of the fan.

Step 2: Assemble Motor and Light Kit

Loosen two screws on the motor assembly and rotate to remove the mounting plate. Insert the motor wires into the decorative cover. Secure the decorative cover using screws Ref.# 16 (outer holes) and Ref.# 17 (inner holes). Turn over

the entire motor assembly and remove the rubber stoppers. Install the 5 fan blades to the motor. Connect the light board to the motor and snap it into place, then turn clockwise to secure.

Step 3: Ceiling Installation

Install the mounting plate securely to your ceiling. Ensure it is firmly attached to a ceiling joist or a suitable electrical box designed for fan support. Connect the power wire from the ceiling to the receiver. Then, connect the motor wire and LED wire from the fan to the receiver. Align the card slot and rotate the fan counter-clockwise to hang it and fix it in place. Tighten all screws to secure the fan to the mounting plate.

Installation Video

For a visual guide, please refer to the official installation video:

Your browser does not support the video tag.

Video: Detailed installation guide for the Ohniyou 48 inch ceiling fan, demonstrating each step from assembly to final ceiling mounting.

OPERATING INSTRUCTIONS

Your Ohniyou ceiling fan comes with a multifunctional remote control for convenient operation.

Remote Control Functions



Image: Diagram of the remote control showing buttons for fan speed, light control, timer, natural breeze mode, mute mode, and forward/reverse function.

- **Power On/Off:** Turn the fan and light on or off.
- **Fan Speed Control:** Adjust between 6 wind speeds.
 - Level 1-2: Low soft wind, ideal for sleeping.
 - Level 3-4: Medium comfortable wind, suitable for general use or parties.
 - Level 5-6: High cooling wind, for strong airflow during active times.
- **Natural Breeze Mode:** Simulates natural wind by varying fan speeds.
- **Light Control:**
 - **Dimmable:** Adjust brightness from 100% to 10%.
 - **Color Temperature:** Switch between 3000K (warm light), 4500K (neutral light), and 6000K (white light).
- **Timer Setting:** Set the fan to turn off automatically after 1, 2, 4, or 8 hours.

- **Forward/Reverse Function:**
 - **Forward (Summer Mode):** Counter-clockwise rotation creates a downward airflow, providing a cooling effect.
 - **Reverse (Winter Mode):** Clockwise rotation creates an upward airflow, circulating warm air trapped near the ceiling.
- **Mute Mode:** Activates an ultra-quiet operation mode, ideal for sleeping or quiet environments.

Note: The remote requires 2 AAA batteries (not included).

SPECIFICATIONS

Feature	Detail
Brand	Ohniyou
Model Name	097X-White
Color	Flush White
Electric Fan Design	Ceiling Fan
Power Source	DC Motor
Style	Flush Mount
Product Dimensions	48"D x 20"W x 48"H
Room Type	Bedroom, Dining Room, Home Office, Living Room, Study Room
Special Features	3 Color temperature, LED Light, Quiet Operation, Remote Controlled, Timer
Noise Level	35 dB
Wattage	26 watts
Air Flow Capacity	3586 Cubic Feet Per Minute
Blade Length	48 Inches
Speed	198 RPM
Voltage	120 Volts
Item Weight	7.04 pounds (3.2 Kilograms)
Blade Material	Engineered Wood

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing regularly with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Tighten Screws:** Periodically check all screws on the fan blades, motor housing, and mounting bracket to ensure they are tight. Loose screws can cause wobbling and noise.
- **Lubrication:** The DC motor is permanently lubricated and does not require additional oiling.
- **Light Kit:** If the LED light needs replacement, contact customer support for assistance. Do not attempt to replace the LED module yourself.

TROUBLESHOOTING

If you experience issues with your ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired.	Check circuit breaker/fuse. Ensure all wire connections are secure. Replace remote batteries and re-pair the remote if necessary.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws. Use the included balance kit to balance the blades. Ensure the mounting bracket is securely fastened to the ceiling.
Light does not work	Loose wire connection to light kit; Faulty LED module.	Check the connection between the motor and the light board. If the LED module is faulty, contact customer support.
Noisy operation	Loose screws; Fan not properly installed; Internal motor issue.	Check and tighten all screws. Ensure the fan is installed correctly and securely. If noise persists, contact customer support.

WARRANTY AND SUPPORT

Ohniyou products are manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included with your product or visit the official Ohniyou website. You may also contact our customer service team for assistance with any questions or concerns.

Customer Service: For after-sales and installation questions, our 7 Days 24H Customer Service Team is available to assist you.



7 Days 24H Customer Service Team

We will answer your after-sales and installation questions as soon as possible!

Image: Ohniyou customer service representatives ready to assist with product inquiries.

For additional resources, you can visit the [Ohniyou Store on Amazon](#).

© 2025 Ohniyou. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DGGTBJC6>

More documents and user manuals: <https://manuals.plus/>