

[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI 60 Inch Large Christmas Wreath Instruction Manual

VINGLI G61000057

VINGLI 60 Inch Large Christmas Wreath Instruction Manual

Model: G61000057

1. PRODUCT OVERVIEW

The VINGLI 60 Inch Large Christmas Wreath is designed for outdoor and indoor festive decoration. It features a pre-decorated design with a large red bow and integrated LED lights, controllable via a remote. The wreath is constructed with durable materials for extended use.



Image 1.1: The VINGLI 60 Inch Large Christmas Wreath, showcasing its illuminated design and the included remote control for operation.



Image 1.2: The large Christmas wreath displayed on the exterior of a house, illustrating its suitability for both indoor and outdoor decorative applications.

2. SETUP AND ASSEMBLY

Follow these steps to assemble and set up your VINGLI Christmas Wreath:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present: wreath sections, bow sections, power adapter, and remote control.
2. **Assemble Wreath Sections:** The wreath consists of multiple sections. Align and attach these sections together. Ensure they are securely fastened.
3. **Attach Bow:** The large red bow is pre-decorated. Attach the bow sections to the assembled wreath.
4. **Connect Power:** Plug the power adapter into the wreath's power input, then connect the adapter to a suitable outdoor-rated power outlet.
5. **Placement:** Position the wreath in your desired location, such as a window, garage, balcony, or front door. Ensure the power cord is safely routed and secured.

EASY ASSEMBLY



• STEP A

Attach the 4 parts of the bow and wreath separately, corresponding the same letters together

• STEP B

Putting together wreath and bows

• STEP C

Plug in and turn on



Image 2.1: Visual guide detailing the three-step assembly process: attaching bow and wreath parts, combining them, and finally plugging in the unit.

3. OPERATING INSTRUCTIONS

The VINGLI Christmas Wreath is operated using the included remote control.

3.1 Remote Control Functions

- **ON/OFF Button:** Press to turn the lights on or off.
- **Color Selection:** Use the color buttons to select a specific light color (e.g., red, green, blue, white, multicolor).
- **Dimming:** Adjust the brightness of the lights using the DIM buttons.
- **Timer Function:** Activate the timer mode. The wreath will automatically turn on for 6 hours and then turn off for 18 hours, repeating this cycle daily.
- **Mode Selection:** Cycle through various lighting effects and patterns.



Image 3.1: The remote control unit, highlighting the ON/OFF, dimming, and timer buttons for managing the wreath's lighting.

4. MAINTENANCE AND STORAGE

4.1 Materials and Durability

The wreath is constructed from a sturdy iron frame and thick lace fabric, designed for weather resistance and long-term use. The lace fabric ensures an even distribution of light and color.

UPGRADED MATERIALS

The lace fabric material used allows for a more even distribution of color.



Lace fabric



Weather Resistant



Image 4.1: A detailed view of the lace fabric material, emphasizing its texture and weather-resistant properties.

4.2 Storage

For convenient storage, the wreath can be disassembled and stacked. Store all components in a single box in a dry, cool place to protect them until the next use.

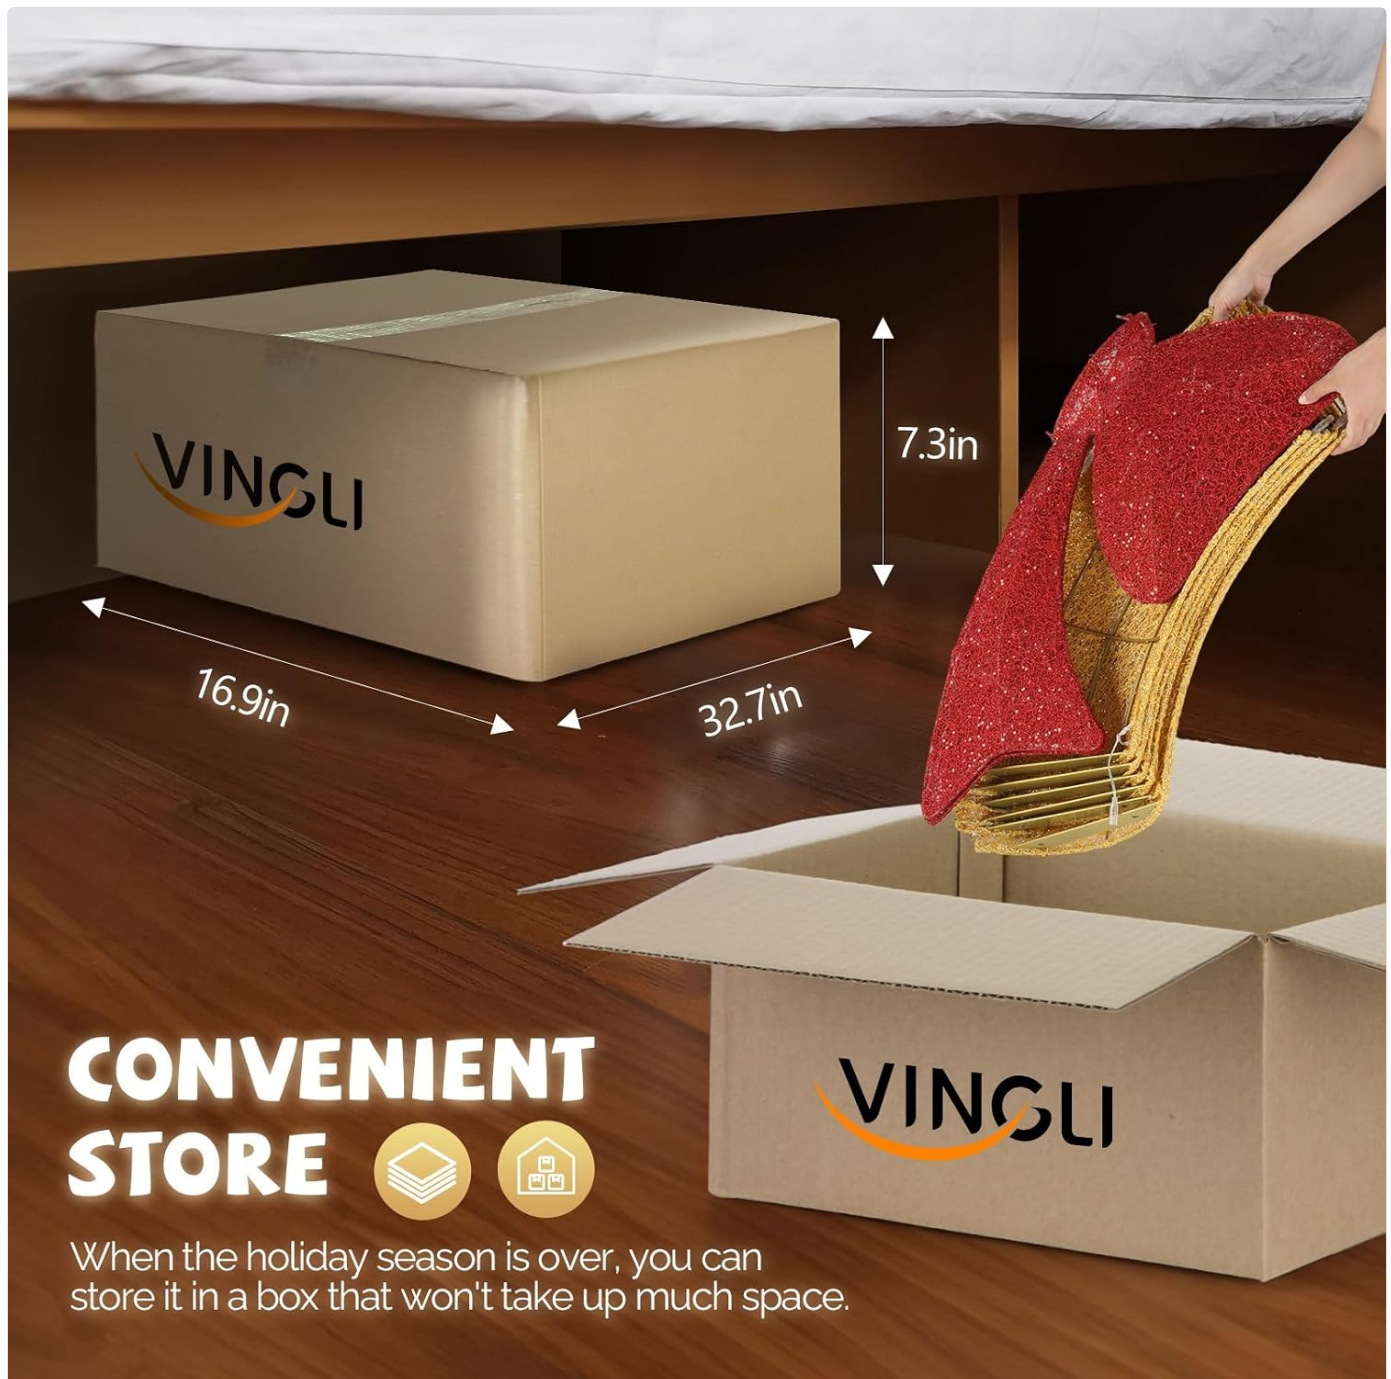


Image 4.2: The wreath components neatly packed into a storage box, demonstrating its space-saving design for off-season storage.

5. TROUBLESHOOTING

• Lights Not Turning On:

- Ensure the power adapter is securely plugged into both the wreath and a functional power outlet.
- Check if the power outlet is receiving power.

• Remote Control Not Responding:

- Verify that the remote control's batteries are correctly inserted and have sufficient charge. Replace batteries if necessary.
- Ensure there is a clear line of sight between the remote control and the wreath's receiver.
- Confirm the wreath is powered on.

• Inconsistent Lighting:

- Check all connections within the wreath sections to ensure they are firm.
- Inspect for any visible damage to the wiring or LED bulbs.

6. SPECIFICATIONS

Feature	Detail
Brand	VINGLI
Model Number	G61000057
Color	Gold
Material	Iron, Lace Fabric
Product Dimensions	3.5"D x 59"W x 59"H (Approx. 60 Inch Diameter)
Mounting Type	Window Mount, Garage Mount
Indoor/Outdoor Usage	Outdoor
Special Feature	Lit, Remote Control, Timer Function

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact VINGLI customer service directly. You may also visit the official VINGLI store for additional resources and contact details.

VINGLI Store: [Visit the VINGLI Store on Amazon](#)

© 2024 VINGLI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question