

Tefal KI6058

Tefal KI6058 Glass Kettle User Manual

Model: KI6058

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Tefal KI6058 Glass Kettle. Please read these instructions carefully before first use and keep them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Tefal KI6058 Glass Kettle features a transparent design with clear measurement markings for precise filling. It offers a generous 1.7-liter capacity, a precise pouring spout, and an illuminated indicator during operation.



Figure 1: Front view of the Tefal KI6058 Glass Kettle. The kettle features a clear glass body, a black handle, and a stainless steel base with the Tefal logo.



Figure 2: Close-up of the kettle showing water level markings, including a 1-cup indicator for precise filling.

PRECYZYJNA WYLEWKA



Figure 3: The kettle displayed in a kitchen setting, highlighting its 1.7-liter capacity, suitable for multiple servings.

SETUP

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future transport or storage if needed.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the maximum level. Boil the water, then discard it. Repeat this process twice to remove any manufacturing residues.
3. **Placement:** Place the power base on a stable, flat, heat-resistant surface, away from the edge of the countertop. Ensure the power cord does not hang over the edge.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your kettle (230V).

OPERATING INSTRUCTIONS

1. **Filling the Kettle:** Open the lid and fill the kettle with the desired amount of fresh water. Do not fill below the minimum mark or above the maximum (1.7L) mark. Close the lid securely.
2. **Placing on Base:** Place the kettle firmly onto its power base.
3. **Starting the Boil:** Press the ON/OFF switch. The kettle will illuminate, indicating that it is heating the water.
4. **Boiling Process:** The water will heat rapidly. Once the water reaches boiling point, the kettle will automatically switch off, and the illumination will turn off.
5. **Pouring:** Carefully lift the kettle from its base and pour the hot water using the precise spout. Exercise caution as the kettle and water will be hot.
6. **Re-boiling:** If you need to re-boil water, wait a few moments for the automatic switch to reset before pressing the ON/OFF switch again.



Figure 4: The kettle during operation, showing the blue illumination at the base, indicating that water is being heated.

PRZEZROCZYSTY SZKLANY CZAJNIK



Figure 5: The kettle pouring hot water into a cup, demonstrating its precise spout for spill-free serving.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your kettle.

- **Exterior Cleaning:** Unplug the kettle and allow it to cool completely. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior Cleaning:** The wide opening of the kettle facilitates easy access for cleaning the interior. Use a soft sponge and mild detergent if necessary. Rinse thoroughly.
- **Descaling:** Over time, mineral deposits (limescale) may build up, especially in hard water areas. Descale your kettle regularly (e.g., monthly or every two months).
 - a. Fill the kettle with a mixture of water and white vinegar (e.g., 1 part vinegar to 2 parts water) or a commercial descaling solution according to product instructions.
 - b. Boil the mixture.
 - c. Let it stand for 15-30 minutes (or as recommended by the descaling solution).

d. Discard the mixture and rinse the kettle thoroughly several times with fresh water.

- **Filter Cleaning:** The kettle features a removable anti-scale filter. Remove the filter and rinse it under running water. If heavily scaled, soak it in a descaling solution.



Figure 6: The kettle with its lid open, demonstrating the wide opening for easy access during cleaning.



Figure 7: A hand cleaning the interior of the kettle with a sponge, illustrating the ease of maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; power switch not pressed; no power at outlet.	Ensure kettle is plugged in and switch is pressed. Check power outlet.
Kettle switches off before boiling.	Excessive limescale buildup.	Descale the kettle as per maintenance instructions.
Water tastes metallic or has particles.	New kettle residue; limescale buildup.	Perform initial cleaning steps again. Descale the kettle.

Problem	Possible Cause	Solution
Lid does not close properly.	Obstruction or damage.	Check for any obstructions. If damaged, contact customer support.

SPECIFICATIONS

Model: KI6058
Capacity: 1.7 Liters
Power: 1850 Watts
Voltage: 230 Volts
Material: Glass
Dimensions (L x W x H): 22.4 x 15 x 23.8 cm
Weight: 1.2 Kilograms
Special Feature: Illuminated indicator

WARRANTY AND SUPPORT

Tefal is committed to product quality and durability. This product is designed to be repairable for 15 years. Spare parts are available at 6200 repair centers worldwide.
For further assistance or to locate a repair center, please visit the official Tefal website or contact their customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question