

[Manuals.plus](#) /

> [MEDION](#) /

> MEDION Mini Dishwasher DWT20 (MD37763) Instruction Manual

MEDION DWT20 (MD37763)

MEDION Mini Dishwasher DWT20 (MD37763)

Instruction Manual

[Overview](#) [Setup](#) [Operation](#) [Introduction](#) [Safety Information](#) [Product](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your MEDION Mini Dishwasher DWT20 (MD37763). Please read this manual thoroughly before operating the appliance and keep it for future reference. Proper use and maintenance will ensure optimal performance and longevity of your dishwasher.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the dishwasher is placed on a stable, level surface.
- Do not operate the dishwasher if the power cord is damaged.
- Keep children and pets away from the appliance during operation.
- Only use detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after a wash cycle.
- Always unplug the dishwasher before cleaning or performing maintenance.
- Ensure proper ventilation around the appliance.

3. PRODUCT OVERVIEW

The MEDION Mini Dishwasher DWT20 (MD37763) is a compact and versatile appliance designed for small households or mobile use. It offers two place settings and can operate with or without a fixed water connection.

3.1 Key Features

- **Flexible Water Supply:** Operates with or without a fixed water connection, allowing for manual water filling.
- **6 Cleaning Programs:** Quick, Eco, Glass, 1 Hour, Express, and Baby-Care for diverse cleaning needs.

- **Intuitive Control:** Features an LED display and a convenient touch control panel.
- **Low Water Consumption:** Uses only 5 liters of water per Eco cycle.
- **Compact Design:** Ideal for small kitchens, apartments, or recreational vehicles.

3.2 Components

Familiarize yourself with the main parts of your dishwasher:

- Dishwasher unit with door
- Upper and lower spray arms
- Cutlery basket
- Dish racks
- Detergent dispenser
- Rinse aid dispenser
- Salt container
- Filter assembly
- Water inlet (for fixed connection)
- Water outlet hose
- Water tank inlet (for manual filling)



Figure 3.2.1: Front view of the MEDION Mini Dishwasher DWT20, showcasing its compact design and the interior with dishes loaded. The control panel is visible at the bottom.

4. SETUP AND INSTALLATION

Before first use, ensure the dishwasher is correctly set up.

4.1 Placement

Place the dishwasher on a flat, stable surface. Ensure there is sufficient space around the unit for ventilation and access to connections.

4.2 Water Connection Options

The DWT20 offers two methods for water supply:

- **Fixed Water Connection:** Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain.

Ensure all connections are secure to prevent leaks.

- **Manual Water Filling:** If a fixed connection is not available, you can manually fill the internal water tank. Open the water tank inlet on top of the dishwasher and pour in approximately 5.4 liters of water until the indicator signals it is full. It is recommended to use warm water for manual filling to reduce the appliance's heating time and energy consumption.



Flexibel und praktisch

Mini-Geschirrspüler für jeden Bedarf,
mit oder ohne Wasseranschluss nutzbar

Figure 4.2.1: Illustrates the process of manually filling the dishwasher's water tank. Water is being poured into the designated inlet on the top of the appliance.

4.3 Initial Use Preparation

1. **Add Dishwasher Salt:** Unscrew the cap of the salt container (usually located at the bottom of the wash tub) and fill it with dishwasher salt. This helps soften hard water and prevent limescale buildup.
2. **Fill Rinse Aid Dispenser:** Open the rinse aid dispenser and fill it with rinse aid. Rinse aid helps with drying and prevents water spots.
3. **Load Detergent:** Place a dishwasher tablet or appropriate amount of powder/gel detergent into the detergent dispenser.

5. OPERATION

Operating your MEDION Mini Dishwasher is straightforward with its touch control panel.

5.1 Loading Dishes

Arrange dishes in the racks, ensuring they do not block the spray arms. For optimal cleaning, avoid overcrowding. The dishwasher is designed for 2 place settings. Plates up to 25 cm in diameter can be accommodated.

5.2 Program Selection

The dishwasher offers 6 cleaning programs:

- **Quick:** For lightly soiled dishes that need a fast wash.
- **Eco:** Energy-efficient program for normally soiled dishes.
- **Glass:** Gentle program for delicate glassware.
- **1 Hour:** Standard program for daily use.
- **Express:** For quick cleaning of moderately soiled items.
- **Baby-Care:** High-temperature wash for sterilizing baby bottles and accessories.

To select a program, press the 'Program' button on the touch panel until the desired program indicator lights up.

Einfache Bedienung

Mit LED-Display und Touch-Bedienfeld



Figure 5.2.1: A hand interacting with the touch-sensitive control panel of the dishwasher, demonstrating the ease of program selection and operation.

5.3 Starting a Cycle

1. Close the dishwasher door securely.
2. Press the 'Power' button to turn on the appliance.
3. Select your desired program using the 'Program' button.
4. Press the 'Start/Pause' button to begin the wash cycle.
5. **Start Time Pre-selection:** If available, use the delay start function to postpone the start of the cycle by a few hours. Consult the on-screen display for options.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the efficiency and longevity of your dishwasher.

6.1 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.2 Interior Cleaning

- **Filter System:** Regularly check and clean the filter assembly at the bottom of the wash tub. Remove food particles and rinse under running water.
- **Spray Arms:** Ensure the holes in the spray arms are not clogged. If necessary, remove the spray arms and clean them.
- **Interior Walls:** Periodically wipe down the interior walls with a damp cloth.

6.3 Descaling

Depending on your water hardness, limescale may build up over time. Use a dishwasher cleaner or descaling agent specifically designed for dishwashers every few months to remove mineral deposits.

7. TROUBLESHOOTING

Before contacting customer support, try these common solutions for minor issues:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Dishes are not clean	Improper loading; Insufficient detergent; Clogged spray arms; Filter dirty.	Rearrange dishes; Add more detergent; Clean spray arm nozzles; Clean filter.
Water spots on dishes	Rinse aid dispenser empty; Water hardness setting incorrect.	Refill rinse aid; Adjust water hardness setting (refer to full manual).
Dishwasher is noisy	Dishes rattling; Foreign object in pump.	Ensure dishes are secure; Check for and remove any foreign objects.
Water not draining	Drain hose kinked or blocked; Filter clogged.	Check and clear drain hose; Clean filter.

8. TECHNICAL SPECIFICATIONS

Detailed specifications for the MEDION Mini Dishwasher DWT20 (MD37763):


Feature	Specification
Model Number	MD 37763
Dimensions (D x W x H)	44 x 42 x 43.5 cm
Weight	13.5 Kilograms
Place Settings	2
Cleaning Programs	6 (Quick, Eco, Glass, 1 Hour, Express, Baby-Care)
Water Consumption (Eco)	5.0 Liters

Feature	Specification
Noise Level	50 dB
Energy Efficiency Class	D
Installation Type	Freestanding
Manufacturer	MEDION
First Available	September 9, 2024

Für 2 Maßgedecke



 Figure 8.1: Visual representation of the dishwasher's dimensions and its capacity for various dishware items.



Medion

MD 37763




31 kWh / 



2 x



5,0 L

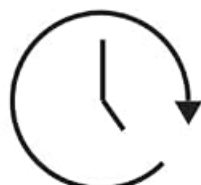

2:45

ABC D

2019/2017

Figure 8.2: The official EU Energy Label for the MEDION MD 37763, detailing its energy efficiency class, consumption, capacity, water usage, noise level, and program duration. For more details, visit the [EPREL database](#).

9. WARRANTY AND SUPPORT

Your MEDION Mini Dishwasher DWT20 (MD37763) comes with a manufacturer's warranty to ensure your peace of mind.

9.1 Manufacturer's Warranty

The manufacturer provides a **24-month warranty** from the date of purchase. Please retain your proof of purchase for any warranty claims.

9.2 Customer Support

For technical assistance, warranty claims, or general inquiries, please contact MEDION customer service:

- **Supplier:** Medion Service
- **Address:** Am Zehnthof 77, 45307 Essen, Germany
- **Website:** www.medion.com
- **Email:** connect@medion.com
- **Phone:** 020122099577
- **EPREL Registration Number:** 1993025 ([Link to EPREL database](#))

© 2024 MEDION. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DGGVVQYD>

More documents and user manuals: <https://manuals.plus/>