

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Candy](#) /
- › [Candy Rapidò RPW4856BWMUCS Washer Dryer User Manual](#)

Candy RPW4856BWMUC-S

Candy Rapidò RPW4856BWMUCS Washer Dryer User Manual

Model: RPW4856BWMUC-S

1. INTRODUCTION

Thank you for choosing the Candy Rapidò RPW4856BWMUCS Washer Dryer. This appliance is designed to save you time while delivering excellent washing and drying results. Featuring an innovative Speed-Drive motor and Quick&Clean system, it allows for full load washing in just 39 minutes. It also includes the Steam Hygiene Plus program, tested and approved by the British Allergy Foundation, ensuring deep cleaning and allergen removal. This washer dryer is rated Class A for washing cycles, significantly reducing energy consumption compared to Class G models, contributing to energy and cost savings while respecting the environment.

For optimal performance and longevity of your appliance, please read this manual carefully before installation and use. Keep it for future reference.

2. SETUP AND INSTALLATION

2.1 Unpacking and Placement

Carefully remove all packaging materials. Ensure the appliance is placed on a stable, level surface. Adjust the feet to ensure the machine is perfectly balanced to prevent vibrations during operation.



Figure 1: Front view of the Candy Rapidò RPW4856BWMUCS washer dryer. Note the large, ergonomic blue porthole designed for easier loading and unloading of laundry.

2.2 Water and Drain Connections

Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks. Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fixed and at the correct height as per local regulations.



Figure 2: Rear view of the washer dryer, illustrating the connections for water supply and drainage. Ensure these are correctly installed before first use.

2.3 Electrical Connection

Plug the power cable into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance's rating plate. Do not use extension cords or adapters.

3. OPERATING INSTRUCTIONS

3.1 Loading Laundry and Detergent

Open the porthole and load your laundry, ensuring not to overload the drum. The ergonomic design of the porthole makes loading and unloading easier. Add detergent and fabric softener to the appropriate compartments in the dual-compartment dispenser.



Figure 3: The stainless steel drum interior, designed for efficient washing and drying. Load laundry evenly to ensure best results.

3.2 Program Selection

Turn the program selection knob to choose the desired washing or drying cycle. The control panel offers a variety of programs, including 9 rapid wash programs (14', 29', 30', 39', 44', 59' minutes) and 3 drying cycles.



Figure 4: The control knob and display panel. Use the knob to select programs and the buttons for additional options like temperature and spin speed.

3.3 Special Features and Programs

- **Speed-Drive Inverter Motor:** This brushless motor enhances cleaning performance by up to 50% compared to traditional motors, while reducing energy consumption and vibrations.
- **Quick&Clean Technology:** Mixes water and detergent into a highly concentrated solution, sprayed into the drum at high pressure. This boosts detergent power, allowing effective washing at lower temperatures (e.g., 20°C with 40°C performance).
- **Steam Hygiene Plus:** A program designed to reduce creases, simplify ironing, and eliminate odors and allergens through deep cleaning. It reaches and maintains 60°C with steam and powerful rinsing.
- **Easy Iron Plus:** An innovative program with 3 intensity levels that uses steam to relax fabric fibers, reducing creases and speeding up ironing time.
- **hOn App Compatibility:** Connect your washer dryer to the hOn app for access to over 60 washing programs, personalized advice on laundry care and detergent dosage, and real-time monitoring of efficiency and consumption.
- **Snap&Wash Function:** Within the hOn app, simply take a photo of your laundry load, and the washer dryer will suggest the most suitable rapid program with the correct temperature and spin speed.

3.4 Starting a Cycle

After selecting your program and any additional options, press the Start button to begin the cycle.

4. MAINTENANCE

4.1 Cleaning the Detergent Dispenser

Regularly clean the detergent dispenser drawer to prevent residue buildup. Remove the drawer and rinse it under running water. Use a brush to clean any stubborn deposits.

4.2 Cleaning the Drum

Periodically run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) to clean the drum and remove any odors or residue.

4.3 Filter Cleaning

Check and clean the pump filter regularly, especially if you notice issues with draining. Refer to the appliance diagram for the filter's location, typically at the bottom front of the machine.

4.4 hOn App for Maintenance

The hOn app provides real-time statistics and maintenance status, helping you optimize usage and prevent malfunctions, ensuring optimal performance for years to come.

5. TROUBLESHOOTING

If you encounter any issues with your washer dryer, please consult the following common troubleshooting tips before contacting customer service.

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed properly; Program not selected.	Check power plug and fuse; Ensure door is firmly closed; Select a program and press Start.
Water not filling	Water tap closed; Inlet hose kinked or blocked; Water pressure too low.	Open water tap; Straighten hose or clean filter; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Pump filter blocked.	Straighten hose or clear blockage; Clean the pump filter.
Excessive vibration/noise	Appliance not level; Transit bolts not removed; Overloaded or unbalanced load.	Adjust leveling feet; Remove all transit bolts (if applicable); Redistribute laundry or reduce load size.
Drying performance poor	Overloaded dryer; Lint filter blocked; Incorrect program selected.	Reduce load size; Clean the lint filter; Select appropriate drying program for fabric type.

6. SPECIFICATIONS

Feature	Detail
Brand	Candy

Feature	Detail
Model Number	RPW4856BWMUC-S
Washing Capacity	8 Kilograms
Drying Capacity	5 Kilograms
Maximum Spin Speed	1400 RPM
Energy Class (Washing)	A
Product Dimensions (DxWxH)	53 x 60 x 85 cm
Drum Material	Stainless Steel
Control Type	Knob, Button
Loading Type	Front-loading
Detergent Dispenser Options	Dual-compartment with auto-dosing
Number of Washing Cycles	9
Number of Drying Cycles	3
Special Features	Steam Hygiene Plus, Quick&Clean, Speed-Drive Inverter, Snap&Wash, Easy Iron Plus, hOn App Compatibility
Power in Watts	2500 watts
Included Components	Power cable

7. WARRANTY INFORMATION

This product comes with a manufacturer's warranty. For detailed information regarding the warranty period, terms, and conditions, please refer to the warranty card included with your appliance. Alternatively, you can visit the official Candy website or contact customer support for assistance.

8. CUSTOMER SUPPORT

Should you require further assistance, have questions about your appliance, or need technical support, please contact Candy customer service. You can find contact details on the official Candy website or in the documentation provided with your product.

- **Online Support:** Visit the official Candy website for FAQs, troubleshooting guides, and contact forms.
- **hOn App:** Utilize the hOn app for smart diagnostics and direct access to support resources.
- **Service Centers:** Information on authorized service centers can be found on the Candy website.

