

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Calypso](#) /
- › [Calypso Digital Metallic Rose Watch K5874/1 User Manual](#)

Calypso K5874/1

CALYPSO
WATCHES

Calypso Digital Metallic Rose Watch K5874/1 User Manual

Model: K5874/1

1. INTRODUCTION

Thank you for choosing the Calypso Digital Metallic Rose Watch, model K5874/1. This manual provides essential information for the proper setup, operation, and maintenance of your new digital watch. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.

2. PRODUCT OVERVIEW

The Calypso K5874/1 is a digital watch featuring a metallic rose finish and a comfortable strap. It is designed for daily wear and offers essential timekeeping functions.



Figure 2.1: Calypso Digital Metallic Rose Watch (K5874/1) worn on a wrist.



Figure 2.2: Front view of the Calypso Digital Metallic Rose Watch (K5874/1).



Figure 2.3: Angled view of the Calypso Digital Metallic Rose Watch (K5874/1).

3. SETUP

3.1 Initial Time Setting

Your watch comes with a pre-installed battery (1 C battery included). To set the time and date:

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **SET** or **ADJUST** button to select the digit you wish to change (e.g., hours, minutes, year, month, day).
3. Use the **LIGHT** or **START/STOP** button to increase the value of the selected digit.
4. Repeat steps 2 and 3 until all desired settings are correct.
5. Press the **MODE** button again to exit the setting mode and return to the normal time display.

Note: Button labels may vary. Refer to the markings on your specific watch for exact button functions.

4. OPERATING INSTRUCTIONS

4.1 Basic Time Display

In normal timekeeping mode, the watch displays the current time (hours, minutes, seconds) and often the day of the week and date.

4.2 Mode Functions

Press the **MODE** button to cycle through various functions:

- **Stopwatch:** Used for measuring elapsed time. Press **START/STOP** to begin and end timing, and **RESET** (often the **SET** button) to clear.
- **Alarm:** Set a specific time for an audible alert. Use **SET/ADJUST** to set the alarm time and **MODE** to activate/deactivate.
- **Date Display:** Shows the current month and day.
- **Light:** Press the **LIGHT** button to illuminate the display for a few seconds in low-light conditions.

4.3 Water Resistance

This watch is water-resistant. This means it can withstand splashes, rain, and brief immersion in water. It is not suitable for swimming, diving, or hot water activities (e.g., showering, sauna) as steam and temperature changes can compromise the seals.

5. MAINTENANCE

5.1 Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials.

5.2 Battery Replacement

The watch uses one C battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

5.3 Water Resistance Care

To maintain the water resistance of your watch, ensure the crown (if applicable) is pushed in completely. Avoid operating buttons while the watch is wet or submerged. Gaskets and seals can degrade over time; periodic inspection by a professional is recommended.

6. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Re-set the time following the instructions in Section 3.1. Ensure you are in the correct 12-hour or 24-hour format if applicable.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable). If the issue persists, a battery replacement might be needed, or consult a technician.
- **Condensation inside the watch:** This indicates a breach in water resistance. Immediately take the watch to a qualified technician for inspection and repair to prevent further damage.

7. SPECIFICATIONS

Feature	Detail
Model Number	K5874/1
Brand	Calypso

Display Type	Digital
Movement Type	Digital
Clasp Type	Buckle
Water Resistance Level	Water-resistant
Item Shape	Rectangular
Band Color	Rose
Dial Color	Rose
Case Diameter	44 Millimeters
Band Width	22 Millimeters
Case Thickness	14.6 Millimeters
Item Weight	65 Grams
Battery	1 C battery (included)
Country of Origin	China

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Calypso Watches website. Keep your proof of purchase for any warranty claims.

For further assistance, contact Calypso customer service through their official channels.
