

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hiicam](#) /

› [Hiicam Speed 60 Action Camera User Manual](#)

Hiicam Speed 60

Hiicam Speed 60 Action Camera User Manual

Model: Speed 60 | Brand: Hiicam

INTRODUCTION

The Hiicam Speed 60 is a high-performance action camera designed to capture your adventures in stunning 4K resolution. Featuring a 48MP photo sensor, dual screens including a 2.35-inch HDR touch screen, advanced EIS 2.0 stabilization, and built-in 5G Wi-Fi, this camera is built for dynamic environments. It is natively waterproof up to 10 meters (33 feet) and can be used with an external waterproof housing for depths up to 40 meters (131 feet).



Figure 1: Hiicam Speed 60 Action Camera and included batteries.

WHAT'S IN THE BOX

Verify that all items are present in your package:

- 1 x Hiicam Speed 60 Action Camera
- 2 x 2150 mAh Batteries
- 1 x Battery Charger
- 1 x USB Cable
- 1 x Waterproof Case
- 1 x Wireless Mic & Remote
- Various Mounts and Accessories (Buckle Mount, AE Mount, C Mount, D Mount, F Mount, H Mount, Helmet Mount)
- Double-Sided Adhesive Pads
- Wire Rope
- Bandages

- 1 x User Manual
- 1 x Lens Cloth

Package Included



Speed 60
x 1



Waterproof
Case x 1



Battery Charger
x 1



Battery
x 2



USB Cable
x 1



Wireless Mic & Remote
x1



Double-Sided



Clip 1
x 1



Wire rope x1
Strip rolling x4



User Manual



Buckle Mount
x 1



AE Mount
x 1



C Mount
x 1



D Mount
x 1



Lens Cloth



F Mount
x 1



H Mount
x 1



Helmet Mount
x 2



Bandage
x 4

Figure 2: Complete package contents of the Hiicam Speed 60.

SETUP

1. Battery Installation and Charging

The Speed 60 comes with two 2150 mAh lithium-ion batteries. For optimal performance, fully charge both batteries before first use.

1. Open the battery compartment cover on the camera.
2. Insert a charged battery, ensuring the contacts align correctly.
3. Close the battery compartment cover securely.
4. To charge batteries, use the included battery charger and USB-C cable. The charger supports sequential charging of both batteries.



Figure 3: Battery charging and capacity.

2. Memory Card Insertion

The camera supports SD flash memory cards. A high-speed (U3 or V30 recommended) microSD card is required for 4K video recording.

1. Locate the microSD card slot on the side of the camera.
2. Insert the microSD card with the contacts facing the front of the camera until it clicks into place.
3. To remove, gently push the card until it springs out.

OPERATING INSTRUCTIONS

Basic Controls

- **Power Button:** Press and hold to turn the camera on/off. Short press to switch modes (Video, Photo, Playback).
- **Shutter Button:** Press to start/stop recording video or take a photo.
- **Touch Screen:** Navigate menus and settings by swiping and tapping on the 2.35-inch rear touch screen.

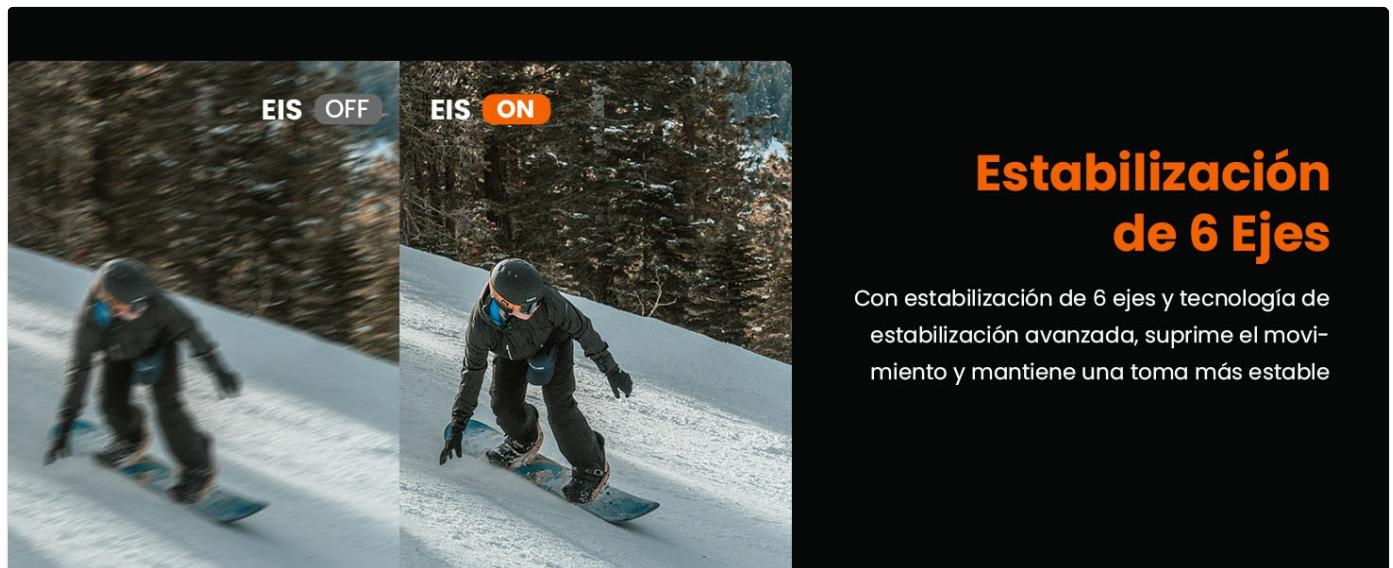


Figure 4: Touch screen operation for intuitive control.

Video Recording (4K60FPS, EIS 2.0, HDR)

The Speed 60 captures video at up to 4K resolution at 60 frames per second (FPS). Ensure EIS 2.0 (Electronic Image Stabilization) is enabled for smooth footage, especially during dynamic activities.

- Navigate to Video mode using the Power button or touch screen.
- Access video settings to select resolution (e.g., 4K/60FPS), enable EIS 2.0, and activate HDR for improved dynamic range.
- Press the Shutter button to start recording. Press again to stop.



Estabilización de 6 Ejes

Con estabilización de 6 ejes y tecnología de estabilización avanzada, suprime el movimiento y mantiene una toma más estable

Figure 5: EIS 2.0 for stable video recording.



Figure 6: HDR function for vivid and detailed images.

Photo Capture (48MP)

Capture high-resolution still images up to 48 megapixels.

- Switch to Photo mode.
- Adjust photo settings as needed (e.g., resolution, wide-angle).
- Press the Shutter button to take a photo.

4K60fps Video Supports 52MP Photo Resolution



Figure 7: High-resolution video and photo capabilities.

Waterproof Usage

The Speed 60 is natively waterproof to 10 meters (33 feet) without an additional case. For deeper dives up to 40 meters (131 feet), use the included waterproof housing.

- Before using underwater, ensure all port covers are securely closed.
- When using the waterproof housing, ensure the seal is clean and free of debris, and the latch is fully secured.

Waterproof Camera Underwater

170°



Bare camera 33FT/10M



Waterproof housing 131FT/40M

Figure 8: Waterproof camera for underwater adventures.

Wi-Fi Connectivity and App

Connect your Speed 60 to your smartphone via built-in 5G Wi-Fi for easy file transfer and remote control.

1. Download the official Hiicam app from your device's app store.
2. On the camera, enable Wi-Fi from the settings menu.
3. On your smartphone, connect to the camera's Wi-Fi network.
4. Open the Hiicam app to view live footage, control recording, and download photos/videos.

Download and Share Instantly Via Built-in 5G Wifi



Figure 9: Seamless sharing via 5G Wi-Fi.

Digital Zoom

The camera features a 5X digital zoom to get closer to your subject.

- While in video or photo mode, use the zoom controls on the touch screen to adjust the magnification.

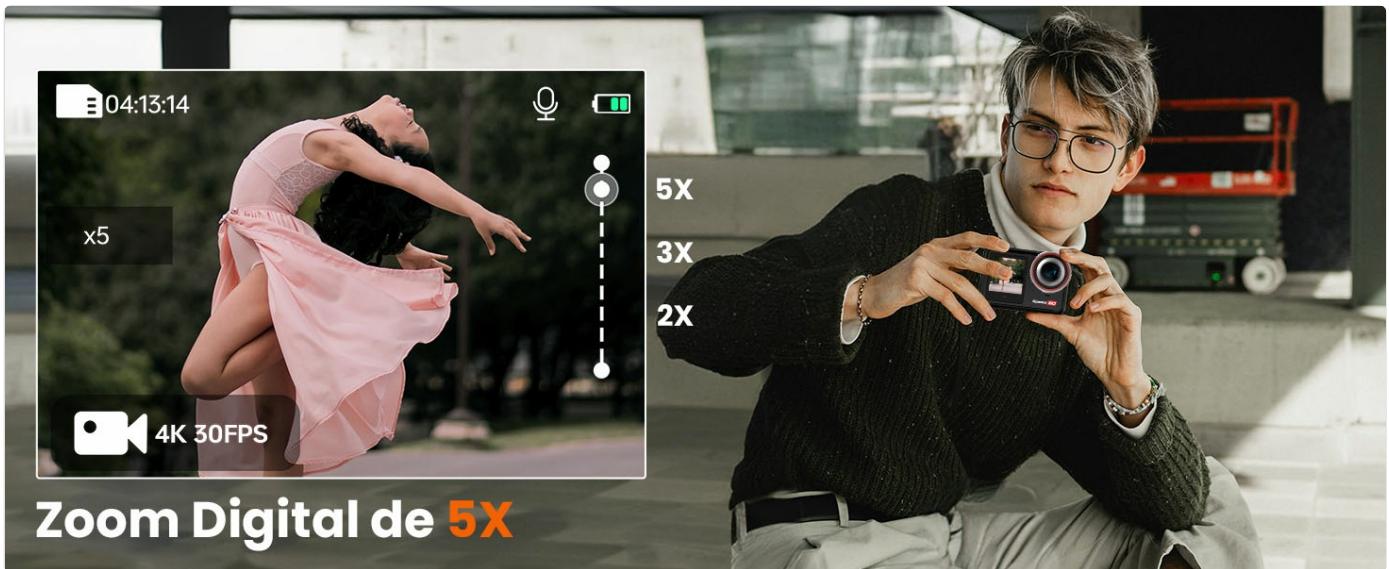


Figure 10: 5X Digital Zoom capability.

Remote Control

Use the included wireless remote control for convenient operation from a distance.

- Ensure the remote control is paired with the camera (refer to the full user manual for pairing instructions).
- Use the remote to start/stop recording or take photos without touching the camera.

MAINTENANCE

Cleaning the Camera and Lens

- Use the provided lens cloth to gently clean the camera lens and screens.
- For stubborn smudges, slightly dampen the cloth with water. Avoid harsh chemicals.
- The camera features a removable anti-fog lens protector for easy cleaning and replacement.



Figure 11: Removable lens protector and other features for maintenance.

Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging batteries frequently to prolong their lifespan.
- Use only the original Hiicam charger and batteries.

Waterproof Seal Care

- After each use in water, rinse the camera (if bare) or waterproof housing with fresh water.
- Allow to air dry completely before opening any compartments.
- Regularly inspect the rubber seals for any dirt, sand, or damage. Clean them gently if necessary.

TROUBLESHOOTING

Camera Not Turning On

- Ensure the battery is fully charged and correctly inserted.
- Try a different charged battery if available.
- Press and hold the power button for at least 5 seconds.

Poor Video/Photo Quality

- Clean the camera lens and lens protector.
- Ensure sufficient lighting conditions.
- Check if EIS 2.0 is enabled for video stabilization.
- Verify that the correct resolution and frame rate settings are selected.
- Use a high-speed microSD card (U3 or V30).

Wi-Fi Connection Issues

- Ensure Wi-Fi is enabled on the camera.
- Restart both the camera and your smartphone.
- Make sure you are within range of the camera's Wi-Fi signal.
- Try forgetting the network on your phone and reconnecting.

SPECIFICATIONS

Feature	Detail
Model Number	Speed 60
Video Capture Resolution	4K (up to 60FPS)
Photo Resolution	48 MP
Image Stabilization	EIS 2.0 (Electronic Image Stabilization)
Waterproof Depth (Bare)	10 meters (33 feet)
Waterproof Depth (with Housing)	40 meters (131 feet)
Display	2.35-inch HDR Touch Screen (rear), 1.4-inch Front Screen
Connectivity	5G Wi-Fi
Battery Capacity	2 x 2150 mAh Lithium Ion
Digital Zoom	5X
Dimensions	2.9 x 6.99 x 3.51 cm
Weight	890 g

Flash Memory Type

SD (MicroSD recommended)

WARRANTY AND SUPPORT

Hiicam provides a warranty for its products. To activate your extended warranty and access online service, please scan the QR code provided on the battery packaging or visit the official Hiicam support page.

For further assistance, troubleshooting, or to contact customer support, please refer to the full user manual or visit the Hiicam official website.



Figure 12: Scan QR code on battery for extended warranty and service.

Relevant Link: [Activate Extended Warranty / Online Service](https://www.hiicam.com/activate-warranty)

Related Documents - Speed 60

 <p>SPEED 50 ACTION CAMERA USER MANUAL V20240723</p>	<p>Hiicam SPEED 50 Action Camera User Manual Comprehensive user manual for the Hiicam SPEED 50 Action Camera, detailing setup, operation, features, specifications, maintenance, and troubleshooting. Learn how to capture high-quality video and photos.</p>
 <p>SPEED 50 ACTION CAMERA USER MANUAL V20240723</p>	<p>Speed 50 Action Camera User Manual User manual for the Speed 50 Action Camera, covering setup, operation, features, and maintenance.</p>
 <p>SPEED 50 ACTION CAMERA USER MANUAL V20240723</p>	<p>Speed 50 Action Camera User Manual Comprehensive user manual for the Speed 50 Action Camera by Hiicam, covering setup, operation, features, maintenance, and app connectivity. Learn how to use your action camera effectively.</p>
 <p>USER MANUAL ACTION CAMERA ENGLISH V20250113D16</p>	<p>Speed 20 Action Camera User Manual - Hiicam Comprehensive user manual for the Hiicam Speed 20 action camera. Learn how to operate your device, explore its features, specifications, video and photo modes, system settings, and connect to the Hiicam app for enhanced control.</p>