

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Desobry](#) /

› [DESOBRY SS1022B Soundbar User Manual](#)

Desobry SS1022B

DESOBRY SS1022B Soundbar User Manual

Model: SS1022B

1. INTRODUCTION

Thank you for purchasing the DESOBRY SS1022B Soundbar. This compact and powerful sound system is designed to enhance your audio experience for TVs, PCs, and other devices. It offers multiple wired and wireless connection options, including HDMI (ARC), Optical, Coaxial, AUX, USB, and Bluetooth 5.1, along with three distinct EQ modes to optimize sound for various content types. Please read this manual carefully before use to ensure proper setup and operation.

Package Contents

- DESOBRY SS1022B Soundbar Unit x1
- Remote Control x1
- Power Adapter x1
- Optical Cable x1
- Coaxial Cable x1
- HDMI (ARC) Cable x1
- AUX Cable x1
- User Manual x1

パッケージ内容



Figure 1.1: Included Package Contents

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the soundbar to rain, moisture, or extreme temperatures.
- Do not block ventilation openings.
- Use only the provided power adapter.
- Do not open the casing; refer all servicing to qualified personnel.
- Keep the soundbar away from strong magnetic fields.
- Avoid placing heavy objects on the soundbar.

3. PRODUCT OVERVIEW

Front and Side View



Figure 3.1: Front View with Speaker Components

Rear Panel Connections



Figure 3.2: Rear Panel Connectivity Ports

The rear panel includes the following ports:

- **HDMI (ARC):** For connecting to a TV with Audio Return Channel support.
- **AUX:** 3.5mm audio input for analog devices.

- **COAXIAL:** Digital audio input.
- **OPTICAL:** Digital audio input.
- **USB:** For playing audio from USB storage devices.
- **DC IN:** Power input for the adapter.

Remote Control



Figure 3.3: Remote Control

The remote control allows you to manage power, volume, input source, and sound modes. Ensure the remote has working batteries and is pointed towards the soundbar's front sensor.

4. SETUP

Placement

Place the soundbar on a stable, flat surface, such as a TV stand or shelf, directly in front of your television. Ensure there are no obstructions in front of the soundbar to allow for optimal sound projection. The compact size (41cm length) makes it suitable for various setups.

Power Connection

1. Connect the power adapter to the DC IN port on the rear of the soundbar.
2. Plug the other end of the power adapter into a wall outlet.
3. The soundbar will enter standby mode, indicated by an LED light.

5. OPERATING INSTRUCTIONS

Power On/Off

Press the Power button on the remote control or on the soundbar unit to turn the device on or off.

Volume Control

Use the Volume Up (+) and Volume Down (-) buttons on the remote control or the soundbar unit to adjust the volume level.

Input Source Selection

Press the 'Input' or 'Source' button on the remote control or the soundbar unit to cycle through available input sources (HDMI ARC, Optical, Coaxial, AUX, USB, Bluetooth).

EQ Modes

The soundbar features three equalizer (EQ) modes to optimize audio for different content:

- **Music Mode:** Enhanced for musical playback.
- **Movie Mode (3D):** Provides a more immersive sound experience for films.
- **News Mode (Standard):** Optimizes vocal clarity for news and dialogue.

Press the 'EQ' button on the remote control to switch between these modes.



Figure 5.1: DSP Sound Modes

6. CONNECTIONS

HDMI (ARC) Connection

For optimal convenience and control, connect your TV to the soundbar using the HDMI (ARC) port.

1. Connect one end of the HDMI cable to the HDMI (ARC) port on the soundbar.
2. Connect the other end to the HDMI (ARC) port on your TV.
3. On your TV's settings, ensure HDMI ARC is enabled and the audio output is set to PCM. Refer to your TV's manual for specific instructions.



Figure 6.1: TV Audio Output Settings for HDMI (ARC) and Optical

Optical Connection

Use an optical cable for high-quality digital audio transmission if your TV or device has an optical output.

1. Connect one end of the optical cable to the OPTICAL port on the soundbar.
2. Connect the other end to the optical output port on your TV or audio source.
3. On your TV's settings, ensure the digital audio output is set to PCM.

Coaxial Connection

Connect devices with a coaxial digital audio output.

1. Connect one end of the coaxial cable to the COAXIAL port on the soundbar.
2. Connect the other end to the coaxial output port on your audio source.

AUX Connection

For analog audio devices, use the AUX input.

1. Connect one end of the 3.5mm AUX cable to the AUX port on the soundbar.
2. Connect the other end to the headphone jack or AUX output of your device (e.g., smartphone, PC).

USB Connection

Play audio files directly from a USB storage device.

1. Insert a USB flash drive (formatted to FAT32) into the USB port on the soundbar.
2. The soundbar will automatically switch to USB input and begin playing compatible audio files.

Bluetooth Pairing

Connect your Bluetooth-enabled devices wirelessly to the soundbar.

1. Press the 'Input' button on the remote or soundbar until 'BT' is displayed, indicating Bluetooth mode. The soundbar will enter pairing mode.
2. On your device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select 'DESOBRY SS1022B' from the list.
4. Once paired, the soundbar will indicate a successful connection, and you can play audio from your device.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; outlet not working	Check power cable connection; try a different outlet
No sound	Incorrect input source; TV/device volume too low; TV audio output not set to PCM (for digital connections)	Select correct input; increase volume; set TV audio output to PCM (refer to Section 6)
Distorted sound or buzzing	Volume too high; poor cable connection; interference	Lower volume; ensure cables are securely connected; try different cables; move away from other electronic devices
Remote control not working	Batteries depleted; obstruction between remote and soundbar	Replace batteries; remove any obstructions; ensure remote is pointed at the soundbar's sensor
Bluetooth pairing failed	Soundbar not in pairing mode; device Bluetooth off; too far from soundbar	Ensure soundbar is in BT pairing mode; enable Bluetooth on device; move device closer (within 10m)

8. SPECIFICATIONS

Feature	Specification
Model Number	SS1022B
Dimensions (L x W x H)	41 x 7.7 x 7.2 cm
Speaker Type	Soundbar (2 speakers + 1 subwoofer port)
Max Output Power	50 Watts
Frequency Response	30 Hz
Connectivity Technology	Bluetooth 5.1, HDMI (ARC), Optical, Coaxial, AUX, USB
Mounting Type	Tabletop Mount
Color	Black

9. MAINTENANCE

To maintain the performance and appearance of your soundbar:

- Wipe the surface with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Keep the ventilation openings clear of dust and debris.
- Store the soundbar in a cool, dry place when not in use for extended periods.

10. WARRANTY AND SUPPORT

The DESOBRY SS1022B Soundbar comes with a 12-month manufacturer's warranty from the date of purchase.

This warranty covers defects in materials and workmanship under normal use.

If you encounter any issues or require support, please contact our customer service. You can typically find contact information through your purchase platform's order history (e.g., Amazon: "Account Service" > "Order History" > "Seller" > "Ask a Question"). Please have your order number and product model (SS1022B) ready when contacting support.

