

KENT Digital 6.5L

KENT Digital Air Fryer 6.5L Instruction Manual

Model: Digital 6.5L | Brand: KENT

1. INTRODUCTION

Thank you for choosing the KENT Digital Air Fryer 6.5L. This appliance is designed to provide a healthier way to cook your favorite meals, utilizing rapid hot air circulation to fry, bake, grill, and roast with significantly less oil. This manual provides essential information for safe operation, maintenance, and optimal use of your new air fryer.



Figure 1.1: The KENT Digital Air Fryer 6.5L, a versatile appliance for grilling, baking, roasting, and frying.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Do not block any ventilation openings.

3. PRODUCT OVERVIEW

The KENT Digital Air Fryer 6.5L is designed for ease of use and efficient cooking. Familiarize yourself with its components and control panel.

3.1 Components

- **Main Unit:** Houses the heating element and fan.
- **Frying Basket:** Removable basket for holding food.
- **Handle:** For safely pulling out the frying basket.
- **Digital Display & Touch Control Panel:** For setting time, temperature, and selecting presets.
- **Glass Window with Built-In Light:** Allows monitoring of food during cooking without opening the basket.

3.2 Control Panel Features

The intuitive touch control panel provides easy access to all functions:

- **Digital Display:** Shows time, temperature, and selected preset.
- **Preset Menus:** 8 pre-programmed settings for common dishes (Fries, Veggies, Frozen Food, Samosa, Chicken, Pizza, Burger, Fish).
- **Temperature Control:** Adjustable up to 200°C.
- **Timer Control:** Adjustable for precise cooking duration.
- **Power Button:** To turn the appliance on/off.
- **Start/Pause Button:** To begin or temporarily stop cooking.



Figure 3.1: The air fryer's one-touch display with intuitive functions for temperature, timer, and safety features.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Remove all packaging materials from the air fryer.
2. Remove any stickers or labels from the appliance.
3. Carefully inspect the appliance for any damage. Do not use if damaged.

4.2 Cleaning Before First Use

1. Wipe the main unit with a damp cloth.
2. Clean the frying basket and pan with hot water, dish soap, and a non-abrasive sponge.
3. Rinse thoroughly and dry all parts completely.

4.3 Placement

Place the air fryer on a stable, level, heat-resistant surface, ensuring adequate space (at least 10 cm) around the back and sides for proper ventilation.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Plug the power cord into a grounded wall outlet. The display will light up.
2. Carefully pull the frying basket out of the air fryer.
3. Place the ingredients into the frying basket. Do not exceed the MAX fill line.
4. Slide the frying basket back into the air fryer.
5. Press the Power button to turn on the appliance.
6. Select a preset menu or manually set the temperature and time.
7. Press the Start/Pause button to begin cooking.
8. Monitor cooking progress through the glass window.
9. The appliance will automatically shut off when the timer reaches zero.

5.2 Using Preset Menus

The air fryer features 8 preset menus for convenient cooking:

- Fries
- Veggies
- Frozen Food
- Samosa
- Chicken
- Pizza
- Burger
- Fish

To use a preset, simply touch the corresponding icon on the control panel. The appliance will automatically set the optimal temperature and time for that dish. You can adjust these settings manually if desired.



Figure 5.1: The 8 preset menus offer single-touch automatic recipes for various dishes.

5.3 Manual Temperature and Timer Adjustment

To manually set cooking parameters:

1. After turning on the appliance, use the temperature control buttons (up/down arrows next to the thermometer icon) to set your desired temperature (up to 200°C).
2. Use the timer control buttons (up/down arrows next to the clock icon) to set your desired cooking time.
3. Press the Start/Pause button to begin cooking.

5.4 Monitoring with Glass Window

The integrated glass window and built-in light allow you to monitor your food's progress without opening the basket, preventing heat loss and ensuring consistent results.



Figure 5.2: The glass window allows for easy monitoring of food during the cooking process.

6. COOKING TIPS

- For best results, shake the basket halfway through cooking for items like fries or nuggets to ensure even crisping.
- Lightly brush or spray food with oil for extra crispiness, especially for fresh ingredients.
- Smaller food items generally require shorter cooking times than larger ones.
- Do not overcrowd the basket; cook in batches if necessary to ensure proper air circulation.
- The air fryer is suitable for baking, grilling, roasting, and frying a wide variety of foods.



Figure 6.1: Achieve tastier, healthier, and quicker meals with up to 80% less oil.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

7.1 Cleaning

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Frying Basket:** The frying basket is not dishwasher safe. Clean it with hot water, dish soap, and a non-abrasive sponge. For stubborn food residue, soak the basket in hot water for about 10 minutes.
3. **Interior:** Wipe the interior with a damp cloth and mild detergent. Avoid abrasive cleaners.
4. **Exterior:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. Ensure all parts are completely dry before reassembling or storing the appliance.

7.2 Storage

Store the air fryer in a cool, dry place when not in use. Ensure the power cord is neatly wrapped and secured.

8. TROUBLESHOOTING

If you encounter any issues with your KENT Digital Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overcrowded.	Cook food in smaller batches. Shake the basket halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use.	Clean the frying basket and pan thoroughly after each use.
Food is not crispy.	Not enough oil or incorrect temperature/time.	Lightly brush food with oil. Adjust temperature or increase cooking time.
Appliance suddenly stops during operation.	Auto shut-off function activated.	This is a safety feature. Check if the basket is fully inserted or if the timer has completed.

9. SPECIFICATIONS

Detailed technical specifications for the KENT Digital Air Fryer 6.5L:

- **Model Name:** Digital Air Fryer 6.5L
- **Capacity:** 6.5 litres
- **Output Wattage:** 1600 Watts
- **Product Dimensions (D x W x H):** 39D x 33W x 28H Centimeters
- **Item Weight:** 5.25 Kilograms
- **Max Temperature Setting:** 200 Degrees Celsius
- **Control Method:** Touch
- **Air Frying Technology:** Rapid Heat Circulation
- **Special Features:** Timer, Auto Shut-Off, Glass Window with Built-In Light
- **Material:** Plastic
- **Color:** Black
- **Country of Origin:** India

10. WARRANTY AND SUPPORT

Your KENT Digital Air Fryer 6.5L comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For any product-related queries, technical assistance, or service requests, please contact KENT customer support. Contact details can be found on the official KENT website or your product packaging.