

[manuals.plus](#) /› [Andoer](#) /› [Andoer Selfie Stick Tripod User Manual](#)

Andoer Selfie Stick Tripod

Andoer Selfie Stick Tripod User Manual

Model: Andoer Selfie Stick Tripod

Brand: Andoer

1. INTRODUCTION

Thank you for choosing the Andoer Selfie Stick Tripod. This lightweight and portable mini tripod is designed for versatile use with phones, cameras, and other compatible devices, making it ideal for selfie-taking, video recording, live streaming, and video conferencing. Its adjustable height and rotatable ball head provide flexibility for various photography needs.

2. PRODUCT FEATURES

- **4 Levels of Adjustable Height:** The tripod can be adjusted from a compact 13cm (5.1 inches) to an extended 28.5cm (11.2 inches), offering multiple height options for different shooting scenarios.
- **1/4 Inch Screw Compatibility:** Equipped with a standard 1/4 inch screw, this tripod is compatible with a wide range of devices including phone clips, DSLR cameras, ILDC cameras, action cameras, photography lights, and microphones.
- **Rotatable Ball Head:** The integrated ball head allows for 360-degree rotation, enabling easy adjustment of photography angles. It also features an extra cold shoe mount for attaching additional accessories like microphones or video lights.
- **Sturdy and Durable Construction:** Made from premium plastic, the tripod is designed to be robust, supporting devices up to 3kg. It can function both as a stable desktop stand and a comfortable handle grip.
- **Portable Design:** With its mini size and lightweight construction (102g / 3.5oz), this tripod is highly portable, making it convenient for handheld video recording, easy storage, and travel.





Figure 2.1: The Andoer Selfie Stick Tripod with a smartphone attached, demonstrating its primary use for capturing content.

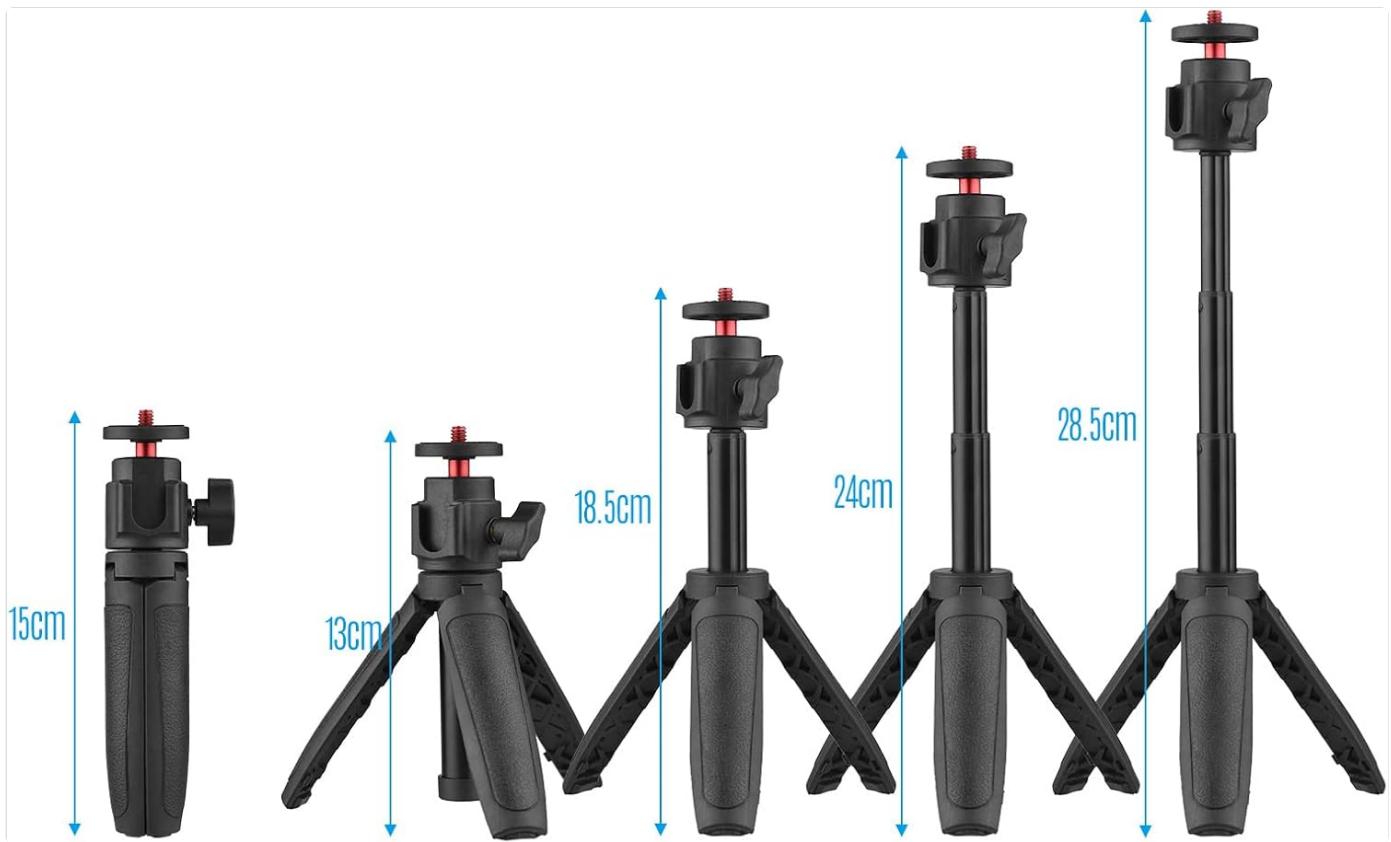


Figure 2.2: Illustration of the tripod's four adjustable height settings, ranging from 13cm to 28.5cm, highlighting its versatility.



Figure 2.3: Detailed view of the tripod head, indicating the 1/4 inch screw for device attachment, the cold shoe mount for accessories, and the locking knob for angle adjustment.

360° Rotation



< Only the tripod is included. >



Figure 2.4: Visual representation of the 360-degree rotation feature of the ball head, allowing for flexible camera positioning.

Standard 1/4 Inch Screw

Compatible with phone clip, DSLR camera, action camera, ring light, etc.

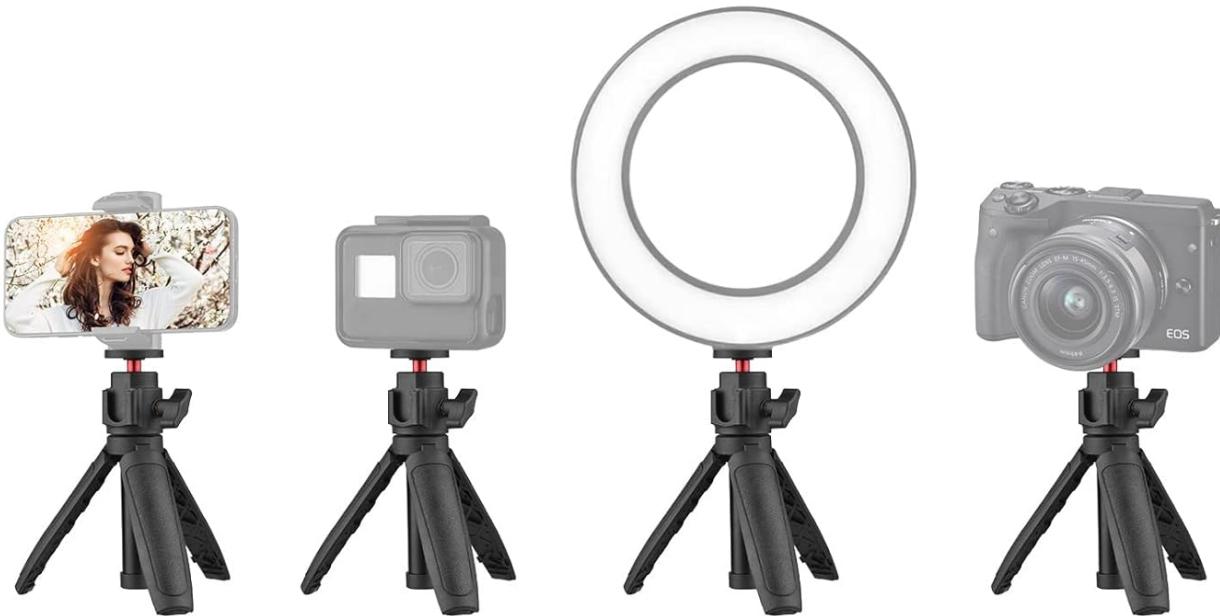


Figure 2.5: The tripod demonstrating compatibility with a smartphone, action camera, ring light, and DSLR camera, all connected via the standard 1/4 inch screw.

3. SETUP GUIDE

- 1. Unfold the Tripod Legs:** Gently pull the three legs outwards from the main body until they are fully extended and stable. The legs are designed to provide a stable base on flat surfaces.
- 2. Extend the Central Column:** To adjust the height, pull the central column upwards. It will click into place at each of the four adjustable height levels. Ensure it is securely locked at your desired height.
- 3. Attach Your Device:**
 - For smartphones, attach a compatible phone clip (not included) to the 1/4 inch screw on the tripod head, then secure your phone in the clip.
 - For cameras (DSLR, ILDC, action cameras), screw the camera directly onto the 1/4 inch screw until it is firmly attached.
- 4. Adjust the Ball Head:** Loosen the locking knob on the side of the ball head to adjust the angle of your device. Once the desired angle is achieved, tighten the locking knob firmly to secure the position.

5. **Utilize the Cold Shoe Mount (Optional):** If you have accessories like a microphone or LED video light, slide them into the cold shoe mount located on the side of the ball head.





Figure 3.1: The tripod fully extended, illustrating its maximum height and stable configuration for use as a stand.

4. OPERATING INSTRUCTIONS

- **Using as a Desktop Stand:** Extend the legs and the central column to your desired height. Place the tripod on a flat, stable surface for hands-free operation during video calls, live streams, or content viewing.
- **Using as a Handle Grip:** Collapse the tripod legs and central column completely to transform it into a compact handle. This mode is ideal for handheld video recording, vlogging, or taking selfies on the go.
- **Adjusting Shooting Angle:** Loosen the locking knob on the ball head, pivot your device to the desired horizontal or vertical orientation, and then re-tighten the knob to secure it. The 360-degree rotation allows for precise framing.
- **Changing Height:** To adjust the height, gently pull or push the central column. Ensure it clicks into one of the four designated height levels for stability.

Video conference



Selfie



Live stream



Video recording

Figure 4.1: Various applications of the tripod, including video conferencing, selfie capture, live streaming, and video recording, showcasing its versatility.

5. MAINTENANCE

- **Cleaning:** Wipe the tripod with a soft, dry cloth to remove dust and dirt. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the tripod in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully collapsed and clean before storage to prevent damage.
- **Inspection:** Periodically check all moving parts, screws, and joints for any signs of wear or looseness. Tighten any loose screws if necessary.

6. TROUBLESHOOTING

- **Device is Unstable:**

Ensure the tripod legs are fully extended and placed on a flat, stable surface. Verify that your device is securely attached to the 1/4 inch screw and the locking knob on the ball head is tightened. Check that the central column is locked at one of the height levels.

- **Difficulty Adjusting Height:**

Ensure no debris is obstructing the central column. Apply gentle, even pressure when extending or collapsing. If it feels stiff, clean the column with a dry cloth.

- **Ball Head Not Holding Position:**

Confirm that the locking knob on the ball head is fully tightened. If the issue persists, ensure your device's weight does not exceed the maximum load capacity of 3kg.

7. SPECIFICATIONS

Brand	Andoer
Material	Premium Plastic
Folded Length	15cm (5.9 inches)
Max. Extended Length	30cm (11.8 inches)
Adjustable Tripod Height Levels	13cm (5.1 inches), 18.5cm (7.2 inches), 24cm (9.4 inches), 28.5cm (11.2 inches)
Tripod Weight	102g (3.5oz)
Item Weight (Package)	4.5 ounces
Max. Load Bearing	Up to 3kg
Screw Interface	Standard 1/4 inch
Package Dimensions	8.27 x 2.36 x 1.57 inches
Country of Origin	China

8. WARRANTY AND SUPPORT

Specific warranty information for the Andoer Selfie Stick Tripod is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product packaging, the seller's website, or contact Andoer customer service directly.