

[Manuals.plus](#) /

› [Huuger](#) /

› Huuger 9 Drawer Dresser and TV Stand Instruction Manual

Huuger 9 Drawer Dresser, 47 Inch

Huuger 9 Drawer Dresser & TV Stand Instruction Manual

Model: 9 Drawer Dresser, 47 Inch (Rustic Brown)

[Introduction](#)

[Safety Information](#)

[Parts List](#)

[Setup & Assembly](#)

[Operation & Usage](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Huuger 9 Drawer Dresser and TV Stand. This versatile furniture piece is designed to provide ample storage and serve as a stable platform for your television. Its rustic brown finish and nine fabric drawers make it a functional and stylish addition to bedrooms, living rooms, closets, or nurseries. This manual provides essential information for safe assembly, proper usage, and effective maintenance to ensure the longevity of your product.



Image 1.1: The Huuger 9 Drawer Dresser in Rustic Brown, showcasing its design and nine spacious drawers.

2. SAFETY INFORMATION

WARNING: Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Always install the anti-tipping kit provided with the dresser.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time.
- Place the heaviest items in the lowest drawers.

Failure to follow these warnings can result in death or serious injury.



Image 2.1: Diagram illustrating the correct method for attaching the anti-tipping kit to the wall for enhanced safety.

3. PARTS LIST

Before beginning assembly, ensure all parts are present and undamaged. Refer to the detailed parts list included in your product packaging for specific component identification. Common components include:

- Metal Frame Components
- Wooden Top Panel
- Fabric Drawers (9 units)
- Drawer Handles
- Adjustable Feet
- Anti-Tipping Kit
- Assembly Hardware (screws, bolts, Allen wrench)

4. SETUP & ASSEMBLY

Assembly of the Huuger 9 Drawer Dresser is designed to be straightforward and typically takes approximately 30 minutes. For optimal results, follow these general steps and consult the detailed

instruction manual provided in your product packaging.

1. **Unpack and Organize:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Verify all parts against the included parts list.
2. **Assemble the Metal Frame:** Connect the metal frame components according to the diagrams in your manual, ensuring all screws are tightened securely.
3. **Attach the Wooden Top:** Secure the wooden top panel to the assembled metal frame.
4. **Prepare the Fabric Drawers:** Insert the bottom panels into each fabric drawer and attach the handles.
5. **Insert Drawers:** Slide the assembled fabric drawers into their designated slots within the frame.
6. **Install Adjustable Feet:** Screw the adjustable feet into the bottom of the frame. Adjust them to ensure the dresser is level and stable on uneven surfaces.
7. **Secure with Anti-Tipping Kit:** Crucially, attach the anti-tipping kit to the back of the dresser and secure it to a wall stud. This step is vital for safety.

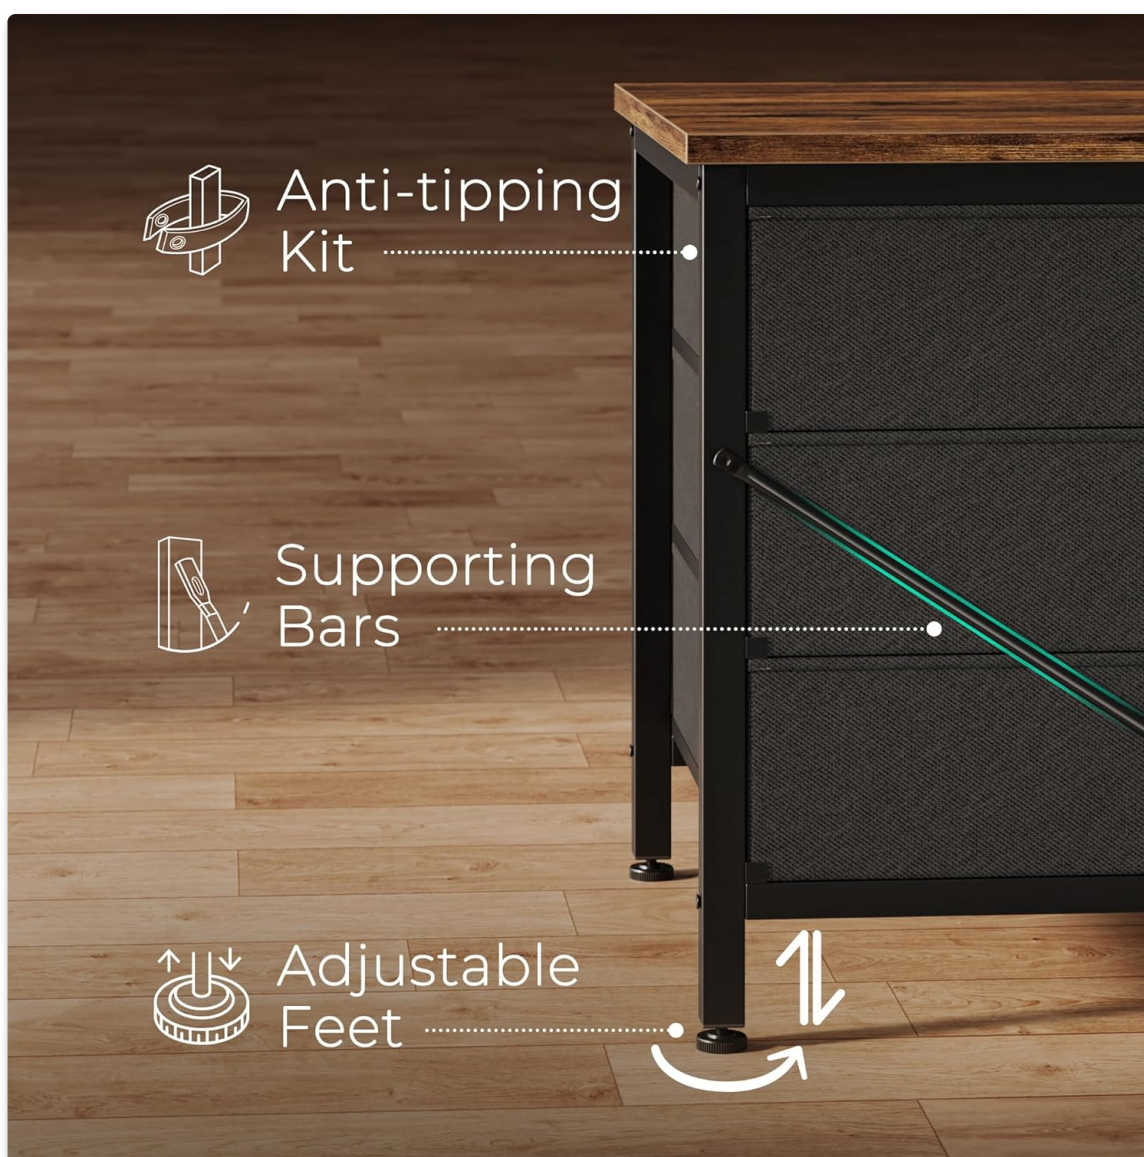


Image 4.1: Illustration of key structural features: anti-tipping kit attachment point, supporting bars for stability, and adjustable feet for leveling.

5. OPERATION & USAGE

The Huuger 9 Drawer Dresser is designed for versatile use in various rooms.

5.1 Storage Functionality

- Utilize the nine deep fabric drawers for organizing clothes, bedding, media, gaming accessories, or other household items.
- Each drawer has a capacity of approximately 12 lbs. Distribute weight evenly to maintain drawer integrity.
- The spacious wooden top can be used for displaying decorative items, lamps, or personal belongings.



Image 5.1: The dresser with multiple drawers open, demonstrating its large storage capacity for various items.

5.2 TV Stand Functionality

The sturdy wooden top is suitable for supporting televisions up to 55 inches in size.

- Ensure the television's base fits securely within the dimensions of the dresser top (47.2"W x 11.7"D).
- For larger TVs, consider wall-mounting the television above the dresser for safety and stability.
- Use the drawers to store media accessories, remote controls, or gaming equipment, keeping your entertainment area tidy.



Reference TV Size : 43"

Image 5.2: The dresser functioning as an entertainment center, with a television positioned above it.

6. MAINTENANCE

Proper care will help maintain the appearance and functionality of your dresser.

- **Cleaning:** Wipe the wooden top and metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Fabric Drawers:** For light cleaning, use a lint roller or a soft brush to remove dust. For spills, spot clean with a mild detergent and a damp cloth, then air dry completely. Do not machine wash the fabric drawers.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Leveling:** Re-adjust the adjustable feet as needed to maintain stability, especially if the dresser is moved.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dresser is wobbly or unstable.	Uneven floor; loose connections.	Adjust the leveling feet at the bottom of the frame. Ensure all assembly screws are tightened. Confirm the anti-tipping kit is securely installed.
Drawers do not close smoothly or appear warped.	Overloaded drawers; incorrect assembly of drawer or frame.	Reduce the weight in the drawers, ensuring items do not exceed 12 lbs per drawer. Verify that the drawer bottom panels are correctly inserted and the frame is assembled squarely.
Odor from fabric drawers.	New product off-gassing.	Remove drawers and air them out in a well-ventilated area for several days. Placing activated charcoal pouches or baking soda inside the drawers can help absorb odors.

8. SPECIFICATIONS

- **Brand:** Huuger
- **Model:** 9 Drawer Dresser, 47 Inch
- **Product Dimensions (Overall):** 11.7"D x 47.2"W x 26.8"H
- **Color:** Rustic Brown
- **Room Type:** Bedroom, Living Room, Closet, Nursery
- **Assembly Required:** Yes
- **Item Weight:** 29.2 pounds
- **Drawer Capacity:** Approximately 12 lbs per drawer
- **TV Size Support:** Up to 55-inch TV
- **Care Instructions:** Clean with a Damp Cloth



Image 8.1: Detailed product dimensions, including overall height, width, depth, and individual drawer measurements.

9. WARRANTY & SUPPORT

Huuger products are manufactured with quality and customer satisfaction in mind. While specific warranty details are typically provided with your purchase documentation, Huuger generally offers support for manufacturing defects.

For warranty claims, missing parts, assembly assistance, or any other product-related inquiries, please contact Huuger customer support directly. Refer to your purchase receipt or the Huuger brand store for contact information.

Thank you for choosing Huuger.