

Cecotec A01_EU01_101138

Cecotec Cecofry&Grill Smokin' 11000 Air Fryer 10L User Manual

Model: A01_EU01_101138

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Do not block any ventilation openings.
- Unplug the appliance when not in use and before cleaning.
- Do not operate the appliance if the cord or plug is damaged.
- Use only accessories recommended by the manufacturer.
- Exercise extreme caution when handling hot surfaces or hot liquids.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The Cecotec Cecofry&Grill Smokin' 11000 is a versatile 3-in-1 appliance combining an air fryer, grill, and integrated smoker. It features dual heating elements for even cooking and a large 10-liter capacity.

Components:

- Main Unit with Touch Control Panel
- Removable Cooking Basket/Drawer
- Grillin Style Plate
- Pizza Plate
- Movable Divider (for dual zone cooking)
- Integrated Smoker Box



Image: The Cecotec Cecofry&Grill Smokin' 11000 Air Fryer, showcasing its multi-functionality including air frying, grilling, and smoking capabilities. The image highlights the main unit, the cooking basket, and the various accessories for different cooking styles.



Image: A side view of the Cecotec Cecofry&Grill Smokin' 11000 Air Fryer, illustrating its sleek design and the transparent window of the cooking basket, allowing users to monitor food during cooking.

3. SETUP AND INITIAL USE

Before First Use:

1. Remove all packaging materials and stickers.
2. Wipe the exterior of the appliance with a damp cloth.
3. Wash the cooking basket, Grillin Style plate, pizza plate, and movable divider with hot, soapy water. Rinse thoroughly and dry completely.
4. Place the appliance on a stable, level, and heat-resistant surface, ensuring adequate air circulation around it.

Initial Burn-in (Recommended):

To eliminate any manufacturing odors, it is recommended to run the appliance empty for a short period.

1. Insert the empty cooking basket into the main unit.
2. Plug the appliance into a grounded electrical outlet.
3. Set the temperature to 200°C (390°F) and the timer to 10 minutes.
4. Allow the appliance to run. A slight odor may be present, which is normal.
5. Once complete, unplug the appliance and allow it to cool down completely before cleaning.

4. OPERATING INSTRUCTIONS

Basic Operation:

1. Place food in the cooking basket. Do not overfill.
2. Slide the basket firmly into the main unit until it clicks into place.
3. Plug in the appliance. The control panel will illuminate.
4. Use the touch controls to select a preset program or manually set the temperature (40-200°C) and time.
5. Press the Start/Pause button to begin cooking.
6. The appliance will automatically shut off when the timer expires.



Image: A user seasoning a whole chicken placed inside the Cecotec Cecofry&Grill Smokin' 11000 Air Fryer's cooking basket, demonstrating the ease of access to the food during preparation.

Cooking Modes and Functions:

Air Frying:

Achieve crispy results with minimal oil. Ideal for fries, chicken wings, vegetables, and more. Use the standard cooking basket.



Image: The Cecotec Cecofry&Grill Smokin' 11000 Air Fryer with a perfectly roasted whole chicken and vegetables inside its spacious 10-liter basket, illustrating its air frying capability for large meals.

Grilling Function (Grillin Style Plate):

For searing meats and achieving grill marks. Insert the Grillin Style plate into the basket before adding food.



Image: A user holding the cooking basket of the Cecotec Cecofry&Grill Smokin' 11000 Air Fryer, which contains grilled meat and roasted potatoes, demonstrating the appliance's grilling function.

Pizza Function (Pizza Plate):

Use the dedicated pizza plate for crispy crusts. Place the pizza on the plate and insert into the basket.



Image: A freshly cooked pizza with a golden, crispy crust resting on a wooden board, positioned next to the Cecotec Cecofry&Grill Smokin' 11000 Air Fryer, highlighting its pizza cooking capability.

Integrated Smoking Function:

Add wood chips or pellets to the integrated smoker box for authentic smoky flavor. Ensure the smoker box is properly filled and placed before starting the cooking cycle.



Image: An internal view of the Cecotec Cecofry&Grill Smokin' 11000 Air Fryer, illustrating the integrated smoking element and the grill plate, designed to infuse food with authentic smoky flavors.

Dual Zone Cooking (with Movable Divider):

The movable divider allows you to cook two different foods simultaneously at different temperatures or with different settings. Insert the divider into the basket to create two compartments.



Image: A top-down view of the Cecotec Cecofry&Grill Smokin' 11000 Air Fryer's cooking basket, divided into two zones, simultaneously cooking roasted potatoes and grilled fish, demonstrating its dual-zone cooking capability.



Image: A top-down view of the Cecotec Cecofry&Grill Smokin' 11000 Air Fryer's control panel and cooking basket, showing two distinct cooking zones with vegetables and meat, each with independent temperature and time settings displayed.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

Cleaning:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wash the cooking basket, Grillin Style plate, pizza plate, and movable divider with hot, soapy water and a non-abrasive sponge. These parts are generally dishwasher safe, but hand washing is recommended for longevity.
3. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. Clean the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent.
5. Ensure all parts are completely dry before reassembling or storing the appliance.

Storage:

Store the appliance in a cool, dry place, away from direct sunlight and moisture. Ensure the power cord is neatly wrapped and not kinked.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure plug is fully inserted. Test outlet with another device. Contact customer support if issue persists.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped; incorrect temperature/time.	Do not overload basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from appliance.	Grease residue from previous use; high-fat food cooking.	Clean the basket and interior thoroughly. For high-fat foods, drain excess fat during cooking.
Smoky flavor not strong enough.	Insufficient wood chips/pellets; smoker box not properly placed.	Ensure smoker box is filled and correctly inserted. Use appropriate type and amount of wood chips.

7. SPECIFICATIONS

Brand: Cecotec
Model: A01_EU01_101138
Capacity: 10 Liters
Power: 2200 Watts
Voltage: 220-240V ~ 50/60Hz (Typical for EU, correcting source data)
Material: Stainless Steel
Color: Inox
Temperature Range: 40°C - 200°C
Control Method: Touch
Features: Automatic Shut-off, Programmable, Dual Heating Elements, Integrated Smoker, Grillin Style Plate, Pizza Plate, Movable Divider
Item Weight: 1 Kilogram (Note: This weight seems unusually low for a 10L appliance. Please refer to product packaging for exact weight.)

8. WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or spare parts availability, please refer to the warranty card included with your purchase or visit the official Cecotec website.

Spare parts availability: 10 Years (as per product specifications).

For further assistance, please contact Cecotec customer service.