

[Manuals.plus](#) /

› [POWWA](#) /

› POWWA 6.5 QT 10-Speed Tilt-Head Electric Stand Mixer (Model SM-1548A) Instruction Manual

POWWA SM-1548A

POWWA 6.5 QT 10-Speed Tilt-Head Electric Stand Mixer

MODEL: SM-1548A

Introduction

Thank you for choosing the POWWA 6.5 QT 10-Speed Tilt-Head Electric Stand Mixer. This versatile 3-in-1 kitchen appliance is designed to simplify your baking and daily cooking tasks. With its powerful motor, large capacity stainless steel bowl, and multiple attachments, you can effortlessly prepare a wide range of recipes, from light meringues to heavy bread dough.



Image: The POWWA Professional Stand Mixer showcasing its key features including 10+ speeds, 6.5 QT capacity, tilt-head design, multiple accessories, anti-slip base, and dishwasher-safe parts.

Important Safety Instructions

Please read all instructions carefully before using your stand mixer. Keep this manual for future reference.

- Always unplug the appliance from the power supply before assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or other liquids.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving beaters during operation to prevent injury and/or damage to the mixer.
- Never operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors.

Package Contents

Your POWWA Stand Mixer package includes the following components:

- Main Motor Unit (with Tilt-Head Design and Speed Control)
- 6.5 QT Stainless Steel Mixing Bowl
- Dough Hook (Aluminum with protection layer)
- Flat Beater (Aluminum with protection layer)
- Wire Whisk (Stainless Steel)
- Pouring Shield (Splash Guard)
- Scraper
- Egg Separator

COMPONENTS OF STAND MIXER



Image: An exploded view diagram of the POWWA Stand Mixer, clearly labeling its main unit, 6.5 QT stainless steel bowl, whisk, tilt-head design, speed and pulse control, splash guard, scraper, egg separator, beater, and dough hook.

Setup

1. **Place the Mixer:** Position the mixer on a clean, dry, and stable surface. Ensure the four silicone suction feet are securely attached to prevent movement during operation.
2. **Lift the Head:** Push the tilt-head release lever (located on the side of the mixer) down and lift the motor head until it locks into place.
3. **Attach the Bowl:** Place the stainless steel mixing bowl onto the base, aligning the tabs on the bowl with the slots on the base. Turn the bowl clockwise until it locks securely.
4. **Insert an Attachment:** Select the desired attachment (dough hook, flat beater, or wire whisk). Insert the attachment shaft into the attachment port and turn it counter-clockwise until it clicks into place.
5. **Lower the Head:** Push the tilt-head release lever down again and gently lower the motor head until it locks into its operating position.

6. **Attach Pouring Shield:** If desired, attach the pouring shield by sliding it onto the motor head, ensuring it covers the bowl opening.

Operating Instructions

The POWWA Stand Mixer features planetary mixing action, ensuring complete bowl coverage for thorough mixing. It offers 10 speeds plus a pulse setting for precise control.

Speed Control and Attachment Usage:



Image: A visual guide to the three main attachments: Dough Hook for heavy mixtures (Speed 1-4), Flat Beater for medium mixtures (Speed 2-7), and Whisk for light mixtures (Speed 8-10/Pulse).

- **Dough Hook (Speeds 1-4):** Ideal for kneading heavy mixtures like bread dough, pizza dough, or pasta. Start at a low speed and gradually increase as the dough forms.



Image: The dough hook in action, kneading bread dough within the stainless steel bowl.

- **Flat Beater (Speeds 2-7):** Best for medium-heavy mixtures such as cakes, cookies, mashed potatoes, or salads. Use medium speeds for creaming and mixing.



Image: The flat beater mixing a salad, demonstrating its use for medium mixtures.

- **Wire Whisk (Speeds 8-10/Pulse):** Perfect for light mixtures like whipping cream, egg whites, meringues, or sauces. Use high speeds for aeration and the pulse setting for quick bursts.



Image: The wire whisk actively mixing cream, illustrating its effectiveness for light, airy preparations.

General Operation:

1. Ensure the mixer is properly assembled and plugged into a 120V power outlet.
2. Add your ingredients to the mixing bowl.
3. Turn the speed control knob to the desired setting. Start with a lower speed and gradually increase to avoid splashing.
4. For quick bursts of power, turn the knob to the 'P' (Pulse) setting and release.
5. When finished, turn the speed control knob to '0' (Off) and unplug the mixer.
6. Lift the motor head, remove the attachment, and then unlock and remove the mixing bowl.

Video Demonstration:

Your browser does not support the video tag.

Video: An official demonstration of the POWWA 6.5 QT 10-Speed Tilt-Head Electric Stand Mixer, showcasing its assembly, various attachments, and mixing capabilities for different ingredients.

Maintenance and Cleaning

Proper maintenance ensures the longevity and performance of your stand mixer.

- **Attachments:** The stainless steel whisk, aluminum dough hook, and flat beater are all dishwasher-safe for quick and easy cleaning.
- **Mixing Bowl:** The 6.5 QT stainless steel bowl is also dishwasher-safe.
- **Main Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water.
- **Pouring Shield:** The plastic pouring shield can be washed by hand with warm, soapy water or placed on the top rack of a dishwasher.


Powerful Motor

Good heat dissipation and long service life, operation noise $\leq 75\text{dB}$.



4 Silicone Suction Feet

Keep the stand mixer steady while it is working.

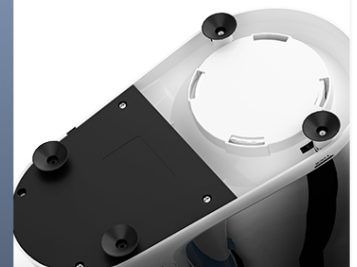

Tilting Head Design

It makes the bowl and accessories easy to install and remove.



Dishwasher Safe

All 304 stainless steel accessories are dishwasher safe for quick and easy cleaning.



Image: A collage highlighting key features such as the powerful motor, stable silicone suction feet, convenient tilting head design, and the dishwasher-safe nature of the accessories.

Troubleshooting

If you encounter any issues with your POWWA Stand Mixer, please refer to the following common troubleshooting tips:

- **Mixer does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check if the speed control knob is set to a speed other than '0'.
- **Attachment not mixing properly:** Ensure the attachment is correctly inserted and locked into the attachment port. The mixing bowl should also be securely locked to the base.
- **Mixer stops during operation:** The mixer may have activated its overheat protection. Turn off the mixer, unplug it, and let it cool down for at least 30 minutes before resuming use. Reduce the load or mixing time if this occurs frequently.
- **Excessive noise or vibration:** Ensure the mixer is on a stable, flat surface and the suction feet are engaged. Check that the mixing bowl and attachment are properly secured.

If problems persist, please contact customer support.

Specifications

Feature	Detail
Brand	POWWA
Model Name	stand mixer
Item Model Number	SM-1548A
Capacity	6.5 Quarts
Wattage	300 watts
Voltage	120 Volts
Controls Type	Push Button
Product Dimensions	14"D x 9"W x 10"H
Item Weight	8.23 pounds (3.74 Kilograms)
Material	Sturdy ABS housing machine & 304 stainless steel bowl
Special Feature	Dishwasher Safe (attachments)

Warranty and Support

POWWA offers **5 years of support** for this product. We are confident in the quality of our products and are committed to your satisfaction.

If you have any questions or concerns when you receive your mixer or during its use, please do not hesitate to contact us via Amazon. We provide **24/7 online after-sales service** to assist you.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question