

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Cecotec A01_EU01_100149

Cecotec Cecofry Dual 9000 Air Fryer User Manual

Model: A01_EU01_100149

1. INTRODUCTION

Thank you for choosing the Cecotec Cecofry Dual 9000 Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods with little to no oil, utilizing advanced hot air circulation technology. Please read this manual thoroughly before first use to ensure safe and optimal operation.



2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- **Electrical Safety:** Ensure the voltage matches your power supply. Do not immerse the appliance, cord, or plug in water or other liquids.
- **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow proper air circulation.
- **Hot Surfaces:** The appliance surfaces become hot during use. Use oven mitts when handling hot components.
- **Children:** Keep the appliance out of reach of children. Close supervision is necessary when used near children.
- **Ventilation:** Do not block the air inlet or outlet vents.
- **Overheating Protection:** The appliance is equipped with overheating protection. If it overheats, it will automatically shut off. Unplug and allow it to cool before resuming use.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Cecofry Dual 9000 Air Fryer:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital touch panel for setting time, temperature, and selecting modes.
- **Dual Baskets (4.5L each):** Two independent cooking baskets.
- **Removable Divider:** Allows combining the two 4.5L baskets into a single 9L cooking space.
- **Crisper Plates:** Removable plates for optimal air circulation and crisping.
- **Power Cord:** 75 cm length.



Image: An overhead view of the Cecotec Cecofry Dual 9000 Air Fryer, highlighting its compact design and top control panel.



Image: A user demonstrating the removable divider, showing how the two 4.5L baskets can be combined into a single 9L cooking area.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Cleaning:** Before first use, wash the baskets and crisper plates with warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 10 cm of clear space around the back and sides for proper ventilation.
4. **Basket Insertion:** Insert the crisper plates into the baskets. Then, slide the baskets firmly into the main unit. If using the single 9L capacity, ensure the divider is correctly removed or inserted as needed.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance will enter standby mode.

5. OPERATING INSTRUCTIONS

5.1. Basic Operation

1. **Power On:** Press the power button on the touch panel to turn on the appliance.
2. **Select Basket:** If using dual baskets, select 'L' for left or 'R' for right, or 'L+R' for synchronized cooking.
3. **Set Temperature:** Use the temperature controls (80°C to 200°C) to set the desired cooking temperature.
4. **Set Time:** Use the timer controls (0 to 60 minutes) to set the desired cooking time.
5. **Start Cooking:** Press the start button to begin the cooking cycle.



Image: A hand touching the digital control panel, demonstrating the ease of setting cooking parameters.



Image: A close-up view of the air fryer's digital display, showing temperature and time settings for both baskets.

5.2. Pre-programmed Modes

The Cecofry Dual 9000 features 6 pre-programmed modes for common food types. Select the desired mode from the control panel, and the appliance will automatically set the optimal time and temperature.

- Consult the manual or the appliance's interface for specific food types covered by these modes.
- You can manually adjust the time and temperature even after selecting a pre-programmed mode.

5.3. Using the Dual Baskets and Divider

The unique design allows for versatile cooking:

- **Two Separate Dishes:** Cook different foods simultaneously at different temperatures and times using the two 4.5L baskets.
- **Large Capacity:** Remove the central divider to create a single 9L cooking space, ideal for larger items like a whole chicken or ribs.



Image: A large rack of ribs being brushed with sauce inside the air fryer, demonstrating the spacious 9L capacity when the divider is removed.



Image: A user carefully removing cooked food from one of the air fryer baskets, showcasing the easy access to prepared meals.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your air fryer.

- **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Baskets and Crisper Plates:** Wash these parts with warm, soapy water. They are non-stick for easy cleaning. Avoid abrasive cleaning tools.
- **Main Unit:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Never immerse the main unit in water.
- **Interior:** Gently wipe the interior with a damp cloth. For stubborn residue, use a soft brush and mild detergent.
- **Storage:** Store the air fryer in a cool, dry place once it is clean and dry.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; appliance overheated.	Ensure plug is fully inserted. Test outlet with another device. Unplug and let cool for 30 minutes.
Food is not cooked evenly.	Overfilled basket; food not shaken/flipped.	Do not overfill baskets. Shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; high-fat food.	Clean baskets and crisper plates thoroughly. For high-fat foods, drain excess fat during cooking.
Baskets difficult to close.	Basket not aligned correctly; food obstructing closure.	Ensure baskets are empty and aligned properly before pushing in. Check for food debris.

8. SPECIFICATIONS

Brand: Cecotec
Model Number: A01_EU01_100149
Color: Black and Stainless Steel
Capacity: 9 Liters (divisible into 2 x 4.5 Liters)
Power: 2850 Watts
Voltage: 230 Volts
Material: Stainless Steel
Dimensions (L x W x H): 35.5 x 36 x 31 cm
Item Weight: 7.04 Kilograms
Temperature Range: 80°C to 200°C
Timer: 0 to 60 minutes
Special Features: Dual temperature setting, 6 pre-programmed modes, PerfectCook technology, Overheat protection, Non-slip base.

9. WARRANTY AND SUPPORT

Cecotec products are manufactured to the highest quality standards. For warranty information, technical support, or spare parts availability, please refer to the official Cecotec website or contact their customer service directly.

- **Spare Parts Availability:** 10 Years (as per product specifications).
- **Contact:** Visit www.cecotec.com for support and contact information.



