

Cecotec A01_EU01_101135

Cecotec Cecofry&Grill Smokin' 6500 Air Fryer Instruction Manual

Model: A01_EU01_101135

Brand: Cecotec

INTRODUCTION

Thank you for purchasing the Cecotec Cecofry&Grill Smokin' 6500 Air Fryer. This appliance combines air frying, grilling, and smoking functionalities to offer versatile cooking options. To ensure safe and optimal performance, please read this instruction manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for

proper ventilation.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Cecofry&Grill Smokin' 6500 Air Fryer:

- Main Unit with Control Panel
- Removable Cooking Basket with Viewing Window
- Grill Plate (Grillin Style)
- Pizza Plate
- Smoking Box (for wood chips/pellets)
- Power Cord



Figure 1: Overview of the Cecotec Cecofry&Grill Smokin' 6500 Air Fryer, highlighting its multi-functionality including air frying, grilling, and smoking capabilities.



Figure 2: Front view of the appliance, showing the cooking basket with its integrated handle and viewing window.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Remove any protective films or stickers.
2. **Initial Cleaning:** Before first use, clean the cooking basket, grill plate, and pizza plate with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, flat, heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation. Do not place it near flammable materials.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Burn-off (Optional but Recommended):** For the first use, it is recommended to run the appliance empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. Ensure the area is well-ventilated during this process.



Figure 3: Illustration of the integrated smoking function, showing the placement of wood chips or pellets for infusing flavor.

Basic Operation

- **Power On/Off:** Press the power button on the control panel to turn the appliance on or off.
- **Temperature Adjustment:** Use the temperature control buttons to set the desired cooking temperature (40-200°C).
- **Time Adjustment:** Use the timer control buttons to set the desired cooking time.
- **Pre-set Menus:** The appliance features 10 pre-set cooking programs for common dishes. Select the desired program from the control panel.

Cooking Functions

The Cecofry&Grill Smokin' 6500 offers multiple cooking modes:

- **Air Frying:** Ideal for crispy results with minimal oil. Place food in the cooking basket.
- **Grilling:** Use the Grillin Style plate for searing meats and achieving grill marks. The double resistance ensures even cooking.
- **Smoking:** Add wood chips or pellets to the designated smoking box to infuse a smoky flavor into your food.
- **Pizza Baking:** Use the pizza plate for authentic, crispy-crust pizzas.



Figure 4: Overhead view demonstrating food (steak and potatoes) being cooked within the air fryer basket.



Figure 5: A user seasoning a whole chicken and vegetables directly in the air fryer basket, showcasing its capacity.



Figure 6: A close-up view of a pizza cooking inside the air fryer, demonstrating the use of the pizza plate.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Cooking Basket and Accessories:** The cooking basket, grill plate, and pizza plate are non-stick and can be washed with warm soapy water. For stubborn food residue, soak them in warm water for a few minutes before cleaning. These parts may also be dishwasher safe (refer to specific product markings).
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
4. **Interior:** Clean the interior of the appliance with a damp cloth. Remove any food debris from the heating element area once cooled.

5. **Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a cool, dry place.



Figure 7: A user carefully removing the cooking basket containing a fully cooked whole chicken, demonstrating ease of access for cleaning.

TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-----------------------------|---|---|
| Appliance does not turn on. | Not plugged in; Power outlet malfunction; Appliance malfunction. | Ensure the power cord is securely plugged into a working outlet. Try a different outlet. If problem persists, contact customer support. |
| Food is not cooked evenly. | Overcrowding the basket; Incorrect temperature/time; Food not shaken/flipped. | Do not overcrowd the basket; cook in smaller batches if necessary. Adjust temperature and time according to recipe. Shake or flip food halfway through cooking. |

| Problem | Possible Cause | Solution |
|--|--|--|
| White smoke coming from the appliance. | Grease residue from previous use; High fat content food. | Clean the basket and interior thoroughly after each use. For high-fat foods, drain excess fat during cooking. |
| Error message on display. | Internal malfunction or sensor issue. | Unplug the appliance, wait a few minutes, then plug it back in. If the error persists, contact customer support. |

PRODUCT SPECIFICATIONS







- **Model Name:** Cecofry&Grill Smokin' 6500
- **Model Number:** A01_EU01_101135
- **Brand:** Cecotec
- **Power:** 2200 Watts
- **Voltage:** 230 Volts (AC)
- **Capacity:** 6.5 Liters
- **Material:** Stainless Steel
- **Color:** Inox
- **Item Weight:** 5.16 Kilograms
- **Special Features:** Automatic shut-off, Temperature control, Timer, Programmable
- **Country of Origin:** Spain

WARRANTY INFORMATION

Cecotec products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details. Keep your purchase receipt as proof of purchase for any warranty claims. Spare parts availability for this model is indicated for 10 years from the date of purchase.

CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact Cecotec customer service. Contact details can typically be found on the official Cecotec website or on the warranty card provided with your appliance. You may also visit the official Cecotec website for FAQs and additional support resources:www.cecotec.com

| | |
|--|---|
|  <p>CECOTEC CECOFRY&GRILL SMOKIN' 6500 Двухканальная цифровая мультиварка с функцией гриля</p> <p>Преимущества: Скорость 1. Быстрый нагрев 2. Длительное сохранение тепла 3. Гриль 4. Чаша 5 л 5. Термометр 6. Термостат 7. Термометр</p> | <p>Cecotec Cecofry&Grill Smokin' 6500: Руководство пользователя для Цифровой мультиварки с двумя нагревательными элементами и копильней</p> <p>Полное руководство пользователя для Cecotec Cecofry&Grill Smokin' 6500. Инструкции по эксплуатации, безопасности, чистке, уходу и технические характеристики мультиварки с функцией гриля и копильней.</p> |
|  <p>CECOTEC CECOFRY&GRILL DUOHEAT 4000 CECOFRY&GRILL DUOHEAT 6500 Мультиварка с грилем</p> | <p>Cecofry&Grill Duoheat 4000/6500: Manual de Instrucciones Cecotec</p> <p>Manual de instrucciones para la freidora de aire Cecofry&Grill Duoheat 4000 y 6500 de Cecotec. Incluye guías de seguridad, funcionamiento, limpieza, mantenimiento y solución de problemas.</p> |
|  <p>CECOTEC CECOFRY&GRILL DUOHEAT 4000 CECOFRY&GRILL DUOHEAT 6500 Мультиварка с грилем</p> | <p>Cecotec Cecofry&Grill Duoheat 4000/6500 Instruction Manual: Healthy Cooking Guide</p> <p>Comprehensive user manual for Cecotec Cecofry&Grill Duoheat 4000 and 6500 air fryers. Learn about safety, operation, cleaning, troubleshooting, and technical specifications for healthy and versatile cooking.</p> |
|  <p>CECOTEC CECOFRY&GRILL DUOHEAT 4000 CECOFRY&GRILL DUOHEAT 6500 Мультиварка с грилем</p> | <p>Cecofry&Grill Duoheat 4000/6500: Manual de Instrucciones y Guía de Uso Cecotec</p> <p>Manual completo de instrucciones para la freidora de aire y grill Cecofry&Grill Duoheat 4000 y 6500 de Cecotec. Aprenda a usar, limpiar y mantener su electrodoméstico para una cocina saludable.</p> |
|  <p>CECOTEC CECOFRY&GRILL DUOHEAT 4000 CECOFRY&GRILL DUOHEAT 6500 Мультиварка с грилем</p> | <p>Cecofry&Grill Duoheat 4000/6500: Manual de Instrucciones y Guía de Uso</p> <p>Este manual de instrucciones proporciona información detallada sobre el uso seguro y eficiente de las freidoras de aire Cecofry&Grill Duoheat 4000 y 6500 de Cecotec. Cubre desde las precauciones de seguridad hasta el funcionamiento, limpieza y solución de problemas comunes.</p> |
|  <p>CECOTEC CECOFRY&GRILL DUOHEAT 8000 Freidora de aire digital con doble resistencia</p> | <p>Cecofry&Grill Duoheat 8000: Manual de Instrucciones y Uso</p> <p>Descubra el Cecofry&Grill Duoheat 8000, la freidora de aire digital de Cecotec con doble resistencia. Este manual proporciona instrucciones detalladas sobre su funcionamiento, seguridad, limpieza y mantenimiento para una experiencia culinaria óptima.</p> |