



[Manuals.plus](#) /

› [Gosasa](#) /

› Gosasa Digital Watch Model 2325 User Manual

Gosasa 2325

Gosasa Digital Watch Model 2325 User Manual

Your guide to setting up and using your Gosasa Digital Watch.

1. INTRODUCTION

Thank you for choosing the Gosasa Digital Watch Model 2325. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new digital watch. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

2. PRODUCT OVERVIEW

The Gosasa Digital Watch Model 2325 is a versatile timepiece designed for daily use, featuring a large digital display, comfortable silicone strap, and 50M water resistance. It includes essential functions such as time, date, week, alarm, chronograph, countdown, and an EL backlight for visibility in low light conditions.



FEATURE SET



Image: Front view of the Gosasa Digital Watch, highlighting the 'SET/EL' button (top right) and the 'MODE' button (bottom right).

Key Features:

- **Large Digital Display:** Easy-to-read numbers with EL backlight.
- **Multi-Functional:** Displays time, date, week, and includes alarm, chronograph, and countdown functions.
- **Comfortable Design:** Soft silicone strap with adjustable porous design.
- **50M Water Resistance:** Suitable for hand-washing, rain, cold showers, and shallow swimming.
- **Durable Construction:** ABS case and stainless steel buckle.

3. SETUP

Before using your watch, you may need to set the time, date, and other preferences.

3.1 Button Functions

- **MODE Button:** Cycles through display modes (Time, Date, Alarm, Chronograph, Countdown). In setting mode, it moves to the next setting item.
- **SET/EL Button:** Activates the EL backlight. In setting mode, it adjusts the selected value.

3.2 Setting Time and Date

1. From the normal time display, press the **MODE** button repeatedly until the seconds start flashing. This indicates you are in time setting mode.
2. Press the **SET/EL** button to adjust the seconds to zero (if desired).
3. Press the **MODE** button to move to the hour setting. The hour digits will flash.
4. Press the **SET/EL** button to adjust the hour. Pay attention to the 'P' indicator for PM if using 12-hour format.
5. Press the **MODE** button to move to the minute setting. The minute digits will flash.
6. Press the **SET/EL** button to adjust the minutes.
7. Continue pressing the **MODE** button to cycle through year, month, and day settings, adjusting each with the **SET/EL** button.
8. Once all settings are complete, press the **MODE** button until the display returns to normal time mode.

3.3 12/24 Hour Format

While in time setting mode (seconds flashing), press the **SET/EL** button to toggle between 12-hour (with 'A' for AM, 'P' for PM) and 24-hour formats.

4. OPERATING INSTRUCTIONS

4.1 Display Modes

Press the **MODE** button to cycle through the following display modes:

- **Time Display:** Shows current time (hours, minutes, seconds), day of the week.
- **Date Display:** Shows month and day.
- **Alarm Mode:** Set and activate/deactivate the daily alarm.
- **Chronograph (Stopwatch) Mode:** Measure elapsed time.
- **Countdown Timer Mode:** Set a countdown from a specified time.

FUNCTION OVERVIEW

EACH FUNCTIONAL DESIGN, ALL FOR YOUR CARING SERVICE, RECORDING EVERY MOMENT OF LIFE.



TIME



WEEK



DATE



EL LIGHT



WR 50M



12/24 HOUR

Image: A visual overview of the watch's main functions, including time, day of the week, date, EL light, 50M water resistance, and 12/24 hour format.

4.2 Using the EL Backlight

Press the **SET/EL** button once to illuminate the display for a few seconds. This is useful for reading the time in dark environments.

4.3 Setting the Alarm

1. From the normal time display, press the **MODE** button until "AL" or "ALARM" appears, and the alarm time digits flash.
2. Press the **SET/EL** button to adjust the hour.
3. Press the **MODE** button to move to the minute setting.
4. Press the **SET/EL** button to adjust the minutes.
5. Press the **MODE** button to exit alarm setting.
6. To activate/deactivate the alarm, press the **SET/EL** button while in alarm mode (without digits flashing). An alarm icon will appear/disappear to indicate its status.

4.4 Using the Chronograph (Stopwatch)

1. From the normal time display, press the **MODE** button until "ST" or "STOPWATCH" appears. The display will show "00:00:00".
2. Press the **SET/EL** button to start the stopwatch.
3. Press the **SET/EL** button again to pause the stopwatch.
4. Press the **SET/EL** button again to resume.
5. To reset the stopwatch, press the **MODE** button while the stopwatch is paused.
6. Press the **MODE** button to exit chronograph mode.

4.5 Using the Countdown Timer

1. From the normal time display, press the **MODE** button until "CD" or "COUNTDOWN" appears. The display will show a default countdown time.
2. To set the countdown time, press and hold the **MODE** button until the digits flash.
3. Press the **SET/EL** button to adjust the hours, then press **MODE** to move to minutes, and adjust with **SET/EL**.
4. Press **MODE** to exit setting mode.
5. Press the **SET/EL** button to start the countdown.
6. Press the **SET/EL** button again to pause/resume.
7. To reset the countdown, press the **MODE** button while the countdown is paused.
8. Press the **MODE** button to exit countdown mode.

4.6 Water Resistance Guidelines

Your Gosasa Digital Watch is rated for 50 meters (5 ATM) water resistance. This means it is suitable for:

- Daily use, such as hand-washing and rain exposure.
- Cold showers.
- Swimming in shallow water.

Important Precautions:

- **DO NOT** press any buttons while the watch is submerged in water.
- **AVOID** hot water, steam, or prolonged underwater activities such as diving.
- Excessive exposure to water or extreme temperatures may reduce the lifespan of the watch's seals and overall water resistance.



Image: The watch shown with water droplets, symbolizing its 50M water resistance feature.

5. MAINTENANCE

5.1 Cleaning Your Watch

To keep your watch clean, wipe it regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch case or strap.

5.2 Battery Replacement

The watch is powered by a high-quality battery with an approximate lifespan of 2 years. When the display becomes dim or stops functioning, it's time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

5.3 Storage

When not in use for extended periods, store your watch in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery or dead battery.	Replace the battery.
Time is incorrect.	Time was not set correctly or reset accidentally.	Refer to Section 3.2 "Setting Time and Date" to reset the time.

Problem	Possible Cause	Solution
Alarm sounds unexpectedly or cannot be turned off.	Alarm was set and activated.	Refer to Section 4.3 "Setting the Alarm" to deactivate the alarm.
Watch stopped working after contact with water.	Water resistance limits exceeded (e.g., hot water, button presses underwater).	Dry the watch thoroughly. If it still doesn't work, contact customer support. Avoid exceeding water resistance limits in the future.
Display is difficult to read in the dark.	EL backlight not activated.	Press the SET/EL button to activate the backlight.

7. SPECIFICATIONS

Model Name:	2325
Brand:	Gosasa
Movement:	Digital Quartz
Case Material:	ABS (Rubber)
Band Material:	Silicone
Buckle Material:	Stainless Steel
Window Material:	Resin (Mineral Glass)
Case Diameter:	40.3mm (Length) x 26mm (Width)
Case Thickness:	10.8mm
Band Width:	16mm
Band Perimeter:	235mm
Weight:	27.4g
Water Resistance:	50M (5 ATM)
Functions:	Time, Date, Week, EL Light, 12/24 Hour, Alarm, Chronograph, Countdown
Battery Life:	Approximately 2 years

8. WARRANTY AND SUPPORT

8.1 Limited Warranty

Your Gosasa Digital Watch Model 2325 comes with a limited warranty. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accidents, unauthorized repairs, or exceeding water resistance limits.

8.2 Customer Support

If you have any questions regarding the operation, maintenance, or quality of your watch, please contact customer service through your Amazon order message center. Our support team will respond promptly and assist you in accordance with Amazon's return and refund policy.

9. VIDEO GUIDE

Watch this official video for a visual guide on the features and operation of the Gosasa Digital Watch.

Your browser does not support the video tag.

Video: An official demonstration of the Gosasa Digital Watch, showcasing its design, display, and various functions.