

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [RedLemon](#) /

› [RedLemon Fireplace TV Stand Model SDPC70FP36-ROWAW Instruction Manual](#)

RedLemon SDPC70FP36-ROWAW

RedLemon Fireplace TV Stand Instruction Manual

Model: SDPC70FP36-ROWAW

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your RedLemon Fireplace TV Stand. Please read all instructions carefully before assembly and use to ensure proper function and safety.

Important Safety Warnings:

- Always follow the assembly instructions carefully to ensure the stability and safety of the furniture.
- Keep children and pets away from the assembly area.
- Do not attempt to assemble the furniture without proper tools and knowledge.
- Always test the stability of the assembled furniture before use.
- Ensure the product is placed on a level, stable surface to prevent tipping.
- Do not overload shelves or drawers beyond their specified weight capacities.



Image 1.1: RedLemon Fireplace TV Stand (Antique White) in a living room environment.

2. SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended to have at least two people for assembly. Ensure all parts are present before beginning. Refer to the included assembly guide for detailed step-by-step instructions.

2.1 Unpacking and Part Identification

- Carefully unpack all components and hardware from the packaging.
- Verify that all parts listed in the assembly guide are present and undamaged.
- The item will be delivered in 2 packages and may not arrive on the same day.

Product Dimensions



The item will be delivered in 2 Packages and may NOT arrived on same day



Image 2.1: Product dimensions and packaging information, indicating delivery in two boxes.

2.2 Assembly Steps

1. Begin by attaching the legs to the base of the TV stand.
2. Assemble the main frame of the console according to the diagrams.
3. Install the electric fireplace insert into its designated compartment.
4. Attach the sliding doors and install the adjustable shelves.
5. Insert the drawers into their respective slots.
6. Ensure all screws and fasteners are securely tightened.



Image 2.2: Overview of the TV stand's top surface, highlighting dimensions and storage features.

2.3 Placement Considerations

- Place the TV stand on a flat, stable surface.
- Ensure adequate clearance around the electric fireplace for ventilation.
- The 70-inch wide tabletop is designed to accommodate TVs up to 80 inches.



Image 2.3: Visual guide for TV size compatibility, showing the stand fits TVs up to 80 inches.

3. OPERATING INSTRUCTIONS

This section details how to operate the electric fireplace and LED lighting features of your TV stand.

3.1 Electric Fireplace Operation

The 36-inch electric fireplace insert features realistic 3D flame effects, glowing logs, and embers. It can be operated with or without heat.

- **Power On/Off:** Use the power switch on the control panel or the remote control to turn the fireplace on or off.
- **Heat Function:** Adjust the temperature settings to provide heat for areas up to 400 sq. ft. The heat function can be turned off while the flame effect remains active.
- **Flame Colors:** Choose from 7 flame color options to customize the ambiance.
- **Timer:** Set the operational timer for 1 to 8 hours.
- **Overheat Protection:** The fireplace is equipped with overheat protection for safety.



36" Electric Fireplace with 7 Flame Colors

 Timer 1-8H

 Overheat Protection

 Heat up 400 sq. ft.

 Fireplace without noise



Image 3.1: Electric fireplace control panel, remote, and various flame color options.

3.2 LED Lighting

The TV stand includes LED lights with 7 color options to enhance the aesthetic.

- **Activation:** The LED lights can be controlled independently or in conjunction with the fireplace.
- **Color Selection:** Cycle through the 7 available LED colors using the control panel or remote to match your preference.



Image 3.2: Detail of slatted sliding doors, adjustable shelf, and LED lighting in a side compartment.

3.3 Storage Features

- **Slatted Sliding Doors:** Access the side compartments by sliding the doors.
- **Adjustable Shelves:** Customize storage space within the cabinets by adjusting shelf height.
- **Open Shelf:** A central open shelf is provided for media consoles or soundbars.
- **Drawers:** Two small drawers offer additional storage for smaller items.

Your browser does not support the video tag.

Video 3.1: A short video demonstrating the features and appearance of the RedLemon Fireplace TV Stand.

4. MAINTENANCE

Proper care and maintenance will extend the life and appearance of your TV stand.

4.1 Cleaning the Furniture

- Wipe surfaces with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the engineered wood finish.
- Promptly clean up spills to prevent staining.

4.2 Electric Fireplace Care

- Ensure the fireplace is unplugged before cleaning.
- Dust the exterior and air vents with a soft, dry cloth.
- Do not obstruct the air intake or exhaust vents.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your RedLemon Fireplace TV Stand.

5.1 Electric Fireplace Issues

- **No Power:** Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
- **No Heat:** Verify that the heat function is activated on the control panel or remote. Ensure the thermostat setting is higher than the room temperature. Check for any obstructions in the heat vents.
- **Flames Not Visible:** Confirm the flame effect is turned on. Adjust brightness settings if available.
- **Remote Not Working:** Replace the remote control batteries. Ensure there are no obstructions between the remote and the fireplace receiver.

5.2 LED Lighting Issues

- **LEDs Not Lighting:** Check power connection. Ensure the LED function is activated via the control panel or remote.
- **Incorrect Color:** Cycle through the color options to select the desired setting.

5.3 Structural Issues

- **Wobbly Stand:** Re-check all assembly fasteners to ensure they are tight. Ensure the stand is on a level surface.
- **Sliding Doors Sticking:** Clean the tracks of the sliding doors. Ensure no debris is obstructing their movement.

Your browser does not support the video tag.

Video 5.1: A general product video showcasing the design and features of the TV stand, which may assist in visual troubleshooting.

6. SPECIFICATIONS

Feature	Detail
Model Number	SDPC70FP36-ROWAW

Product Dimensions	70" W x 15.6" D x 34" H (15.6 x 70 x 34 inches)
Item Weight	130.1 pounds
Material	Engineered Wood (MDF/particleboard/plywood)
Color	Antique White
Style	Mid-Century Modern
Fireplace Size	36 inches
Fireplace Features	7 Flame Colors, 1-8H Timer, Heat up to 400 sq. ft., Overheat Protection
LED Lights	7 Color Options
TV Size Compatibility	Up to 80 inches
Tabletop Weight Capacity	150 Lbs
Drawer Weight Capacity	30 Lbs



Image 6.1: Detail of the cable management opening.

7. WARRANTY INFORMATION

Specific warranty details for the RedLemon Fireplace TV Stand are typically provided at the point of purchase or within the product packaging. Please retain your proof of purchase for any warranty claims.

For detailed warranty terms and conditions, please refer to the documentation included with your product or contact the retailer from whom you purchased the item.

8. CUSTOMER SUPPORT

If you require assistance with assembly, operation, or troubleshooting that is not covered in this manual, please contact the retailer or manufacturer directly.

When contacting support, please have your product model number (SDPC70FP36-ROWAW) and proof of purchase readily available.

