

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HCDZ](#) /

› [HCDZ Replacement Remote Control User Manual for JVC Speaker Systems](#)

HCDZ XS-N3119BA, RM-SXSN3119BA, RM-SRVN328, RV-NB22A, RV-NB22BT, RV-N328BA

HCDZ Replacement Remote Control User Manual

For JVC XS-N3119BA, RM-SXSN3119BA, RM-SRVN328, RV-NB22A, RV-NB22BT, RV-N328BA Portable Speaker Systems

INTRODUCTION

This manual provides instructions for the HCDZ Replacement Remote Control, designed for use with various JVC Portable Speaker Systems including models XS-N3119BA, RM-SXSN3119BA, RM-SRVN328, RV-NB22A, RV-NB22BT, and RV-N328BA. This remote is an infrared (IR) replacement and requires no programming.

PACKAGE CONTENTS

- 1 x HCDZ Replacement Remote Control

Note: Batteries and a detailed instruction booklet are not included in the package.

SETUP: INSTALLING BATTERIES

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Important Safety Information:

- Do not mix new batteries with old ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage and corrosion.



Image: Back of the remote control with the battery cover removed, revealing the two AAA battery slots. The battery polarity markings are visible.



Image: Back of the remote control with the battery cover securely in place, showing the closed battery compartment.

OPERATING INSTRUCTIONS

This HCDZ replacement remote control is designed to work immediately after batteries are inserted, without any additional programming. It functions as an infrared (IR) remote.

1. Ensure your JVC speaker system is powered on.
2. Point the remote control directly at the IR sensor of your JVC speaker system.
3. Press the desired function button (e.g., Power, Volume Up/Down, Play/Pause) to control your speaker system.

Important:

- Maintain a clear line of sight between the remote control and the speaker system's IR sensor.
- The effective range of the remote control may vary depending on environmental conditions and battery strength.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the remote in a cool, dry place. Avoid exposing it to direct sunlight, extreme heat, or high humidity.
- **Battery Replacement:** Replace all batteries when the remote's performance degrades. Always replace with fresh batteries of the same type.
- **Environmental Protection:** Do not dispose of used batteries with household waste. Follow local regulations for battery recycling.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

Problem	Solution
Remote control is unresponsive or intermittent.	<ul style="list-style-type: none">• Replace the remote control batteries with new ones.• Check battery terminals to ensure they are clean and making proper contact.
Remote control does not affect the speaker system.	<ul style="list-style-type: none">• Ensure the remote is within effective range of the speaker system. Move closer to the device.• Remove any obstructions (e.g., furniture, objects) between the remote and the IR sensor of the speaker system.• Make sure the JVC speaker system is powered on and its power cord is securely plugged in.• Ensure the remote sensor on the speaker system is not exposed to direct sunlight or strong lighting apparatuses, as this can cause malfunction.

SPECIFICATIONS

- **Brand:** HCDZ
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** JVC Speaker Systems (XS-N3119BA, RM-SXSN3119BA, RM-SRVN328, RV-NB22A, RV-NB22BT, RV-N328BA)
- **Max Number of Supported Devices:** 1
- **Special Feature:** No programming needed, works out of the package
- **Batteries Required:** 2 x AAA (not included)
- **Manufacturer:** HCDZ

CUSTOMER SUPPORT

For further assistance or inquiries regarding your HCDZ Replacement Remote Control, please contact your retailer or the manufacturer directly. Please have your product model information ready when contacting support.

© 2024 HCDZ. All rights reserved. Product specifications are subject to change without notice.