

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Smelluck](#) /

> [Smelluck BB706 Electric Baby Swing Instruction Manual](#)

## Smelluck BB706

# Smelluck BB706 Electric Baby Swing Instruction Manual

Model: BB706 | Brand: Smelluck

## 1. INTRODUCTION

Thank you for choosing the Smelluck BB706 Electric Baby Swing. This manual provides essential information for the safe assembly, operation, and maintenance of your baby swing. Please read all instructions carefully before use and retain this manual for future reference.



Image 1.1: The Smelluck BB706 Electric Baby Swing in use, illustrating its design and functionality for infants.

## 2. SAFETY INFORMATION

**WARNING:** Failure to follow these warnings and instructions could result in serious injury or death.

- This product is intended for infants aged 0 to 6 months and weighing up to 20 pounds (9 kg). Do not use for children who can sit up unassisted or weigh more than 20 pounds.
- Always use the five-point safety harness. Ensure it is properly adjusted and securely fastened around your child.
- Never leave your child unattended in the swing.
- Do not use the swing if it is damaged or broken. Check all components regularly for wear and tear.
- Place the swing on a flat, level surface. Do not place near stairs, heat sources, or objects that

could fall on the child.

- Keep children away from the swing during assembly and disassembly.
- Bluetooth connectivity and app control range is 0-5 meters. Ensure you are within this range for reliable operation.



Image 2.1: A baby safely secured in the swing, highlighting the five-point safety harness for infant protection.

### 3. ASSEMBLY INSTRUCTIONS

The Smelluck BB706 Electric Baby Swing is designed for easy assembly and disassembly. Follow these general steps:

1. Unpack all components from the packaging. Verify all parts are present according to the packing list (refer to product packaging for specific list).
2. Attach the seat unit to the base. Ensure it clicks securely into place.
3. Insert the power adapter into the designated port on the swing base and plug it into a wall outlet. Alternatively, use a power bank for portable use.
4. If desired, attach the adjustable canopy and mosquito net.
5. Before placing your infant, ensure the swing is in the 'locked' position to prevent unintended motion during placement.



Image 3.1: Power connection options for the baby swing, including wall outlet and power bank compatibility.

## 4. OPERATING INSTRUCTIONS

### 4.1. Powering the Swing

Connect the swing to a power source using the provided adapter. The swing can be powered via a standard wall outlet or a portable power bank for outdoor or travel use.

### 4.2. Control Methods

The Smelluck BB706 offers three control methods:

- **IMD Touch Screen:** Located on the swing base for direct control.
- **Remote Control:** A handheld remote for convenient adjustments from a distance.
- **Exclusive App:** Connects via Bluetooth to your smartphone for smart control and music playback.



Image 4.1: Overview of the three available control methods for the baby swing.

### 4.3. Adjusting Swing Speed and Timer

The swing features 5 scientifically designed swinging angles/speeds and 3 timer settings.

- **Swing Speeds:** Select from 5 different speeds (18°, 21°, 23°, 25°, and 31°) to mimic a parent's natural rocking motion.
- **Timer Settings:** Set the swing to operate for 8, 15, or 30 minutes.



Image 4.2: Visual representation of the 5 swing speeds and 3 timer options.

#### 4.4. Music Functions

The swing includes built-in lullabies and Bluetooth music playback.

- **Built-in Lullabies:** Choose from 10 preset lullabies.
- **Bluetooth Music:** Connect your smartphone via Bluetooth to play your baby's favorite music directly through the swing's speakers. Adjust volume as needed.



Image 4.3: Demonstrates the music features, including 10 built-in lullabies and Bluetooth music streaming.

#### 4.5. Canopy and Mosquito Net

The swing comes with an adjustable canopy and a removable mosquito net. Attach the canopy to provide shade and the mosquito net for protection against insects, especially during outdoor use.

# Removable Canopy with Mosquito Net



Image 4.4: Illustrates the versatility of the swing with and without the canopy and mosquito net.

## 4.6. Locking/Unlocking Swing Motion

Before use, pull out the swing mechanism to unlock it for motion. To stop the swinging motion and lock the seat in a stationary position, push the mechanism in.

## 5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and hygiene of your baby swing.

- **Cushion and Mattress:** The super-soft crystal velvet cushion and removable soft mattress are made of skin-friendly, breathable fabric and are machine washable. Detach them from the swing for cleaning.
- **Frame:** Wipe the aircraft aluminum frame and ABS plastic components with a damp cloth and mild soap. Do not use abrasive cleaners.
- **Storage:** The lightweight design allows for easy disassembly and compact storage when not in use.

# Detachable & Machine Washable



Image 5.1: Demonstrates the detachable and machine-washable features of the swing's fabric components.

# Detachable Mattress for Year-Round Use

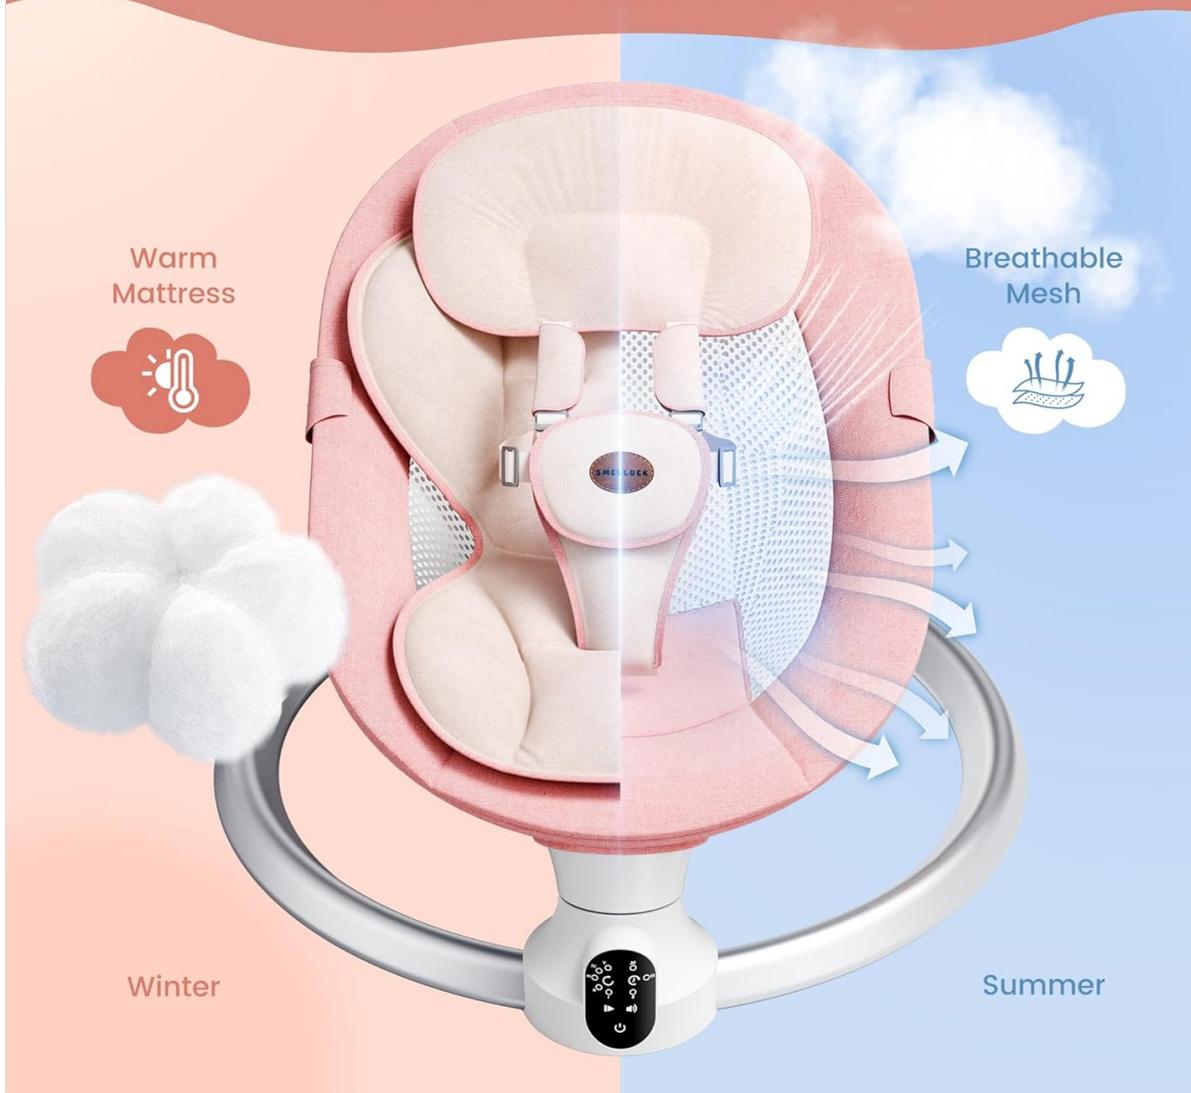


Image 5.2: The detachable mattress offers comfort for both warm and cool seasons.

## 6. TROUBLESHOOTING

If you encounter issues with your Smelluck BB706 Electric Baby Swing, refer to the following common solutions:

- **Swing Not Moving:** Ensure the swing mechanism is pulled out to the 'unlocked' position. Check that the power adapter is securely connected and the power source is active.
- **No Sound/Music:** Verify the volume settings on the swing, remote, or app. If using Bluetooth, ensure your device is properly paired and within the 0-5 meter range.
- **App Connectivity Issues:** Ensure Bluetooth is enabled on your smartphone and the swing. Restart the app and try reconnecting. Ensure you are within the specified Bluetooth range.
- **Unusual Noises:** Check for any obstructions around the swing mechanism or seat. Ensure all parts are securely assembled.
- **General Malfunction:** Disconnect the power, wait a few minutes, and then reconnect. If the issue persists, contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	BB706
Product Dimensions	14 x 5 x 15 inches (35.5 x 12.7 x 38.1 cm)
Item Weight	8.68 pounds (3.94 kg)
Maximum Weight Recommendation	20 Pounds (9 kg)
Age Range Recommendation	0-6 months
Material Type	ABS Plastic, Aluminum Alloy, Iron, Velvet
Material Composition	Aluminum
Batteries Required	No
Portability	Yes
Control Methods	IMD Touch Screen, Remote Control, Bluetooth App
Swing Speeds	5 (18°, 21°, 23°, 25°, 31°)
Timer Settings	8, 15, 30 minutes
Music	10 Built-in Lullabies, Bluetooth Music Playback

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the retailer. For technical support, product inquiries, or assistance with troubleshooting, please contact Smelluck customer service through the official brand website or your purchase platform.

**Smelluck Brand Commitment:** Smelluck focuses on the research and development of high-quality baby products, understanding the needs and growth characteristics of babies to provide safe and intimate products.



Image 8.1: The official Smelluck brand logo.