

Smelluck BB706

Smelluck Baby Swing Instruction Manual

Model: BB706

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembling and using the Smelluck Baby Swing. Failure to follow these instructions could result in serious injury or death.

- **Age and Weight Limit:** This infant swing is suitable for infants 0 to 9 months old and weighing 0 to 20 lbs (9 kg). Do not use for children outside this range.
- **Harness Use:** Always use the upgraded five-point safety harness to secure your child in the swing. Ensure it is properly adjusted and snug.
- **Supervision:** Never leave your child unattended in the swing. Constant supervision is required.
- **Placement:** Place the swing on a flat, stable surface away from stairs, heat sources, and cords that could pose a strangulation hazard.
- **Inspection:** Regularly inspect the swing for loose parts, damaged components, or worn fabric. Discontinue use if any damage is found.
- **Assembly:** Ensure all parts are correctly assembled and securely fastened before each use.

2. PRODUCT OVERVIEW

The Smelluck Baby Swing is designed to provide a comfortable and soothing experience for your infant. It features multiple control options, adjustable swing speeds, built-in lullabies, and a soft, breathable design.



Image: The Smelluck Baby Swing in light gray, featuring a baby comfortably seated, with illustrations of remote control and smartphone app control options.

3. SETUP AND ASSEMBLY

The Smelluck Baby Swing is designed for quick assembly and disassembly, making it easy to store or transport.

3.1 Initial Assembly

- Follow the detailed assembly instructions provided in the included user manual.
- Ensure all connections are secure. If installation shows instability, use a power screwdriver to fix it.
- **Important Note:** Before enabling the product positioning swing function, be sure to pull out the pin on the back of the main unit.

3.2 Canopy and Mosquito Net Installation

The swing includes a removable canopy with a mosquito net for added protection and comfort.

Removable Canopy with Mosquito Net



Image: Visual guide demonstrating the baby swing's configurations: without canopy, with canopy, and with canopy and integrated mosquito net for sun and insect protection.

3.3 Storage

The swing can be easily disassembled and stored under a bed or couch to save space.

Quick Assembly & Disassembly

Can be stored anywhere to save space



Image: The baby swing shown in a compact, folded state, illustrating how it can be conveniently stored under furniture like a bed or couch.

4. OPERATING INSTRUCTIONS

4.1 Control Methods

The Smelluck Baby Swing offers three convenient ways to control its functions:

- **IMD Touch Screen:** Use the integrated touch panel on the swing's base for direct control.
- **Remote Control:** A dedicated remote control is included for easy operation from a distance.
- **Exclusive APP Function (Bluetooth):** Connect your smartphone via Bluetooth to the exclusive Smelluck app. This allows control from 0-5 meters away.

3 Modes to Control



Image: An illustration highlighting the three control options for the baby swing: smartphone app control via Bluetooth, a physical remote control, and the integrated IMD touch control panel on the swing's base.

4.2 Swing Speeds and Timer Settings

The swing features 5 natural swing speeds and adjustable timer settings to suit your baby's needs.

- **Swing Speeds:** Choose from five scientifically designed swinging angles (18°, 21°, 23°, 25°, and 31°) that mimic a parent's natural rocking motion.
- **Timer:** Set the swing to operate for 8, 15, or 30 minutes.
- To stop swinging, push the swing in to lock it. To enable swinging, pull the swing out to unlock it.

5 Swing Angles

Quickly sooth your baby with quiet operation



Image: A visual representation of the baby swing's five adjustable swing angles (18°, 21°, 23°, 25°, 31°) and three timer settings (8, 15, 30 minutes), along with an illustration of the lock/unlock mechanism.

4.3 Music and Bluetooth Function

Soothe your baby with built-in lullabies or play your own music.

- **Built-in Lullabies:** The swing comes with 10 preset lullabies.
- **Bluetooth Connectivity:** Connect your phone via Bluetooth to play your baby's favorite music directly through the swing's speakers.
- Adjust the volume as needed.

10 Built-in Lullabies Bluetooth Music



Image: A parent interacting with their smartphone to play music via Bluetooth to the baby swing, which features 10 built-in lullabies and adjustable volume.

4.4 Power Supply

The swing can be powered by a wall outlet using the included adapter with a USB cable, or by a power bank for portability.



Image: The baby swing connected to a power source, illustrating its compatibility with both a standard wall outlet and a portable power bank, making it suitable for indoor and outdoor use.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and hygiene of your baby swing.

- **Cushion and Mattress:** The super-soft crystal velvet cushion and removable soft mattress are made of premium breathable fabric. They are designed to be easily removed and are machine washable for year-round comfort and hygiene.
- **Frame:** Wipe the aircraft aluminum frame with a damp cloth and mild soap. Do not use abrasive cleaners.
- **Storage:** When not in use for extended periods, disassemble the swing and store it in a dry, cool place.

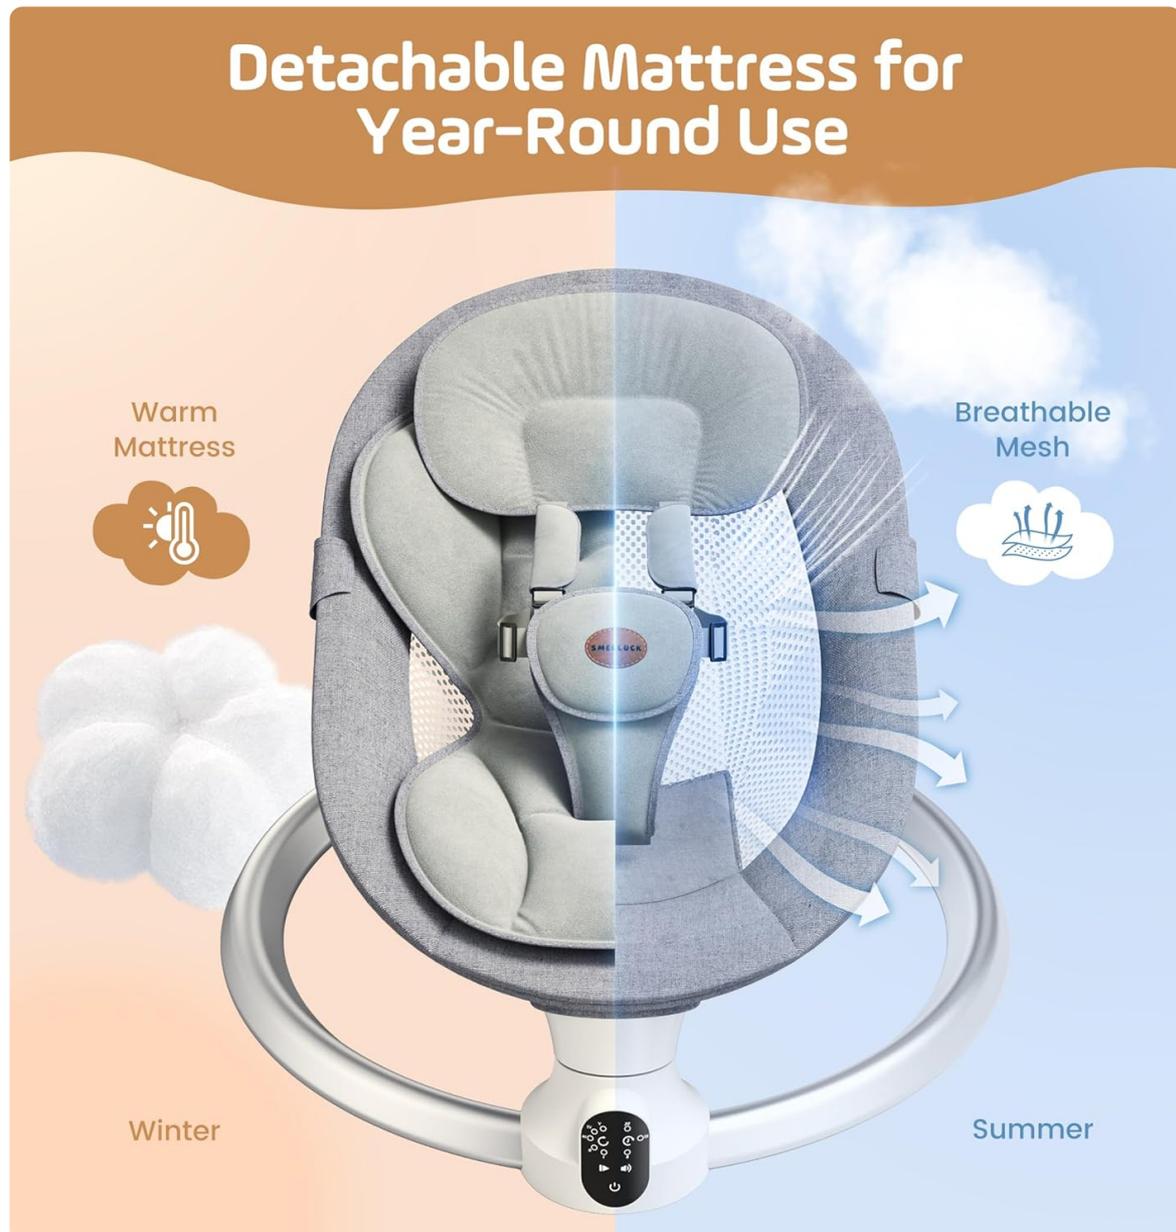


Image: A split view of the baby swing's detachable mattress, illustrating its dual functionality for year-round use with a warm side for winter and a breathable mesh side for summer.

Free Your Hands



Image: A person demonstrating the ease of cleaning the baby swing by placing its removable fabric components into a washing machine.

6. TROUBLESHOOTING

- **Swing Not Functioning:** Ensure the power adapter is securely connected and the swing is powered on. Verify the pin on the back of the main unit is pulled out to enable the swing function.
- **Installation Instability:** If the swing feels unstable after assembly, use a power screwdriver to ensure all connections are tightened securely.
- **Bluetooth Connectivity Issues:** Ensure your device is within the 0-5 meter Bluetooth range. Check that Bluetooth is enabled on your device and the swing.
- **No Sound/Low Sound:** Check the volume settings on the swing's control panel, remote, or app. Ensure your Bluetooth device's volume is also adjusted.

7. SPECIFICATIONS

Feature	Detail
Model Number	BB706
Product Dimensions	14 x 5 x 15 inches (35.56 x 12.7 x 38.1 cm)
Item Weight	8.48 pounds (3.85 kg)
Maximum Weight Recommendation	20 Pounds (9 kg)
Age Range	0-9 months
Material Type	Velvet (Cushion), Aluminum (Frame)
Control Methods	IMD Touch Screen, Remote Control, Bluetooth APP
Swing Speeds	5 (18°, 21°, 23°, 25°, 31°)
Lullabies	10 Preset Lullabies

Harness Type	Upgraded 5-Point Safety Harness
Portability	Yes
Batteries Required	No (AC Powered)

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your product or visit the official Smelluck website. If you encounter any issues or require assistance, please contact Smelluck customer support.

Customer Support:

- Email: support@smelluck.com (Example)
- Website: [Visit the Smelluck Store on Amazon](#)