

[Manuals.plus](#) /

› [Rabbit](#) /

› Rabbit Electric Wine Tool Set - 5-Piece Wine Accessory Collection - User Manual

## Rabbit 5163384

# Rabbit Electric Wine Tool Set User Manual

Model: 5163384 | Brand: Rabbit

## INTRODUCTION

Thank you for choosing the Rabbit Electric Wine Tool Set. This 5-piece collection is designed to enhance your wine experience with convenience and efficiency. Please read this manual thoroughly before first use to ensure proper operation and maintenance of your electric corkscrew, aerator, foil cutter, and wine stoppers.

## IMPORTANT SAFETY INFORMATION

- Keep all components out of reach of children.
- Do not immerse the electric corkscrew or electric wine aerator in water or any other liquid.
- Use only the provided USB-C charging cables for charging. Using unauthorized cables may damage the devices.
- Do not attempt to disassemble or repair the electric components. Contact customer support for assistance.
- Avoid contact with the corkscrew spiral during operation.
- Store the set in a cool, dry place when not in use.

## PACKAGE CONTENTS

The Rabbit Electric Wine Tool Set includes the following items:

- 1 x Electric Corkscrew
- 1 x Electric Wine Aerator
- 1 x Foil Cutter
- 2 x Wine Stoppers
- 2 x USB-C Charging Cables



Image showing all components of the Rabbit Electric Wine Tool Set: Electric Corkscrew, Electric Wine Aerator, Foil Cutter, two Wine Stoppers, and charging cables.

## INITIAL SETUP AND CHARGING

### Charging the Electric Corkscrew and Wine Aerator

Before first use, fully charge both the Electric Corkscrew and the Electric Wine Aerator. Use the provided USB-C charging cables.

1. Connect one end of a USB-C charging cable to the charging port on the device (corkscrew or aerator).
2. Connect the other end to a compatible USB power adapter (not included).
3. The indicator light will illuminate during charging and change color or turn off when fully charged. Refer to the specific device's indicator behavior for details.
4. A single full charge for the Electric Corkscrew can open over 30 bottles of wine.

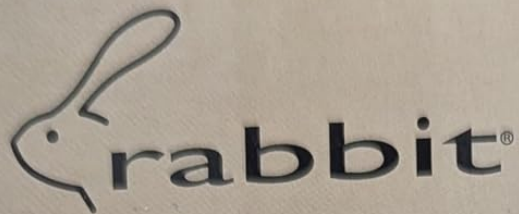


Image detailing the features of the Electric Corkscrew, Electric Wine Aerator, Foil Cutter, and Bottle Stoppers, including charging information.

## OPERATING INSTRUCTIONS

### Using the Foil Cutter

1. Place the foil cutter on top of the wine bottle.
2. Grip firmly and twist to cut and remove the foil seal.



## ELECTRIC CORKSCREW

- Works with all cork types, including synthetic corks
- Rechargeable; single charge opens 30+ bottles of wine



## ELECTRIC WINE AERATOR

- Dispense and aerate wine with the touch of a button
- Includes detachable silicone tube



## FOIL CUTTER

- Removes foil quickly and neatly
- Stores on base of Electric Corkscrew



## BOTTLE STOPPERS

- Set of 2 silicone reusable stoppers with air-tight seal

Close-up image of the Rabbit Electric Wine Tool Set components, including the Electric Corkscrew, Electric Wine Aerator, and Foil Cutter, highlighting their design.

### Using the Electric Corkscrew

1. Ensure the corkscrew is fully charged.
2. Place the corkscrew vertically over the wine bottle, ensuring it is centered on the cork.
3. Press and hold the 'down' button. The corkscrew will automatically penetrate the cork and remove it from the bottle.
4. Once the cork is fully removed, press and hold the 'up' button to release the cork from the corkscrew.

## Using the Electric Wine Aerator

1. Ensure the aerator is fully charged.
2. Insert the detachable silicone tube into the bottom of the aerator.
3. Place the aerator firmly into the neck of the wine bottle.
4. Place a wine glass beneath the spout.
5. Press and hold the button on top of the aerator to dispense and aerate the wine.
6. Release the button to stop dispensing.

## Using the Wine Stoppers

1. After opening, insert a wine stopper firmly into the bottle neck to create an airtight seal.
2. This helps preserve the freshness of the wine.

## MAINTENANCE AND CLEANING

---

- **Electric Corkscrew and Aerator:** Wipe the exterior with a soft, damp cloth. Do not immerse in water. The silicone tube of the aerator can be rinsed with warm water.
- **Foil Cutter:** Rinse with water and dry thoroughly.
- **Wine Stoppers:** Wash with warm soapy water and rinse thoroughly before and after each use.
- Store all components in a dry place when not in use.

## TROUBLESHOOTING

---

### Electric Corkscrew not operating:

Ensure the device is fully charged. Check if the corkscrew is properly aligned with the cork.

### Wine Aerator not dispensing:

Ensure the device is fully charged and the silicone tube is correctly inserted. Check for any blockages in the tube or spout.

### Corkscrew not releasing cork:

Ensure the 'up' button is pressed firmly. If the cork is stuck, gently twist and pull the cork from the screw manually.

## PRODUCT SPECIFICATIONS

---

- **Model Number:** 5163384
- **Brand:** Rabbit
- **Power Source:** Rechargeable Lithium Ion Batteries (2 included)
- **Charging:** USB-C
- **Package Dimensions:** 10.04 x 9.45 x 3.7 inches
- **Item Weight:** 1.87 pounds (0.85 Kilograms)
- **Finish Type:** Stainless Steel
- **UPC:** 022578007625

## WARRANTY AND CUSTOMER SUPPORT

---

For warranty information or customer support, please refer to the manufacturer's official website or contact their customer service department. Keep your proof of purchase for warranty claims.

Visit the official Rabbit Store for more products and support: [Rabbit Store](#)