

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cheerble](#) /

› [Cheerble Wicked Ball M3 User Manual](#)

Cheerble Cheerble Ball M3

Cheerble Wicked Ball M3 User Manual

Model: Cheerble Ball M3

INTRODUCTION

The Cheerble Wicked Ball M3 is an advanced interactive cat toy designed to provide engaging and stimulating playtime for indoor cats and kittens. Featuring intelligent motion sensors and multiple play modes, it encourages physical activity and mental enrichment, helping to alleviate boredom and promote a healthy lifestyle for your pet.



Image: The Cheerble Wicked Ball M3 interactive cat toy shown with its packaging.

WHAT'S IN THE BOX

Please ensure all the following components are included in your package:

- 1x Cheerble Ball M3
- 1x Bell (attachable)
- 1x USB Type-C Charging Cable
- 1x User Manual

What's In The Box

- Wicked Ball M3
- User Manual
- USB Type-C Charging Cable
- Bell



Image: All components included in the Cheerble Wicked Ball M3 package: the ball, bell, USB-C cable, and user manual.

SETUP

Charging the Device

Before first use, fully charge the Cheerble Wicked Ball M3. The ball comes with a built-in Lithium Ion battery. To charge:

1. Locate the charging port on the ball (usually under a small cover).
2. Connect the provided USB Type-C charging cable to the ball and a compatible USB power source (e.g., computer, wall adapter).
3. The indicator light on the ball will show charging status (refer to the light indicator section for details).
4. A full charge provides up to 3.5 hours of non-stop play or up to 13.6 hours in play-and-rest mode.

Super Long Playtime

Large battery capacity guarantees long-lasting fun.

Up to
3.5 hours
non-stop play

Up to
13.6 hours
in play-and-rest mode



Type-C
Charging



Image: The Cheerble Wicked Ball M3 connected to its USB Type-C charging cable, illustrating the charging process.

OPERATING INSTRUCTIONS

Power On/Off and Mode Switching

The Wicked Ball M3 features a single button for control. To power on or switch modes, press the button located on the ball. Each press cycles through the available modes. The ball automatically resumes the last mode used when turned back on.

Interactive Modes

The Wicked Ball M3 offers three distinct interactive modes to suit your cat's play style:

- **Hybrid Mode (Vibrate or Fast Roll):** Recommended for energetic and extroverted cats. This mode combines vibrations with fast rolling movements.
- **Bounce Mode (Tap to Bounce):** Ideal for bold and courageous hunters. The ball will bounce and move unpredictably when tapped or interacted with.
- **Roll Mode (Shake or Slow Roll):** Best for shy and timid cats. This mode features gentle shaking and slow rolling movements.

3 Interactive Modes

1

Hybrid Mode

Vibrate or Fast Roll

Energetic & extravert
cats are recommended



2

Bounce Mode

Tap to Bounce

Bold & courageous
hunters are recommended




3

Roll Mode

Shake or Slow Roll

Shy & timid cats are
recommended

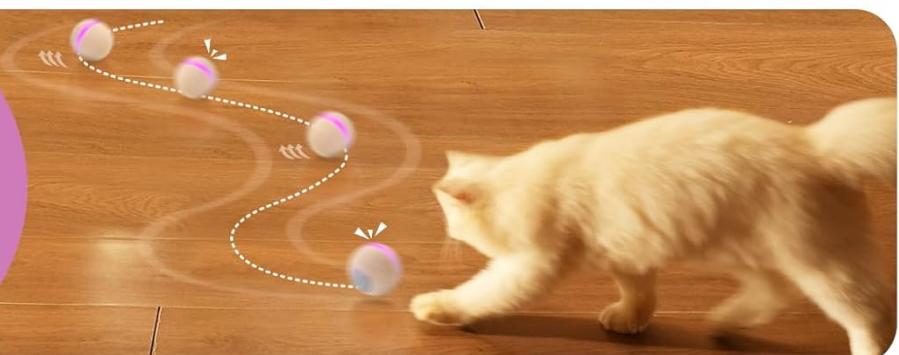


Note: Every time you turn the toy back on, it automatically resumes the last mode you used. No hassle of resetting

Image: Visual representation of the three interactive play modes: Hybrid, Bounce, and Roll, demonstrating how cats engage with each.

Play-and-Rest Cycle

To prevent over-exhaustion and ensure moderate exercise, the Wicked Ball M3 enters a 30-minute sleep period after 10 minutes of continuous play. If touched or interacted with while sleeping, it will automatically resume play.

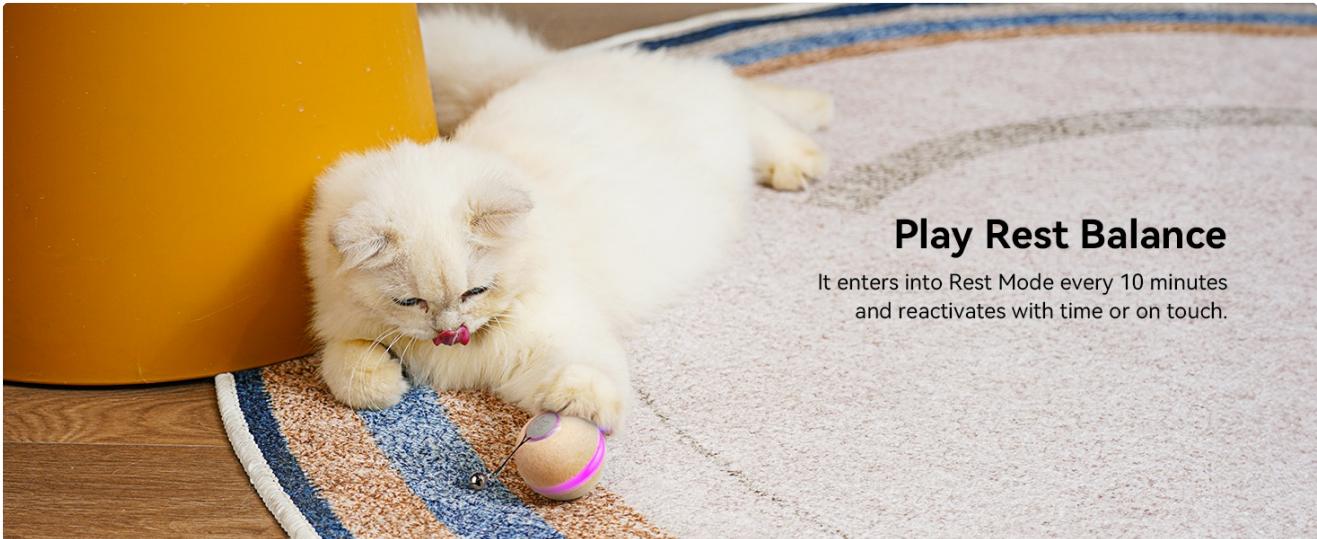

Play Rest Balance

It enters into Rest Mode every 10 minutes and reactivates with time or on touch.

Image: A cat resting near the Wicked Ball M3, highlighting the toy's automatic play-and-rest cycle for balanced activity.

Bionic Movements

Equipped with an intelligent motion sensor, the Cheerble ball can detect obstacles and tight spaces. It will automatically reverse direction and move away, ensuring it doesn't get stuck and keeps your cat engaged with unpredictable movements.

Bionic Movements

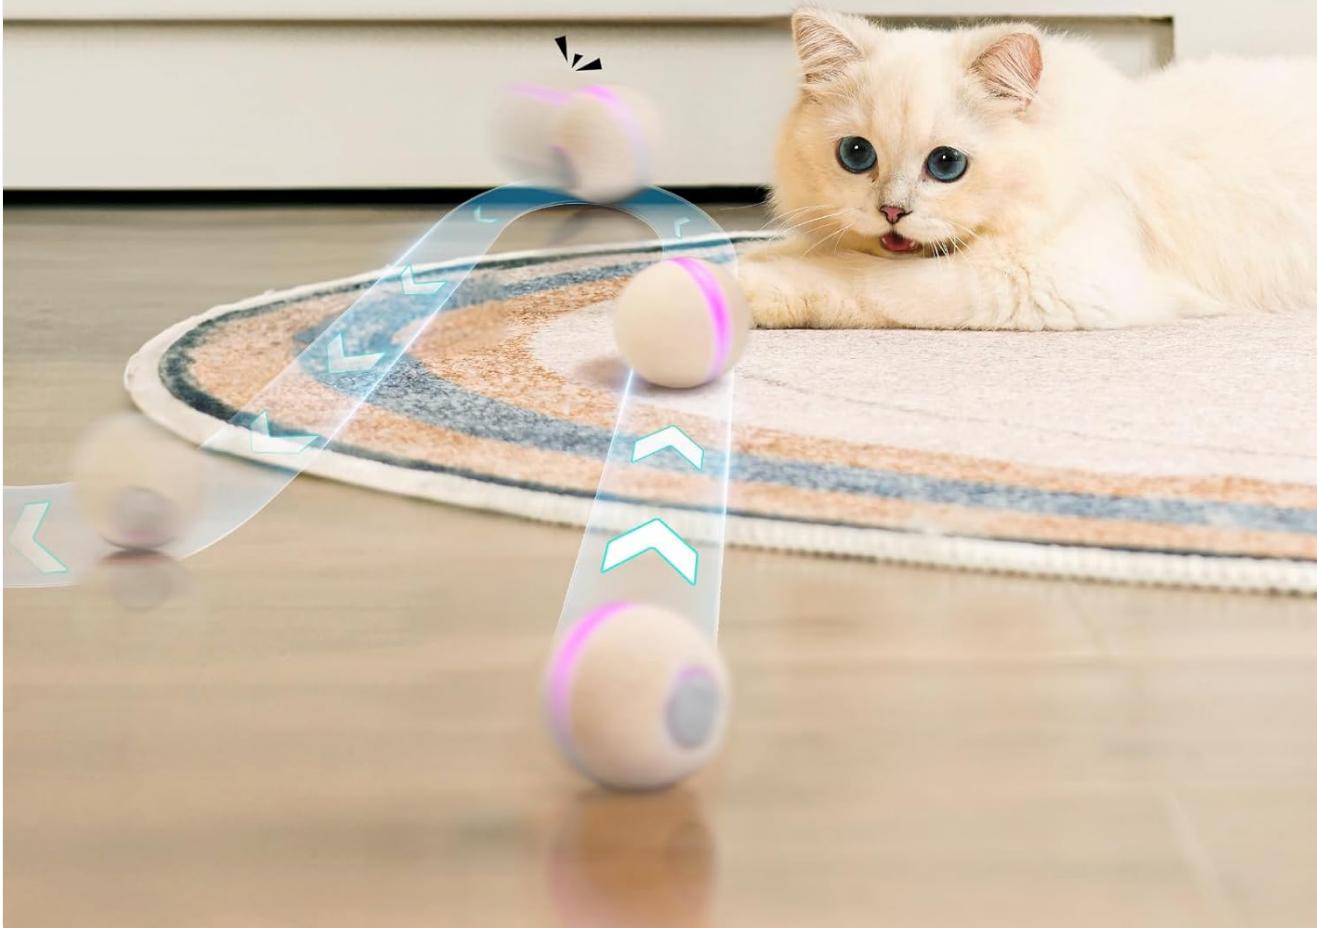


Image: The Wicked Ball M3 exhibiting its bionic movements, changing direction to avoid obstacles, with a cat observing.


MAINTENANCE

Cleaning

The surface of the Cheerble cat ball is made of synthetic fibers. To clean, gently wipe the surface with a damp cloth. Do not submerge the ball in water or use harsh cleaning agents.

Wicked Ball M3

Long-lasting Battery Life

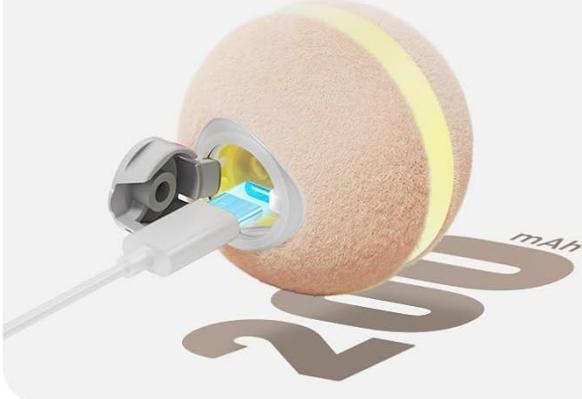

Soft Furry Surface




Sound Alert



3 Interactive Modes



For Multiple Scenarios

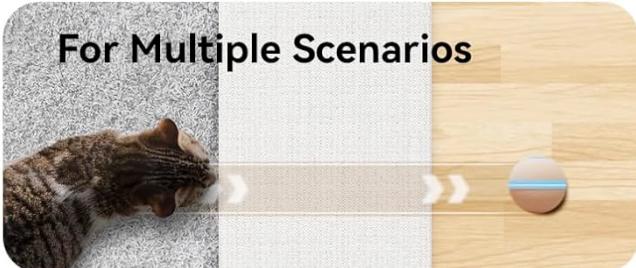

Bell-Attachable



Image: A detailed view of the soft, furry synthetic fiber surface of the Wicked Ball M3, indicating its texture.

Battery Care

To prolong battery life, ensure the ball is fully charged before extended periods of non-use. Avoid exposing the device to extreme temperatures.

TROUBLESHOOTING

Low Battery / Locating the Ball

The Wicked Ball M3 features a short 'beep' sound that activates when the battery is low or after 10 minutes of inactivity. This alert helps you easily locate the ball and indicates when it needs recharging.

Find & Low Battery Alerts



Image: The Wicked Ball M3 on a carpet, with visual cues representing sound waves, indicating its low battery or inactivity alert feature.

Traction Issues on Certain Surfaces

The Wicked Ball M3 is engineered to work on various surfaces including hard floors, low-pile carpets, and thick rugs. However, in rare cases, some surfaces might affect its traction. If the ball appears to be spinning in place without moving, try the following:

- **Change the Mode:** Experiment with different interactive modes (Hybrid, Bounce, Roll) as some modes might offer better traction on specific surfaces.
- **Surface Adjustment:** If possible, try the toy on a different surface type.
- **Check for Obstructions:** Ensure no debris or hair is caught around the moving parts of the ball.

Playspace Suggestion



Thin Carpet

Mode: ● ●



Thick Carpet

Mode: ●



Wooden Floor

Mode: ● ● ●



Cardboard Box

Mode: ● ● ●

Note: Suitable for high-pile carpets within 25mm in length.

Image: Examples of suitable playspaces for the Wicked Ball M3, including thin carpet, thick carpet, wooden floor, and a cardboard box, demonstrating its versatility.

SPECIFICATIONS

Feature	Detail
Brand Name	Cheerble
Model Name	Cheerble Ball M3
Item Model Number	Cheerble Ball M3
Item Weight	3.2 ounces
Product Dimensions	1.85 x 1.85 x 1.85 inches
Material	Synthetic Fibers
Color	Apricot

Batteries	1 Lithium Ion battery (included)
Target Audience	Cats
Specific Uses	Indoor

WARRANTY & SUPPORT

Warranty Information

The Cheerble Wicked Ball M3 comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

After-Sales Service

If you encounter any issues with your Wicked Ball M3, such as receiving a defective ball or charging cable, please do not hesitate to contact Cheerble customer service. We are committed to providing prompt assistance and will arrange for a replacement if necessary.

For support, please visit the official Cheerble website or contact us through the platform where you purchased the product.