

[Manuals.plus](#) /

› [Kitstorack](#) /

› Kitstorack TV Tray Table User Manual

Kitstorack C-Shape Adjustable Tv Tray

Kitstorack TV Tray Table User Manual

Model: C-Shape Adjustable Tv Tray

PRODUCT OVERVIEW

The Kitstorack TV Tray Table is a versatile and adjustable furniture piece designed for convenience and space-saving. It features an adjustable height, a flip-top design, and rounded metal corners for enhanced safety and durability. This C-shaped end table is suitable for various uses, including dining, working on a laptop, reading, or as a general side table next to a couch, sofa, bed, or chair.



Figure 1: The Kitstorack TV Tray Table positioned next to a sofa, showcasing its C-shaped design and a laptop on its surface.

SETUP AND ASSEMBLY

The Kitstorack TV Tray Table is designed for quick and easy assembly. An Allen wrench is included to facilitate the process.

Assembly Steps:

1. Unpack all components and verify against the included assembly guide.
2. Attach the main support post to the base using the provided screws and Allen wrench.
3. Secure the tabletop to the top of the support post, ensuring it is firmly attached.
4. Confirm all screws are tightened for stability.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the assembly process and key features of the Kitstorack TV Tray Table.



Figure 2: Visual representation of the table's dimensions, including the tabletop size and base measurements.

OPERATING INSTRUCTIONS

Adjusting Height:

The TV tray table offers 9 height settings, adjustable from 19 to 30 inches. To adjust the height, simply press the latches on the support post and slide the tabletop to your desired level. Release the latches to lock it in place.

9-Level Adjustable Height (18.7"-30")

Simply press the latches and adjust with ease



Figure 3: Demonstration of the table's adjustable height mechanism, showing different height settings.

Folding for Storage:

For space-saving convenience, the tabletop can be flipped up 90 degrees when not in use. This allows the table to fit snugly against a sofa or wall, making it ideal for small spaces.

Folds to Save Space

Easily Flips Up 90° for
Unhindered Stand-Up



Figure 4: The table with its top flipped up 90 degrees, illustrating its compact storage capability.

Versatile Usage:

This TV tray table is highly versatile and can be used in various settings:

- **TV Dinner Tray:** Enjoy meals comfortably from your couch.
- **Coffee Table/Snack Table:** Keep beverages and snacks within easy reach.
- **Bedside Table:** Perfect for holding books, lamps, or personal items next to your bed.
- **Reading Table:** Provides a stable surface for books or e-readers.
- **Study Desk:** A portable workstation for laptops or writing.



Figure 5: Examples of the table's versatile use in different home environments, including next to a recliner, bed, and sofa.

MAINTENANCE

To ensure the longevity and appearance of your Kitstorack TV Tray Table, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the table surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Spills:** Clean up spills immediately to prevent staining, especially on the engineered wood tabletop. The table is stain-resistant, but prompt cleaning is always recommended.
- **Storage:** When not in use, you can fold the tabletop up to save space. Store in a dry environment away from direct sunlight or extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your TV tray table, please refer to the following common solutions:

- **Table Wobbles:**
 - Ensure all assembly screws are securely tightened.
 - Verify the table is placed on a flat, even surface.
 - Check if the height adjustment latches are fully engaged and locked.
- **Difficulty Adjusting Height:**
 - Make sure both latches are fully pressed before attempting to slide the post.
 - Check for any obstructions or debris in the adjustment holes.
- **Tabletop Not Flat (Slight Tilt):**
 - While the design aims for flatness, minor variations can occur. Ensure the tabletop is correctly seated on its bracket.
 - For sensitive items, consider using a non-slip mat on the surface.

SPECIFICATIONS

Feature	Detail
Brand	Kitstorack
Model Name	C-Shape-TV Tray Table
Model Number	C-Shape Adjustable Tv Tray
Product Dimensions	12.6"D x 16.53"W x 30"H
Item Weight	8 Pounds
Maximum Weight Recommendation	30 Kilograms (approx. 66 lbs)
Color	Brown (Standard)
Top Material Type	Engineered Wood
Frame Material Type	Metal
Adjustable Height Range	19 to 30 inches (9 settings)
Is Foldable	No (Tabletop flips up 90 degrees)
Included Components	Assembly Guide, Installation Tool
Product Care Instructions	Wipe with Cloth

Ultra-Stable Design - Supports Over 88 lbs



Figure 6: The table's robust construction, capable of supporting over 88 lbs, as shown with kettlebells.

IMPORTANT SAFETY INFORMATION

Please read and adhere to the following safety guidelines to prevent injury or damage:

- Always assemble the table strictly according to the provided instructions.
- Do not place objects exceeding the maximum weight recommendation (30 kg / 66 lbs) on the table.
- Avoid placing heavy objects on the edge of the table that could cause it to tip over.
- Keep the table away from heat sources, open flames, and sharp objects to prevent damage to the materials.
- Always supervise children when they are near or using the table to ensure their safety.
- Do not stand or sit on the table.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Kitstorack TV Tray Table, please contact Kitstorack customer service.

Refer to your purchase documentation for specific warranty details and contact information.
You can also visit the official Kitstorack store on Amazon for more information and support:[Kitstorack Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question