Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Cheerble /
- > Cheerble Wicked Ball M3 Interactive Cat Toy User Manual

Cheerble Cheerble Ball M3

Cheerble Wicked Ball M3 Interactive Cat Toy User Manual

Model: Cheerble Ball M3 | Brand: Cheerble

INTRODUCTION

The Cheerble Wicked Ball M3 is an advanced interactive pet toy designed to provide mental stimulation and endless fun for your cat. Featuring intelligent motion sensors and multiple play modes, this durable and rechargeable ball keeps your feline friend entertained and active, even when you're not around. Its soft, furry surface and bionic movements mimic natural prey, engaging your cat's hunting instincts.



Figure 1: Cheerble Wicked Ball M3 and its packaging.

WHAT'S IN THE BOX

Upon opening your Cheerble Wicked Ball M3 package, you should find the following items:

- 1x Cheerble Ball M3
- 1x Bell (attachable)
- 1x USB Type-C Charging Cable
- 1x User Manual



Figure 2: All components included in the Cheerble Wicked Ball M3 package.

SETUP

Charging the Device

Before first use, or when the battery is low, charge your Wicked Ball M3 using the provided USB Type-C cable. The charging port is located under a small cover on the ball's surface. A full charge ensures extended playtime.

Super Long Playtime

3.5 hours

13.6 hours



Figure 3: Charging the Wicked Ball M3 via its Type-C port.

OPERATING INSTRUCTIONS

Activating and Changing Modes

The Wicked Ball M3 features three interactive modes to suit your cat's play style and energy level. To activate the ball, simply tap it. To cycle through the modes, tap the ball again. The LED light color indicates the current mode:

- Blue Light (Hybrid Mode): Combines vibrating and fast rolling movements. Recommended for energetic and extrovert cats, suitable for thin carpets and solid flat floors.
- **Green Light (Bounce Mode):** Features erratic bouncing movements. Ideal for bold and courageous hunters, particularly effective on thick carpets.
- Purple Light (Roll Mode): Offers gentle shaking and slow rolling. Best for shy and timid cats, designed for solid flat floors.

3 Interactive Modes

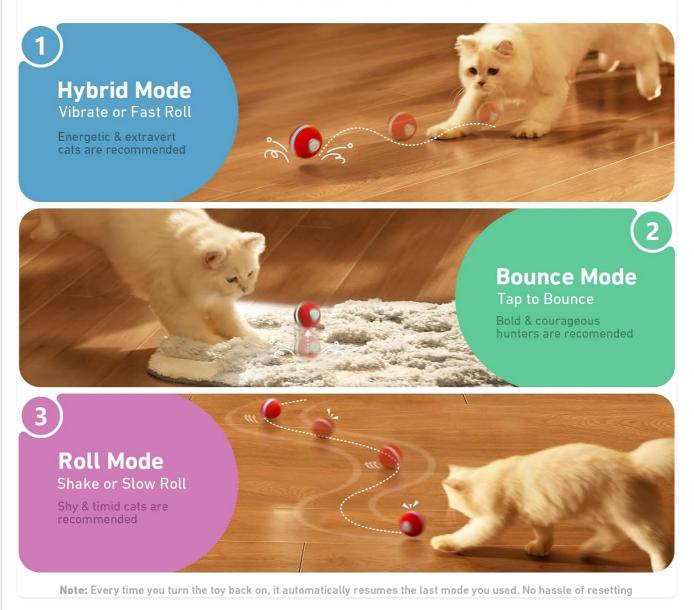


Figure 4: Visual representation of the three interactive play modes.

Bionic Movements

Equipped with an intelligent motion sensor, the Wicked Ball M3 can detect obstacles and tight spots. It will automatically reverse and move away, ensuring it doesn't get stuck and keeps your cat engaged with unpredictable movements.

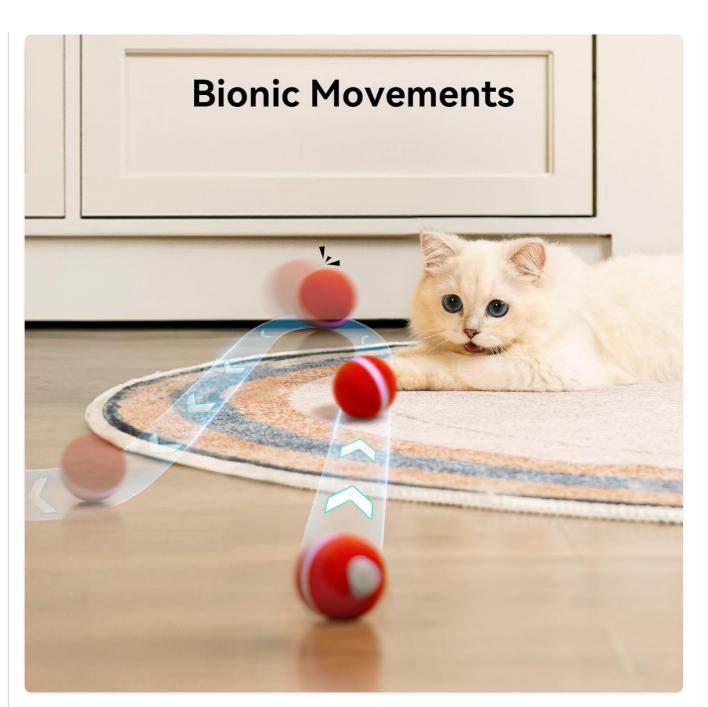


Figure 5: The ball's bionic movements allow it to navigate around obstacles.

Play-and-Rest Mode

To prevent over-exhaustion and ensure moderate exercise, the Wicked Ball M3 enters a 30-minute sleep period after 10 minutes of continuous play. If touched while sleeping, it will reactivate and resume play. This feature allows for up to 13.6 hours of play-and-rest time on a single charge, or up to 3.5 hours of non-stop play.

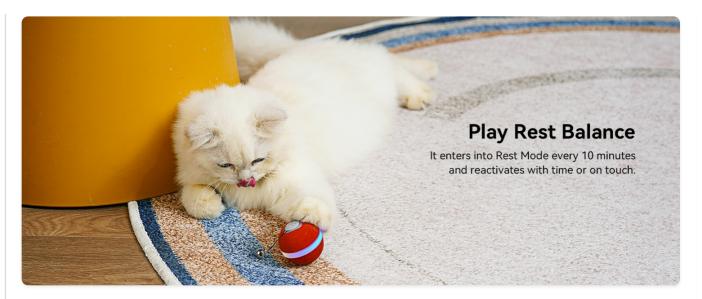



Figure 6: The Wicked Ball M3's intelligent play-rest balance feature.

PLAY SPACE SUGGESTIONS

The Wicked Ball M3 is engineered to perform on various surfaces, adapting its movement to provide optimal engagement for your pet. It works effectively on:

- Hard floors (wood, tile, laminate)
- · Low-pile carpets
- Thick rugs (Note: Suitable for high-pile carpets within 25mm in length)
- Inside cardboard boxes for an enclosed play experience

Playspace Suggestion

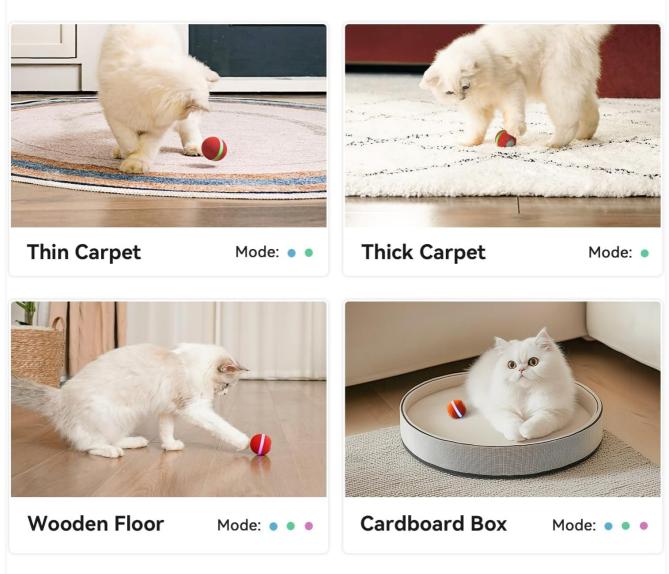

Note: Suitable for high-pile carpets within 25mm in length.

Figure 7: The Wicked Ball M3 adapts to different play surfaces.

MAINTENANCE

Cleaning

To maintain the toy's performance and hygiene, gently wipe the surface of the Wicked Ball M3 with a soft, damp cloth as needed. Avoid submerging the ball in water or using harsh cleaning agents.

Low Battery Alerts

The Wicked Ball M3 provides a short 'beep' sound to indicate a low battery. This alert helps you know when it's time to recharge, ensuring uninterrupted playtime for your pet.

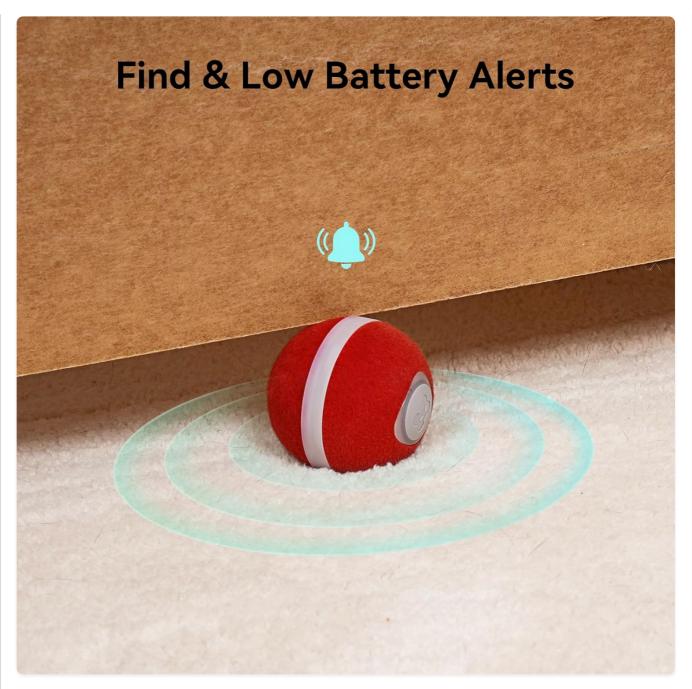


Figure 8: The ball emits a 'beep' sound for low battery or after 10 minutes of inactivity.

TROUBLESHOOTING

Ball Not Moving or Getting Stuck

- Check Battery: If the ball is not moving, it may have a low battery. Listen for the 'beep' alert and recharge the device fully.
- Surface Compatibility: Ensure the ball is being used on a suitable surface. While versatile, extremely high-pile carpets (over 25mm) or very uneven surfaces might hinder movement.
- **Obstacles:** Although designed to avoid obstacles, ensure the play area is clear of excessive clutter that might trap the ball.
- **Mode Selection:** Verify that the selected mode is appropriate for the surface. For example, 'Bounce Mode' is best for thick carpets, while 'Roll Mode' is ideal for flat floors.

Ball Not Responding to Touch

- Check Sleep Mode: The ball enters a sleep mode after 10 minutes of inactivity. A gentle tap should reactivate it.
- Recharge: If it doesn't reactivate, the battery might be completely drained.

Unusual Noises

• If you hear unusual noises, ensure no foreign objects are lodged in the ball's mechanism. If the issue persists, contact customer service.

SPECIFICATIONS

Feature	Detail
Model Name	Cheerble Ball M3
Item Weight	3.2 ounces
Product Dimensions (LxWxH)	1.85 x 1.85 x 1.85 inches
Material	Synthetic Fibers
Batteries	1 Lithium Ion battery (included)
Charging Type	USB Type-C
Playtime (Non-stop)	Up to 3.5 hours
Playtime (Play-and-rest)	Up to 13.6 hours
Target Audience	Cats (Kittens to Adult)
Country of Origin	China

WARRANTY AND SUPPORT

Warranty Information

The Cheerble Wicked Ball M3 comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

Customer Support

For any questions, concerns, or if you receive a defective product (ball or charging cable), please do not hesitate to contact Cheerble customer service. We are committed to providing prompt assistance and will send a replacement if necessary. Please refer to the contact information provided in your product packaging or visit the official Cheerble website for support.

Related Documents - Cheerble Ball M3

