

## EXREIZST MP-802E

# EXREIZST MP-802E Slow Juicer User Manual

Fruit and Vegetable Cold Press Juicer

## 1. PRODUCT OVERVIEW

---

The EXREIZST MP-802E Slow Juicer represents a new generation of juicing technology, designed to efficiently extract juice from a wide variety of fruits and vegetables. Unlike traditional centrifugal juicers, this cold press masticating juicer operates at a slower speed to minimize heat buildup and oxidation, preserving more nutrients, vitamins, and enzymes. Its user-friendly design, powerful motor, and safety features make it an ideal appliance for healthy juice preparation.



Figure 1.1: The EXREIZST MP-802E Slow Juicer in operation, demonstrating its sleek design and juice output.

## 2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Always ensure the juicer is properly assembled before plugging it in or operating. The integrated safety sensor prevents operation if components are not correctly aligned.
- Do not immerse the motor base in water or any other liquid. Clean only with a damp cloth.
- Keep hands and utensils away from the feed chute during operation. Always use the food pusher provided.
- Unplug the juicer from the power outlet before cleaning, disassembling, or when not in use.
- Do not operate the juicer if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped. Contact customer support for assistance.
- This appliance is for household use only. Do not use outdoors.

- The juicer features a reverse function to clear blockages. If a blockage occurs, switch off the appliance, press the reverse button, and then resume normal operation.
- The juicer is equipped with overheat protection. If the motor overheats, the appliance will automatically shut off. Allow it to cool down for at least 30 minutes before resuming operation.
- All food-contact parts are BPA-free, ensuring safe and healthy juice production.

### 3. PACKAGE CONTENTS

---

Verify that all components are present and in good condition upon unpacking:

- Motor Base
- Juicing Bowl
- Auger (Spiral Screw)
- Filter (Fine and Coarse options may be included)
- Lid with Feed Chute
- Food Pusher
- Pulp Container
- Juice Container
- Cleaning Brush
- User Manual

### 4. SETUP

---

Follow these steps to assemble your EXREIZST Slow Juicer:

1. Place the motor base on a stable, flat, and dry surface.
2. Align the juicing bowl with the motor base and rotate it clockwise until it locks securely into place.
3. Insert the chosen filter (fine or coarse) into the juicing bowl, ensuring it sits firmly.
4. Place the auger into the center of the filter, pushing it down until it clicks into position.
5. Attach the lid by aligning the arrow on the lid with the unlock symbol on the juicing bowl, then rotate clockwise until it locks into place. The safety sensor will prevent operation if the lid is not properly secured.
6. Position the pulp container under the pulp spout and the juice container under the juice spout.

# 4.2 INCH LARGE FEED CHUTE

Fit Whole Fruits, Cutting-Free & Save Your Time



Figure 4.1: The 103mm (4.2 inch) large feed chute accommodates whole fruits, reducing preparation time.

## 5. OPERATING INSTRUCTIONS

Prepare your ingredients and begin juicing:

1. Wash all fruits and vegetables thoroughly. For best results, remove large seeds, pits, and hard skins (e.g., pineapple, melon). The 103mm feed chute allows for whole fruits and vegetables, minimizing the need for pre-cutting.
2. Plug the juicer into a grounded 220V power outlet.
3. Turn the control dial to the 'ON' position to start the juicer.
4. Gradually feed ingredients into the feed chute. Use the food pusher to gently guide ingredients down. Do not force ingredients into the chute, as this can strain the motor or cause blockages.
5. The juicer will automatically separate the juice into the juice container and the pulp into the pulp container.
6. If ingredients become jammed, turn the dial to the 'REV' (Reverse) position for a few seconds to clear the blockage, then switch back to 'ON'.

7. When finished juicing, turn the dial to the 'OFF' position and unplug the appliance.

## SLOW MASTICATING JUICING UPGRADED SPIRAL AUGER



 **92% Juice Yield,  
No False Claims**

 **Physical Extraction,  
Healthy And Delicious**

 **Solid & Durable**

Figure 5.1: The upgraded 8-level spiral auger efficiently masticates ingredients, ensuring high juice yield and nutrient preservation.

# DRIER PULP & PURER JUICE

Provide you with better juicing experience



Figure 5.2: The drip-proof design prevents spills, and the efficient extraction results in drier pulp and purer juice.

# UPGRADED-METAL FREE DOUBLE FILTER

Compatible with more Food Fit for more People



Large hole filter (Grey)



Suitable for soft fruits and vegetables. For example, orange, watermelon, grape, tomato, kiwifruit, strawberry.



Small hole filter (Black)

Suitable for hard fruits and vegetables. For example, carrots, apples, pears, celery, ginger.

Figure 5.3: The juicer includes an upgraded metal-free double filter system, with a large hole filter for soft fruits (e.g., orange, watermelon, grape) and a small hole filter for hard fruits and vegetables (e.g., carrots, apples, ginger).

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your juicer. The design allows for quick and easy cleaning in four simple steps.

1. Unplug the juicer from the power outlet.
2. Disassemble the juicer by rotating the lid counter-clockwise, then remove the auger, filter, and juicing bowl.
3. Rinse all detachable parts (juicing bowl, auger, filter, lid, containers) under running water. Use the provided cleaning brush to remove any stubborn pulp residue from the filter mesh.
4. Wipe the motor base with a damp cloth. Do not submerge the motor base in water.
5. Allow all parts to air dry completely before reassembling or storing.

**Note:** While some parts may be dishwasher safe, hand washing is recommended to prolong their lifespan.

## 7. TROUBLESHOOTING

---

If you encounter issues with your juicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; parts not assembled correctly; overheat protection activated.	Ensure power cord is securely plugged in. Reassemble all parts, ensuring the lid is locked. Allow motor to cool for 30 minutes if it was recently used.
Ingredients are not juicing or are getting stuck.	Too many ingredients at once; hard ingredients not cut small enough; blockage.	Feed ingredients slowly. For very hard items, cut into smaller pieces. Use the 'REV' (Reverse) function to clear blockages.
Excessive vibration or noise.	Improper assembly; hard ingredients.	Disassemble and reassemble all parts carefully. Ensure ingredients are not too large or hard for continuous feeding.
Pulp is wet.	Filter clogged; certain soft fruits naturally produce wetter pulp.	Clean the filter thoroughly. For very soft fruits, consider mixing with harder vegetables to improve pulp dryness.

## 8. SPECIFICATIONS

---

Technical details for the EXREIZST MP-802E Slow Juicer:

- **Model Number:** MP-802E
- **Brand:** EXREIZST
- **Color:** Black
- **Dimensions (L x W x H):** 38.1 x 13.97 x 19.81 cm (15 x 5.5 x 7.8 inches)
- **Weight:** 2.8 Kilograms (6.17 lbs)
- **Capacity:** 1.2 Liters (Juice Container)
- **Power:** 250 Watts
- **Voltage:** 220 Volts
- **Special Features:** Overheat Protection, Reverse Function, Safety Sensor, BPA-Free Components
- **Feed Chute Diameter:** 103 mm (4.2 inches)
- **Recommended Uses:** Fruits, Vegetables, Leafy Greens, Wheatgrass

# **250W + 40 MINUTES** **THERMAL PROTECTION**

Outperforms traditional 20-minutes heat-protected juicers



Figure 8.1: The powerful 250W motor is designed for stable performance and includes 40 minutes of thermal protection, surpassing traditional juicers.

## **9. WARRANTY AND SUPPORT**

Specific warranty information for the EXREIZST MP-802E Slow Juicer is not provided in this manual. For details regarding warranty coverage, technical support, or replacement parts, please refer to the product packaging or contact EXREIZST customer service directly through their official website or the retailer from whom the product was purchased.