

## ArtiFlame AF18

# ArtiFlame Fashion AF18 Electric Fireplace - White, 1.8 kW, with Side Shelves

User Instruction Manual

## INTRODUCTION

This manual provides detailed instructions for the safe operation, installation, and maintenance of your ArtiFlame Fashion AF18 Electric Fireplace. This multifunctional electric fireplace offers a realistic flame effect, efficient heating, and integrated side shelves for storage or display. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using this fireplace.
- Do not operate any fireplace with a damaged cord or plug, or if the heater has malfunctioned or been dropped or damaged in any manner.
- Do not use outdoors.
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 meter (3 feet) from the front of the fireplace.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the fireplace is left operating and unattended.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fireplace.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Disconnect the fireplace from the power supply before cleaning or maintenance.

---

## PACKAGE CONTENTS

Ensure all items are present and undamaged before proceeding with assembly.

- Electric Fireplace Insert
- Fireplace Mantel/Cabinet (MDF construction)
- Remote Control
- 1.5m Power Cable with Plug
- Mounting Hardware
- Detailed Assembly and Operating Instructions
- Warranty Information

---

## SETUP AND INSTALLATION

The ArtiFlame Fashion AF18 Electric Fireplace is designed for freestanding installation. Follow the detailed illustrated instructions provided in the package for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Check for any damage during transit.
2. **Assemble Mantel:** Follow the step-by-step diagrams in the included manual to assemble the MDF cabinet structure using the provided mounting hardware. Ensure all connections are secure.
3. **Insert Fireplace Unit:** Once the mantel is assembled, carefully slide the electric fireplace insert into the designated opening. Ensure it fits snugly and is properly aligned.
4. **Positioning:** Place the assembled fireplace on a flat, stable surface. Ensure there is adequate clearance from combustible materials (at least 1 meter / 3 feet). Do not block air vents.
5. **Power Connection:** Plug the 1.5m power cable directly into a standard wall outlet. Do not use extension cords or power strips.



Image 1: Front view of the ArtiFlame Fashion AF18 Electric Fireplace, showcasing the central firebox with a realistic flame effect and the integrated side shelves.

---

## OPERATING INSTRUCTIONS

Your ArtiFlame Fashion AF18 Electric Fireplace can be controlled via the included remote control or the buttons located on the front panel.

## Remote Control Functions



Image 2: The remote control for the ArtiFlame Fashion AF18 Electric Fireplace, showing buttons for power, timer, flame brightness, temperature, settings, and adjustment controls.

- **Power Button ( ):** Turns the fireplace ON or OFF.
- **Timer Button ( ):** Activates the automatic shut-off timer, adjustable from 30 minutes to 6 hours.
- **Flame Button ( ):** Adjusts the flame brightness (3 levels available).
- **Temperature Button ( ):** Activates the heating function and allows temperature adjustment.
- **Settings Button (⚙️):** Accesses additional settings (e.g., open window sensor, automatic heating programming).
- **Plus (+) / Minus (-) Buttons:** Adjusts temperature, timer duration, or other settings.

## Front Panel Controls

The fireplace also features control buttons directly on the front panel for manual operation. These typically mirror the remote control functions.

### Flame Effect Operation

- Press the Flame button to cycle through the 3 available brightness levels.
- The realistic flame effect operates independently of the heating function, allowing for year-round use with or without heat.
- The LED lighting consumes only 4W of power.

### Heating Function Operation

- Press the Temperature button to activate the heating function.
- Use the Plus (+) and Minus (-) buttons to set the desired room temperature between 17°C and 27°C.
- The digital thermostat will maintain the set temperature.
- The fireplace includes an open window sensor, which will automatically turn off the heating if a

sudden drop in temperature is detected.

- The heating function can be turned off independently while the flame effect remains active.

---

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

- **Cleaning:** Before cleaning, ensure the fireplace is turned off and unplugged from the power outlet. Allow it to cool completely.
- **Exterior:** Wipe the exterior surfaces of the mantel and glass with a soft, damp cloth. Do not use abrasive cleaners, polishes, or chemical solvents, as these may damage the finish.
- **Air Vents:** Periodically check and clean the air intake and exhaust vents to ensure they are free from dust and debris. Use a soft brush or vacuum cleaner attachment.
- **Storage:** If storing the fireplace for an extended period, ensure it is clean, dry, and stored in a cool, dry place.

---

## TROUBLESHOOTING

If you encounter issues with your ArtiFlame Fashion AF18 Electric Fireplace, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power supply; Power button not pressed; Remote control battery depleted.	Ensure the power cord is securely plugged into a working outlet. Press the power button on the unit or remote. Replace remote control batteries.
No heat output.	Heating function is off; Temperature set too low; Overheat protection activated; Open window sensor triggered.	Activate the heating function. Increase the set temperature. Check for obstructions around vents. Close windows/doors. Allow unit to cool if overheat protection was active.
Flame effect is not working or dim.	Flame effect is off; Brightness level set too low.	Ensure the flame effect is turned on. Adjust the flame brightness using the flame button.
Remote control not responding.	Battery depleted; Obstruction between remote and unit; Remote not aimed correctly.	Replace remote control batteries. Ensure a clear line of sight to the fireplace sensor. Aim the remote directly at the unit.

If the problem persists after attempting these solutions, please contact customer support.

---

## SPECIFICATIONS

<b>Brand</b>	ArtiFlame
<b>Model Number</b>	AF18
<b>Color</b>	White
<b>Material</b>	Engineered Wood (MDF), Metal
<b>Installation Type</b>	Freestanding
<b>Heat Output</b>	1.8 kW
<b>Heating Area</b>	Up to 30 square meters
<b>Temperature Control Range</b>	17°C to 27°C
<b>Flame Brightness Levels</b>	3 levels
<b>LED Power Consumption (Flame Effect)</b>	4 W
<b>Timer Function</b>	30 minutes to 6 hours
<b>Power Source</b>	Electric Cable
<b>Overall Dimensions (W x H x D)</b>	154 cm x 72.7 cm x 32 cm

## WARRANTY AND SUPPORT

Your ArtiFlame Fashion AF18 Electric Fireplace comes with a manufacturer's warranty. Please refer to the warranty document included in your package for specific terms and conditions.

For technical assistance, replacement parts, or further inquiries, please contact ArtiFlame customer support through their official website or the contact information provided in your warranty documentation.



WONDERFIRE AF18 OF MANUAL VALVE  
INSTALLATION & OPERATING MANUAL

[Real Flame Wonderfire AF18 OF Manual Valve Installation & Operating Manual](#)

Installation, operation, and warranty guide for the Real Flame Wonderfire AF18 OF Manual Valve gas fireplace. Features include Natural Gas compatibility, decorative use, safety guidelines, and troubleshooting.

Mode d'emploi  
Compresseur aérographe AF18-2



[Mode d'emploi Compresseur Aérographe XPOtool AF18-2](#)

Manuel d'utilisation complet pour le compresseur aérographe XPOtool AF18-2 (référence 34203), incluant consignes de sécurité, spécifications techniques, propriétés, utilisation du régulateur de pression, liste des composants et réglementations de gestion des déchets.