

[Manuals.plus](#) /

› [Edillas](#) /

› Edillas Kids Analog Watch User Manual

Edillas Uhr-8857L

Edillas Kids Analog Watch User Manual

MODEL: UHR-8857L

Your guide to setting up, operating, and maintaining your Edillas Kids Analog Watch.

1. Product Overview

The Edillas Kids Analog Watch is designed to help children aged 5-12 learn to tell time effectively. It features an easy-to-read dial with clear numbers and distinct hour, minute, and second hands. This watch is built for daily wear, offering durability and water resistance suitable for various children's activities.





Image: Front view of the Edillas Kids Analog Watch in light green, showcasing its easy-to-read dial with colorful hands.

Key Features:

- **Easy-to-Read Dial:** Designed with clear numbers and distinct hour, minute, and second hands for simple time learning.
- **Waterproof Design:** Suitable for daily activities like hand washing and light rain, but not for diving or hot water.
- **Precise Timekeeping:** Equipped with a Japanese movement for accurate time.
- **Comfortable and Durable:** Features a soft PU strap and a highly clear resin glass for comfort and shock resistance.

2. Setup and Time Setting

Before first use, or if the time needs adjustment, follow these steps to set the correct time on your Edillas Kids Analog

Watch.

1. **Remove Plastic Card:** If present, gently remove the small plastic card located under the crown (the knob on the side of the watch). This card prevents battery drain during shipping.
2. **Pull Out Crown:** Carefully pull the crown outwards until you feel a click. The second hand will stop, indicating the watch is in time-setting mode.
3. **Set Time:** Turn the crown counter-clockwise to move the hands and set the desired time. Ensure the hour and minute hands are correctly aligned.
4. **Push In Crown:** Once the time is set, push the crown back into its original position. The second hand will resume movement, and the watch will begin keeping time.



Image: Visual guide for setting the watch time, illustrating the steps of removing the plastic card, pulling out the crown, turning to set time, and pushing the crown back in.

The watch uses a P76 battery. For optimal performance, ensure the battery is properly installed.

3. Operating Instructions

The Edillas Kids Analog Watch is designed for straightforward use, focusing on ease of reading and durability for children.

Reading the Time:

- The **short hand** indicates the hour.
- The **long hand** indicates the minute.
- The **thin hand** indicates the second.

The watch face is clearly marked with numbers 1-12, making it simple for children to learn and practice telling time.

Water Resistance:

This watch is designed to be waterproof for daily use (30M/98FT). This means it can withstand:

- Splashes from hand washing.
- Rain.
- Brief immersion in shallow water (e.g., playing with water).

Important Note: Do not operate the crown underwater. The watch is not suitable for diving, showering with hot water, or prolonged submersion.



Image: A child washing hands while wearing the Edillas watch, illustrating its daily waterproof capability.

4. Maintenance

Proper care will extend the life and maintain the appearance of your Edillas Kids Analog Watch.

Cleaning:

- Wipe the watch case and strap with a soft, damp cloth.
- For stubborn dirt on the strap, a mild soap solution can be used, but ensure to rinse thoroughly and dry completely.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the watch materials.

Battery Replacement:

The watch uses a P76 battery. When the watch stops or starts losing time, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the waterproof seal is maintained.

General Care:

- Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods.
- Protect the watch from strong impacts or drops, although the resin glass is designed to be shock-resistant.
- Do not attempt to open the watch case yourself, as this can compromise its water resistance and void any potential warranty.



Image: An exploded view of the watch components, highlighting the Japanese movement, imported battery, soft strap, stainless steel cover, and buckle.

5. Troubleshooting

If you encounter issues with your Edillas Kids Analog Watch, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Watch not running or losing time.	Battery is dead or low. Crown is not fully pushed in.	Replace the battery (professional recommended). Ensure the crown is fully pushed in.
Condensation inside the watch face.	Exposure to extreme temperature changes or prolonged water exposure beyond waterproof limits.	Place the watch in a dry, warm place to allow condensation to evaporate. If persistent, seek professional repair. Avoid hot showers or prolonged submersion.
Hands are not moving smoothly.	Internal mechanism issue or low battery.	Replace battery. If problem persists, professional inspection is recommended.

If the problem persists after attempting these solutions, please contact customer support for further assistance.

6. Specifications

Detailed specifications for the Edillas Kids Analog Watch, Model Uhr-8857L.

Feature	Detail
Model Number	Uhr-8857L
Movement	Japanese Quartz Movement
Battery Type	1 x P76 battery (included)
Water Resistance	30M / 98FT (Daily waterproof, not for diving)
Strap Material	Soft PU (Polyurethane)
Dial Window Material	Highly Clear Resin
Dial Diameter	32mm / 1.26 inches
Strap Width	16mm / 0.63 inches
Strap Length	22cm / 8.66 inches
Dial Thickness	10mm / 0.39 inches
Maximum Fit Wrist	20cm / 7.87 inches
Minimum Fit Wrist	14cm / 5.51 inches
Watch Weight	23g / 0.05lb
Manufacturer	Yadelai



Image: Detailed measurements of the watch, including dial diameter, strap width, strap length, and wrist fit ranges.

7. Safety Information

WARNING: CHOKING HAZARD - SMALL PARTS. Not for children under 3 years.

WARNING: INGESTION HAZARD - This product contains a button cell or coin battery. DEATH or serious injury can occur if ingested. A swallowed button cell or coin battery can cause internal Chemical Burns in as little as 2 hours. KEEP new and used batteries OUT OF REACH OF CHILDREN. Seek immediate medical attention if a battery is swallowed or inserted inside any part of the body.

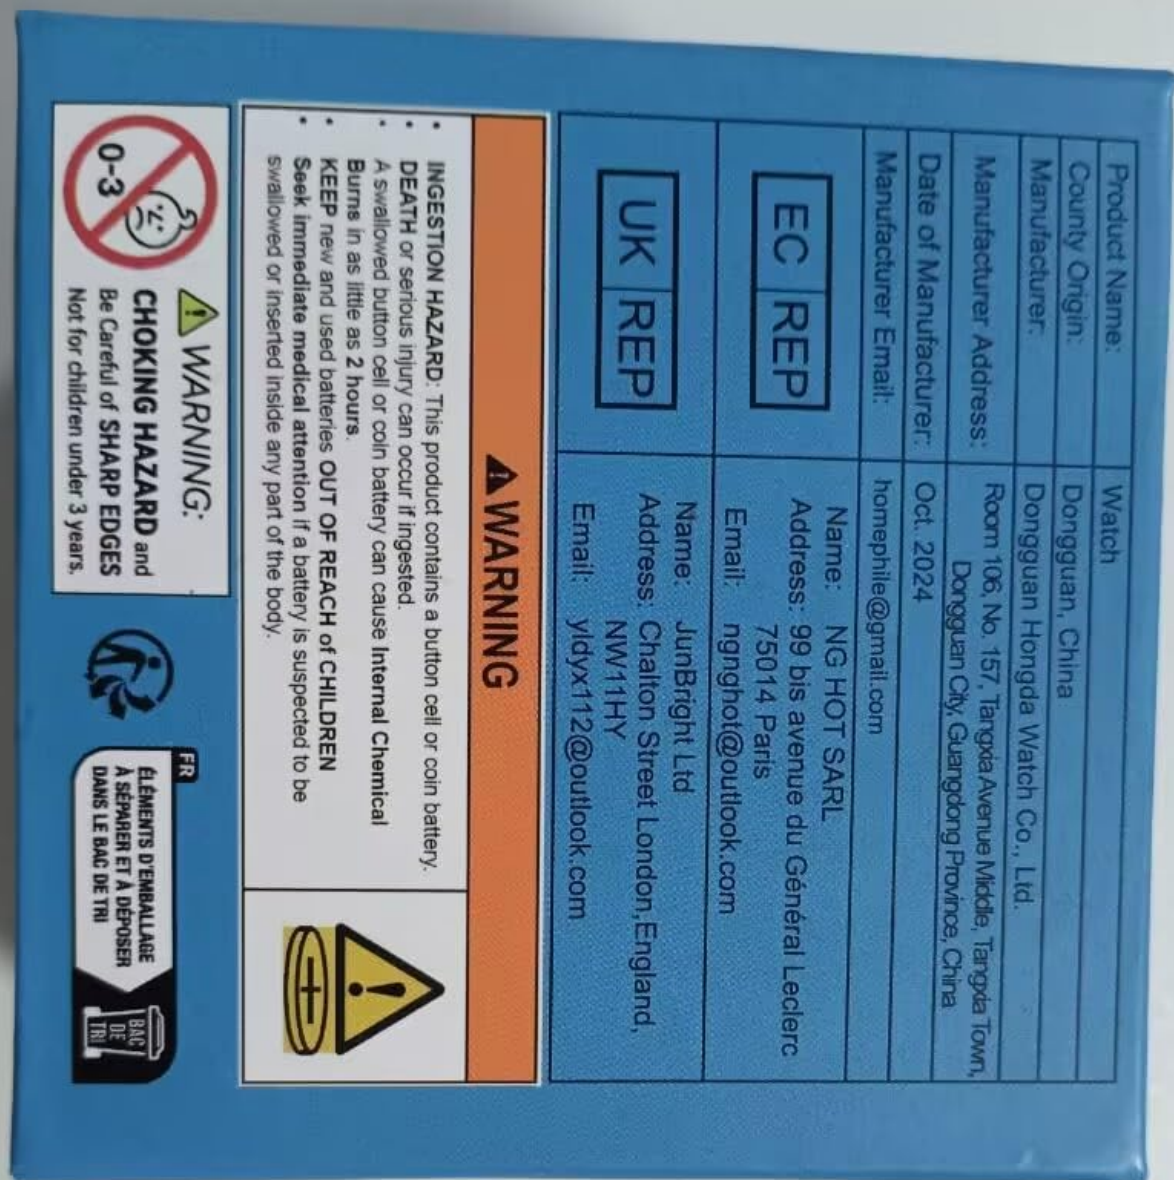


Image: Safety warnings from the product packaging, highlighting choking hazards for young children and the dangers of button battery ingestion.

8. Warranty and Support

While specific warranty details are not provided in this manual, Edillas products are typically covered by a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for any warranty claims.

For product support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact the seller or refer to the Edillas brand store on Amazon:

[Visit the Edillas Store on Amazon](#)

© 2024 Edillas. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question