

igqual 800395

igqual RP2V17A Laptop Cooling Pad User Manual

Model: 800395

INTRODUCTION

Thank you for choosing the igqual RP2V17A Laptop Cooling Pad. This device is designed to enhance your laptop's performance and extend its lifespan by providing efficient heat dissipation. It features two ultra-silent fans, adjustable ergonomic angles, and convenient USB connectivity, making it ideal for extended use during work, study, or gaming.

Please read this manual carefully before using the product to ensure proper operation and maintenance.



Image: igqual RP2V17A Laptop Cooling Pad highlighting its key features: 4 adjustable positions, compatibility with laptops up to 17 inches, and an adjustable angle range from 6.5 to 45 degrees.

SETUP INSTRUCTIONS

1. **Unpack the Cooling Pad:** Carefully remove the cooling pad and all accessories from its packaging.
2. **Place on a Stable Surface:** Position the cooling pad on a flat, stable surface where you intend to use your laptop.
3. **Adjust the Angle:** The cooling pad offers 4 adjustable tilt positions, ranging from 6.5° to 45°. Lift the rear of the cooling pad and select your desired angle using the integrated support stand. Ensure the stand is securely locked into place.



Image: Close-up view of the adjustable support mechanism, demonstrating how to set the desired angle for ergonomic use.

4. **Place Your Laptop:** Carefully place your laptop on the cooling pad. The anti-slip base and front stoppers will help secure your laptop in position.
5. **Connect Power:** Use the included USB-A to USB-A cable to connect the cooling pad to an available USB port on your laptop. One USB port on the cooling pad is dedicated for power.
6. **Utilize Additional USB Port:** The cooling pad provides an additional USB port for connecting other peripherals, such as a mouse, keyboard, or USB drive.



Image: The iggual RP2V17A cooling pad displaying its two USB ports (one for power, one for peripherals) and the included USB cable and removable phone holder.

7. **Attach Phone Holder (Optional):** If desired, attach the removable phone holder to either the right or left side of the cooling pad for convenient access to your mobile device.

OPERATING INSTRUCTIONS

- **Power On/Off:** The fans will automatically start operating once the cooling pad is connected to your laptop's USB port and the laptop is powered on. Disconnect the USB cable to turn off the fans.
- **Fan Operation:** The two 100mm ultra-silent fans operate at approximately 1400 RPM, providing consistent airflow to cool your laptop's underside. Blue LED lights on each fan indicate operation.

iggual



Image: Top view of the iggual RP2V17A cooling pad, illustrating the two active fans with their blue LED illumination.

- **Ergonomic Adjustment:** Re-adjust the tilt angle at any time by lifting the rear and selecting a different notch on the support stand to find the most comfortable and ergonomic viewing position for your laptop.
- **USB Passthrough:** Use the secondary USB port on the cooling pad to connect other USB devices without occupying an additional port on your laptop.

MAINTENANCE AND CARE

- **Cleaning:** Regularly clean the surface of the cooling pad and the fan grilles to prevent dust buildup, which can hinder airflow. Use a soft, dry cloth. For stubborn dust, a slightly damp cloth can be used, ensuring the device is unplugged and completely dry before next use. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the cooling pad in a cool, dry place, away from direct sunlight and extreme temperatures. Its foldable design allows for compact storage.
- **Handling:** Avoid dropping the cooling pad or subjecting it to strong impacts, as this may damage the internal components or the fan blades.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fans are not spinning.	USB cable not properly connected or no power from laptop USB port.	Ensure the USB power cable is securely connected to both the cooling pad and a functioning USB port on your laptop. Try a different USB port.
Blue LED lights are off.	Fans are not receiving power.	This indicates the fans are not operating. Refer to the "Fans are not spinning" solution.
Laptop is unstable on the cooling pad.	Laptop not positioned correctly or anti-slip features are obstructed.	Ensure your laptop is centered on the cooling pad and resting against the front stoppers. Check that the anti-slip pads on the cooling pad are clean and intact.
Cooling performance is poor.	Dust buildup on fans or laptop vents; obstructed airflow.	Clean the cooling pad's fans and grilles. Ensure your laptop's own vents are clear of dust. Do not place the cooling pad on soft surfaces that might block its airflow.

SPECIFICATIONS

Model Number	800395
Dimensions (L x W x H)	38 x 27 x 6.5 cm (14.96 x 10.63 x 2.56 inches)
Weight	755 g (1.66 lbs)
Material	High-resistance Plastic
Number of Fans	2
Fan Speed	1400 ± 10% RPM
USB Ports	2 (1 for power, 1 for data passthrough)
Laptop Compatibility	Up to 17 inches
Adjustable Angles	4 positions (6.5° to 45°)
Cooling Method	Air Cooling
LED Lighting	Blue LED on each fan

WARRANTY AND SUPPORT

The iggual RP2V17A Laptop Cooling Pad comes with a **3-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact iggual customer service through the official website or your retailer's support channels. Ensure you have your product model number (800395) and purchase details ready.



Image: Visual representation of the 3-year warranty provided with the product.