

Dreambaby Retractable-Parent

Dreambaby Glide N Hide Retractable Baby Gate Instruction Manual

Model: Retractable-Parent

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Dreambaby Glide N Hide Retractable Baby Gate. This gate is designed to provide a safe barrier for children and pets in various areas of your home. Its retractable design allows for flexible use in wide openings, stairs, doorways, and hallways, offering both convenience and security.

The gate features a durable mesh construction and an EZY-Check Indicator system for visual confirmation of correct installation and secure closure. It can extend up to 55 inches wide and stands 35 inches tall, making it suitable for a variety of indoor and outdoor applications.

2. IMPORTANT SAFETY INFORMATION

- **Read all instructions before installation and use.** Failure to follow these instructions could result in serious injury or death.
- This safety barrier is for domestic use only.
- Always ensure the gate is securely closed and locked before leaving a child or pet unattended.
- The EZY-Check Indicators (red/green) provide visual confirmation of proper installation and secure closure. Always check these indicators.
- Never use this gate to prevent a child from climbing over it.
- Do not use this gate if any components are damaged or missing.
- Regularly check all fittings and mounting hardware to ensure they are tight and secure.
- This gate is suitable for children up to 24 months of age.
- If used outdoors, bring the gate inside during rain, hail, snow, or freezing conditions to prevent damage.

3. PACKAGE CONTENTS

Please ensure all parts are present before beginning installation:

- Retractable Gate Unit
- Mounting Brackets (for both sides of the opening)
- Mounting Templates
- Screws and Wall Plugs
- Instruction Manual

4. SETUP AND INSTALLATION

The Dreambaby Glide N Hide Retractable Baby Gate is designed for hardware mounting and can be installed inside or outside door frames, at the top or bottom of stairs, or in hallways.

4.1. Measuring Your Opening

Measure the width of your opening carefully. The gate extends up to 55 inches (140 cm) for inside openings and up to 47 inches (120 cm) for outside openings. The gate height is 35 inches (90 cm).

EXTRA-TALL with multiple mounting options



MEASURE TWICE BUY ONCE
Mount inside or outside of door frame

Image 1: Gate dimensions for inside and outside openings. The gate is 35 inches (90 cm) tall. For inside openings, it spans 23.5-55 inches (60-140 cm). For outside openings, it spans 23.5-47 inches (60-120 cm).

4.2. Choosing Mounting Location

- **Inside Opening:** Mount the gate unit and catch brackets directly to the inside of the door frame or wall.
- **Outside Opening:** Mount the gate unit and catch brackets to the wall outside the door frame.
- Ensure the mounting surface is structurally sound. If mounting into drywall, locate studs or use appropriate wall anchors.

4.3. Installation Steps

1. **Position Mounting Templates:** Use the provided mounting templates to mark the drill holes for the gate unit and catch brackets. Ensure the templates are level and at the correct height.
2. **Drill Pilot Holes:** Drill pilot holes at the marked locations.
3. **Install Mounting Brackets:** Securely attach the gate unit mounting brackets and the catch brackets to the wall using the provided screws and wall plugs.
4. **Attach Gate Unit:** Slide the retractable gate unit onto its mounting brackets.
5. **Attach Catch Brackets:** Attach the catch brackets to the opposite side of the opening.
6. **Test Operation:** Extend the gate and engage it with the catch brackets. Ensure it locks securely and the EZY-Check indicator shows green.



ADJUSTABLE & VERSATILE

Suitable for use on stairs, doors, hallways,
outdoors* & more

Image 2: The retractable gate installed at the top of a staircase, demonstrating its adjustable and versatile placement.



Image 3: The gate fully retracted against the wall, showing how it clears the walkway when not in use.

5. OPERATING INSTRUCTIONS

The Dreambaby Glide N Hide Retractable Baby Gate is designed for single-handed operation.

5.1. Opening the Gate

1. **Unlock:** Press and twist the button on the top of the gate unit to unlock the mechanism.
2. **Retract:** Gently guide the mesh barrier back into the gate unit. The gate will retract fully, leaving your walkway clear.

5.2. Closing and Locking the Gate

1. **Extend:** Press and twist the button on the top of the gate unit, then pull the mesh barrier across the opening towards the catch brackets.
2. **Engage:** Hook the mesh barrier onto the catch brackets.

3. **Lock:** Release the button. The gate will automatically lock, and the EZY-Check indicator should display **GREEN**, confirming it is securely closed. If it shows **RED**, the gate is not properly locked.





ENHANCED SAFETY FEATURES

Two EZY-Check Indicators confirm correct installation and secure closure at a glance

Image 4: Close-up view of the EZY-Check indicators. A green indicator signifies the gate is locked and correctly installed, while a red indicator shows it is unlocked or not properly secured.

6. MAINTENANCE

- **Cleaning:** Wipe the gate with a damp cloth and mild soap. Do not use abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically inspect the gate for any signs of wear, damage, or loose components. Ensure all screws and mounting hardware remain tight.
- **Outdoor Use:** If used outdoors, regularly clean the gate and ensure it is protected from extreme weather conditions as specified in the safety information.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Gate does not lock securely (EZY-Check shows RED).	Gate not fully extended or engaged with catch brackets.	Ensure the mesh barrier is pulled taut and fully hooked onto the catch brackets. Re-check the EZY-Check indicator.
Gate does not retract smoothly.	Obstruction in the retraction mechanism or dirt buildup.	Check for any debris or objects blocking the mesh. Clean the gate unit. Ensure the button is fully pressed and twisted during retraction.
Gate feels loose after installation.	Mounting hardware is not tight or wall anchors are insufficient.	Tighten all screws. If mounting into drywall without studs, consider relocating or using stronger wall anchors. Consult a professional if unsure.

8. SPECIFICATIONS

- **Brand:** Dreambaby
- **Model Number:** Retractable-Parent
- **Material:** Metal (frame), Durable Mesh (barrier)
- **Color:** White
- **Product Dimensions (Extended):** 55 inches (W) x 35 inches (H) / 140 cm (W) x 90 cm (H)
- **Mounting Type:** Wall Mount (Hardware Mounted)
- **Closure Type:** Retractable
- **Target Species:** Dog (also suitable for children)

9. WARRANTY AND SUPPORT

Dreambaby products are manufactured to high-quality standards. For warranty information, product support, or to report any issues, please refer to the contact information provided on the product packaging or visit the official Dreambaby website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question