

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Back Bay Audio](#) /
- › [Back Bay Audio Tempo 30 Wireless Earbuds User Manual](#)

Back Bay Audio Tempo 30

Back Bay Audio Tempo 30 Wireless Earbuds User Manual

Model: Tempo 30

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Back Bay Audio Tempo 30 Wireless Earbuds. Please read thoroughly before use.



Image: Back Bay Audio Tempo 30 Wireless Earbuds in silver, showcasing their sleek design.

WHAT'S IN THE BOX

- Back Bay Audio Tempo 30 Wireless Earbuds
- Charging Case
- USB-C Charging Cable
- Multiple Sizes of Eartips (6 pairs)
- User Manual

GREAT FOR SMALL EARS

Includes 6 Eartip Size Options



Image: The Tempo 30 earbuds in their charging case, accompanied by a selection of different sized eartips for a customized fit.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge your Tempo 30 earbuds and charging case. The charging case provides an additional 24 hours of battery life, extending total playtime to 32 hours.

- Connect the provided USB-C cable to the charging port on the case and to a power source.
- The LED indicator on the case will flash while charging and turn solid when fully charged.
- Place the earbuds into the charging case to charge them. The case display will show the charge level.

32 HOUR BATTERY LIFE

USB TYPE-C CHARGING



Image: The Tempo 30 charging case with earbuds, illustrating the USB-C charging port and the digital battery display.

2. Pairing with Your Device

The Tempo 30 earbuds are designed for simple pairing with any Bluetooth-enabled device.

1. Ensure earbuds are charged and inside the charging case.
2. Open the charging case lid. The earbuds will automatically enter pairing mode.
3. On your device (phone, computer, etc.), go to Bluetooth settings and select "Back Bay Tempo 30" from the list of available devices.
4. Once connected, you will hear an audio prompt "Device Connected".

3. Optimal Fit for Small Ears

The Tempo 30 earbuds come with 6 different ear-tip sizes to ensure a comfortable and secure fit, especially for smaller ear canals. Experiment with different sizes to find the best seal for optimal sound quality and comfort.



GREAT FOR SMALL EARS

We've included 6 different ear-tip sizes so even the smallest and largest ears can find a comfortable fit



Image: A close-up of the Tempo 30 earbuds highlighting the multiple ear-tip options designed for a comfortable fit in small ears.

OPERATING INSTRUCTIONS

Touch Controls

The Tempo 30 earbuds feature intuitive touch controls on each earbud for managing audio playback, calls, and sound modes.

Action	Left Earbud	Right Earbud
Volume Control	Single Tap: Volume Down	Single Tap: Volume Up
Play/Pause	Double Tap (either earbud)	
Next Song		Hold for 2 seconds
Bass Mode On/Off		Triple Tap
Voice Assistant	Triple Tap	
Noise Control Modes	Hold for 2 seconds (cycles through Transparency, Noise Blocking, Off)	
Power On/Off	Hold for 5 seconds (either earbud) or place in charging case	

CHOOSE YOUR SOUND



SIGNATURE
MODE



BOOSTED BASS
MODE

2 SOUND MODES

Image: A visual representation of the Tempo 30 earbuds, illustrating the two available sound modes: Signature Mode and Boosted Bass Mode.

Sound Modes

- **Signature Mode:** Provides a balanced audio experience.
- **Boosted Bass Mode:** Enhances low frequencies for a more powerful sound, ideal for workouts or gaming. Activate by triple-tapping the right earbud.

Noise Control

The Tempo 30 offers three noise control modes:

- **Transparency Mode:** Allows ambient sounds to pass through, keeping you aware of your surroundings.
- **Noise Blocking Mode:** Actively reduces external noise for an immersive listening experience.
- **Off:** Disables noise control features.

Cycle through these modes by holding the left earbud for 2 seconds.

MAINTENANCE

- **Cleaning:** Regularly clean the eartips and charging contacts with a soft, dry cloth.
- **Water Resistance:** The Tempo 30 earbuds are IPX7-rated waterproof, making them resistant to sweat and rain. They are not designed for swimming.



Image: The Tempo 30 earbuds shown with water droplets, emphasizing their IPX7 water-resistant rating.

TROUBLESHOOTING

- **No Sound/Pairing Issues:** Ensure earbuds are charged. Turn off and on your device's Bluetooth, then re-attempt pairing.
- **One Earbud Not Working:** Place both earbuds back in the charging case, close the lid, and wait for 10 seconds. Then open and try again.
- **Poor Sound Quality:** Check ear-tip fit. Ensure earbuds are clean and free of debris.

SPECIFICATIONS

- **Model Name:** Back Bay Tempo 30
- **Connectivity Technology:** Bluetooth 5.0
- **Battery Life:** Up to 32 hours (8 hours earbuds + 24 hours charging case)

- **Water Resistance Level:** IPX7 (Sweatproof, Water Resistant - Not for Swimming)
- **Noise Control:** Sound Isolation (Transparency Mode, Noise Blocking Mode)
- **Audio Driver Type:** Dynamic Driver
- **Microphone:** Built-in for calls with CVC 8.0 Mic Noise Cancelling
- **Control Method:** Touch
- **Material:** Metal, Premium ABS Plastic
- **Item Weight:** 45 Grams (1.59 ounces)
- **Product Dimensions:** 1.1 x 2.9 x 1.8 inches

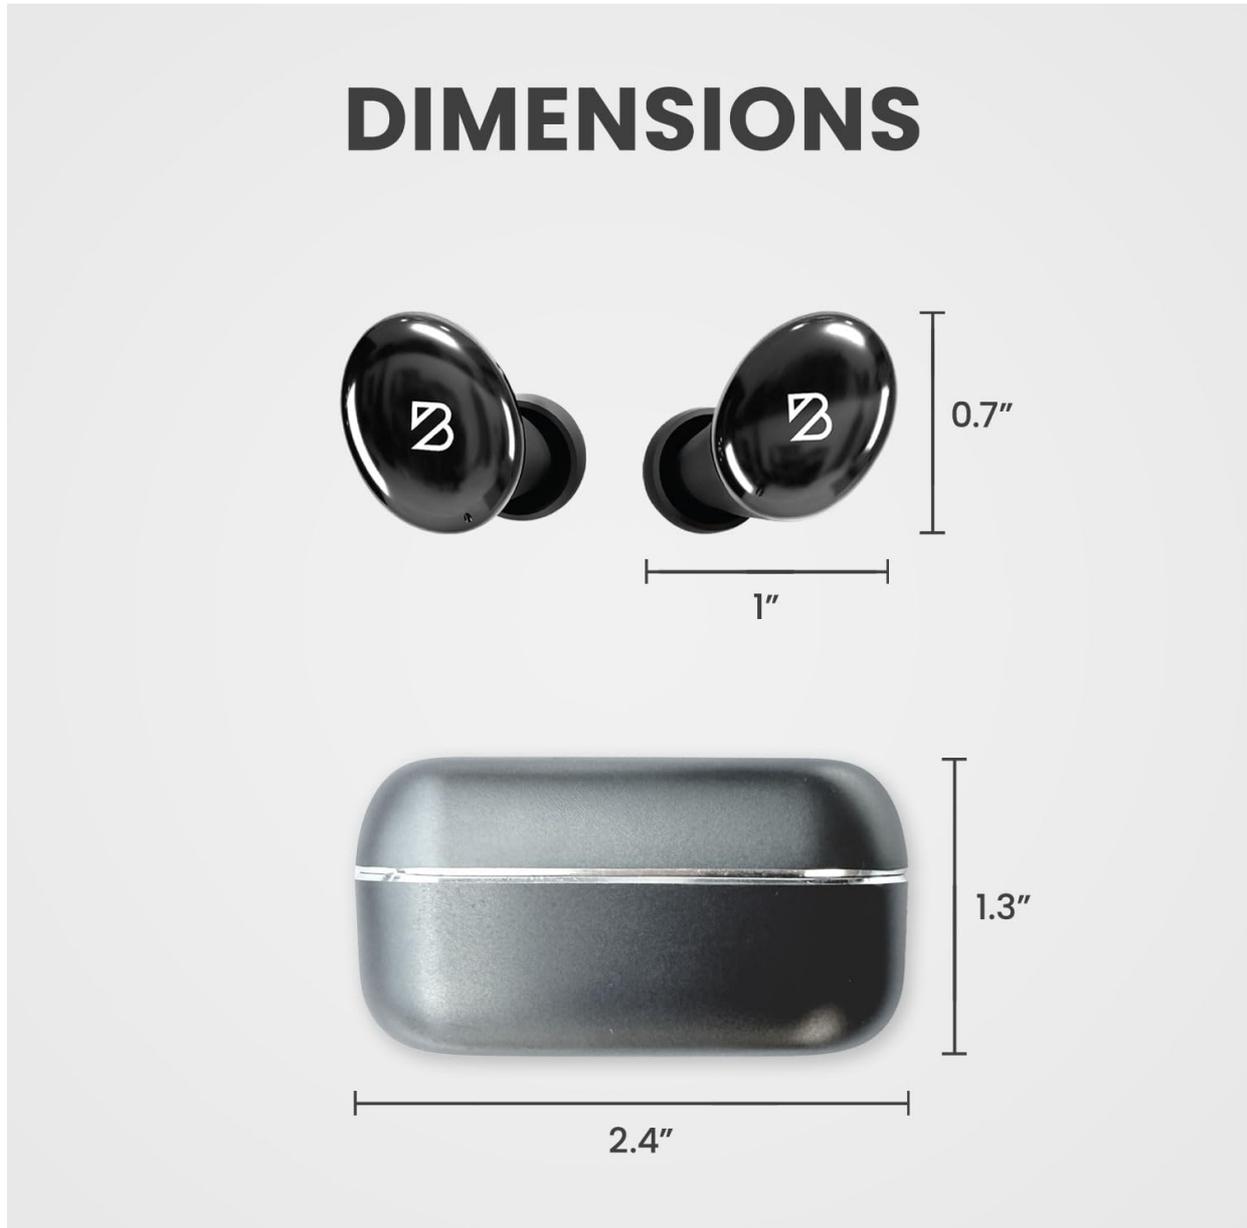


Image: Diagram showing the dimensions of the Tempo 30 earbuds and their charging case.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video from Back Bay Brand showcasing the Tempo 30 Wireless Bluetooth Earbuds and their features for workouts.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided in the packaging or visit the official Back Bay Audio website.