

[Manuals.plus](#) /

› [CERAMAX](#) /

› CERAMAX Electric Hot Pot Cooker Frying Pan - Model 6390 User Manual

CERAMAX 6390

CERAMAX Electric Hot Pot Cooker Frying Pan

Model: 6390

Brand: CERAMAX

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation of your CERAMAX Electric Hot Pot Cooker Frying Pan, Model 6390. This appliance is designed for cooking various meals in a compact and portable format.



Image 1: CERAMAX Electric Hot Pot Cooker Frying Pan.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the electrical unit, cord, or plug in water or other liquids.
- Ensure the power cord is securely connected and free from damage. Discontinue use if the cord or plug is damaged.
- Always use the appliance on a stable, heat-resistant surface.
- The exterior of the pot is designed to be cool-touch, but exercise caution as internal surfaces and contents will be hot during and after operation.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling or storing.
- Do not operate the appliance with an empty pot for extended periods.
- Use under adult supervision, especially when children are present.
- Avoid using abrasive cleaners or scouring pads on the non-stick interior.

- Do not use this appliance for purposes other than its intended use.

3. PRODUCT OVERVIEW

The CERAMAX Electric Hot Pot includes the main cooking unit with an integrated handle, a transparent lid, and a steamer insert.



Image 2: Main components of the CERAMAX Electric Hot Pot.

Your browser does not support the video tag.

Video 1: Overview of the Electric Hot Pot, including its size, lid, steamer insert, and temperature settings.

- **Main Pot:** Features a ceramic non-stick interior for easy cooking and cleaning.
- **Handle with Temperature Control:** The handle contains the power input and a switch for selecting temperature settings.
- **Lid:** A transparent lid allows monitoring of food during cooking.
- **Steamer Insert:** A plastic insert for steaming vegetables or other foods.

4. SETUP

Before first use, wash the pot, lid, and steamer insert with warm, soapy water. Rinse thoroughly and dry completely. Ensure the power input port on the handle is dry before connecting the power cord.

1. Place the electric hot pot on a stable, flat, and heat-resistant surface.
2. Connect the power cord to the designated port on the handle of the pot.
3. Plug the other end of the power cord into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

The CERAMAX Electric Hot Pot offers two temperature settings for versatile cooking.



Image 3: Temperature control dial with settings 0, 1 (300°F), and 2 (350°F).

- **Temperature Settings:** The appliance features two heat settings: **1 (300°F)** for lower heat cooking and **2 (350°F)** for higher heat cooking.

- **Cooking Functions:** This electric pot can be used for boiling, stewing, steaming, sautéing, and frying.
- **To Operate:** Add desired ingredients to the pot. Select the desired temperature setting (1 or 2) using the switch on the handle. The appliance will begin heating.
- **Steaming:** For steaming, add water to the main pot, place the steamer insert with food inside, and cover with the lid. Select the desired temperature.

Your browser does not support the video tag.

Video 2: Demonstration of the CERAMAX Electric Hot Pot's features and cooking capabilities.

Your browser does not support the video tag.

Video 3: Short demonstration of the Electric Skillet Pot in use.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your electric hot pot.

- Always unplug the appliance and allow it to cool completely before cleaning.
- The non-stick ceramic interior can be cleaned with a soft sponge, warm water, and mild dish soap.
- **Important:** Do not submerge the main pot unit, especially the handle with electrical components, in water. This can cause electrical damage and pose a safety risk. Wipe the exterior with a damp cloth.
- The lid and steamer insert are dishwasher safe or can be hand-washed.
- Avoid using metal utensils or abrasive cleaning tools that could scratch the non-stick surface.

NONSTICK CERAMIC INTERIOR



No Oil or
Butter Needed



Easy to
Clean



Made Without
PFOA



Image 4: Non-stick ceramic interior for easy cleaning.

7. TROUBLESHOOTING

If you encounter issues with your CERAMAX Electric Hot Pot, refer to the following common problems and solutions:

- **Appliance not heating:** Ensure the power cord is securely plugged into both the appliance and a working electrical outlet. Check if the temperature switch is set to 1 or 2 (not 0).
- **Uneven heating or burning smell:** This may indicate an electrical issue or improper use. Immediately unplug the appliance and contact customer support. Do not attempt to repair it yourself.
- **Food cooks too quickly or gets too hot:** The appliance has two fixed temperature settings (300°F and 350°F). Adjust cooking times accordingly. If the low setting still feels too high, monitor food closely and consider turning the unit off periodically to manage heat.
- **Food sticking to the pot:** Although the pot has a non-stick ceramic coating, excessive heat or lack of oil/liquid for certain foods can cause sticking. Ensure proper cooking techniques and sufficient lubrication if necessary.

8. SPECIFICATIONS

Feature	Specification
Brand	CERAMAX
Model Number	6390
Material	Ceramic
Finish Type	Non-Stick
Color	Cream
Capacity	1.5 Liters (1.6 Quarts)
Product Dimensions	14"D x 5"W x 8"H
Item Weight	3.34 pounds
Power	800 Watts
Temperature Settings	2 (300°F, 350°F)
Oven Safe	No
Suitable for Stovetop	No

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact CERAMAX customer service directly. Keep your purchase receipt for any warranty claims.