



Manuals.plus /

› Buyplus /

› Buyplus Wall Mounted Pressure Washer Model 01 Instruction Manual

## Buyplus 01

# Buyplus Wall Mounted Pressure Washer Model 01 Instruction Manual

Your Guide to Efficient Cleaning

## INTRODUCTION

---

Thank you for choosing the Buyplus Wall Mounted Pressure Washer, Model 01. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before use and retain it for future reference.

The Buyplus Wall Mounted Pressure Washer is designed for convenient and powerful cleaning tasks around your home, garage, and vehicles. Its wall-mounted design with a 100-foot retractable hose offers space-saving storage and extended reach, eliminating the need to move a bulky unit. The remote-controlled operation allows for easy pressure adjustment and hose retraction from a distance, enhancing flexibility and user comfort.

Equipped with a GFCI power cord for safety, a foam cannon, and five interchangeable nozzles, this unit is versatile for various cleaning needs.

## PACKAGE CONTENTS

---

Ensure all items listed below are present in your package:

- Buyplus Wall Mounted Pressure Washer Unit
- 100-foot Retractable High-Pressure Hose
- Pressure Washer Gun with Remote Control
- GFCI Power Cord
- Foam Cannon
- 5 Quick-Connect Nozzles (0°, 15°, 25°, 40°, Turbo)
- Wall Mounting Bracket and Hardware (expansion screws)
- Instruction Manual



Image: The Buyplus Wall Mounted Pressure Washer unit with its included accessories, including the pressure washer gun, foam cannon, various nozzles, and mounting hardware.

## SAFETY INFORMATION

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Do not direct the water stream at people, pets, or electrical devices.
- Wear appropriate safety gear, including eye protection, during operation.
- Ensure the power cord and plug are in good condition. Do not use if damaged.
- Always connect the pressure washer to a grounded outlet protected by a Ground Fault Circuit Interrupter (GFCI).
- Keep children and pets away from the operating area.
- Never operate the unit without a water supply.

## SETUP

### 1. Mounting the Unit

The pressure washer is designed for wall mounting to save space and provide convenience. Use the included mounting bracket and hardware for secure installation.

1. Choose a suitable location on a sturdy wall, ensuring it is close to a water source and a grounded electrical outlet.
2. Determine and mark the mounting points for the bracket.
3. Drill pilot holes and install the included expansion screws.
4. Securely attach the metal support bracket to the wall.
5. Carefully lift the pressure washer unit and slide it onto the fixed metal support, ensuring it locks into place with the hover pin.



Image: A visual guide demonstrating the steps to wall mount the Buyplus pressure washer, including marking points, installing screws, and securing the unit.

Your browser does not support the video tag.

Video: A demonstration of the product installation process, showing how to mount the pressure washer unit onto a wall bracket.

## 2. Connecting Water Supply

Connect your garden hose to the water inlet on the pressure washer unit. Ensure all connections are tight to prevent leaks.

## 3. Connecting Power

Plug the GFCI power cord into a grounded electrical outlet. The GFCI plug is a safety feature that disconnects the circuit in case of leakage, protecting your safety.



Image: Close-up of the GFCI (Ground Fault Circuit Interrupter) plug, highlighting its safety feature for leakage protection.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off and Pressure Adjustment

The unit features an advanced remote control panel on the pressure washer gun, allowing you to control the power and adjust pressure settings conveniently.

- Press the **ON/OFF** button on the gun's control panel to power the unit on or off.
- Use the **UP** and **DOWN** arrow buttons to cycle through 5 different pressure levels (Eco, Soft, Medium, Strong, Maximum).



## Equipped with a Leakage Protection Plug (GFCI)

The pressure washer can disconnect the circuit in case of leakage, protecting your safety. Our pressure washer prioritizes safety and convenience.

Image: The advanced remote control panel on the pressure washer gun, showing buttons for ON/OFF, REVERSE (for hose retraction), and pressure adjustment with indicator lights.

Your browser does not support the video tag.

Video: A demonstration of the pressure washer's remote control features, including powering on, adjusting pressure levels, and retracting the hose.

## 2. Hose Extension and Retraction

The unit features a 100-foot high-pressure hose with an advanced electric retraction system.

- To extend the hose, simply pull it out to the desired length. The hose will lock in place.
- To retract the hose, press the **REVERSE** button on the control panel of the pressure washer gun. The hose will automatically rewind into the unit, preventing tangles and distortion.

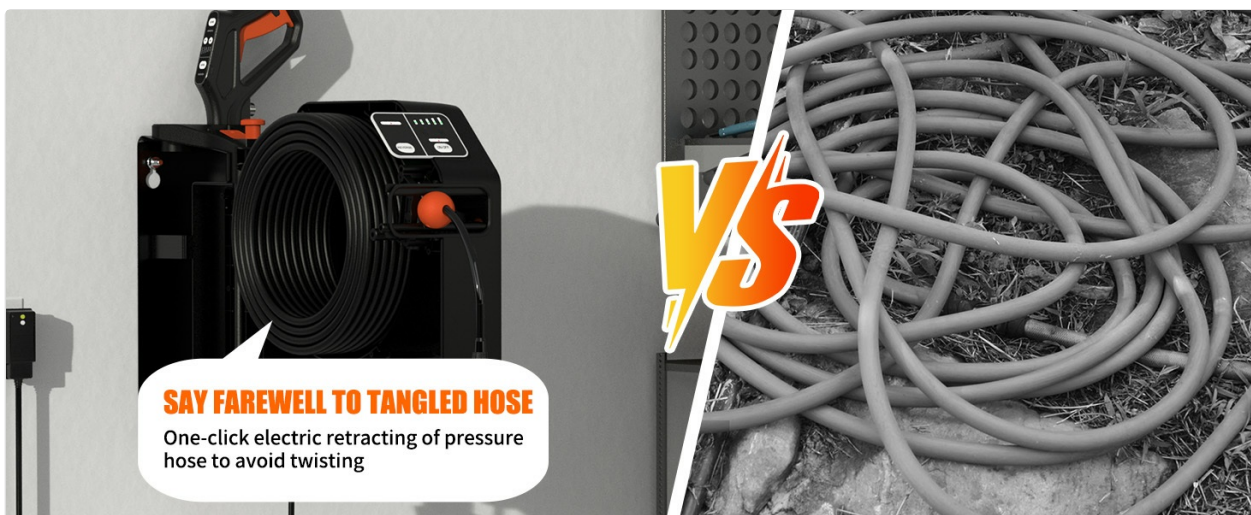


Image: A visual comparison showing a tangled hose versus the neat, automatically retracted hose of the Buyplus pressure washer, highlighting its anti-tangle feature.



Image: An illustration of the advanced electric recovery system for the pressure washer hose, designed to prevent distortion and ensure smooth retraction.



Image: The 100-foot high-pressure hose fully extended from the wall-mounted unit, demonstrating its flexible and durable design for automatic retraction.

### 3. Nozzle Selection and Foam Cannon

The pressure washer comes with 5 quick-connect nozzles and a foam cannon for various cleaning applications.

- To change nozzles, pull back the collar on the end of the spray wand, insert the desired nozzle, and release the collar to lock it in place.
- The 0° (red) nozzle provides a concentrated stream for tough spots.
- The 15° (yellow) nozzle offers a powerful, narrow spray.
- The 25° (green) nozzle is suitable for general cleaning.
- The 40° (white) nozzle provides a wide, gentle spray for delicate surfaces.
- The Turbo nozzle delivers a rotating stream for enhanced cleaning power.
- Attach the foam cannon for efficient application of cleaning detergents. Fill the foam cannon with appropriate detergent and connect it to the spray gun.



## POWERFUL HIGH-QUALITY MOTOR

|                                 |                              |                              |
|---------------------------------|------------------------------|------------------------------|
| <b>5000</b> PSI<br>Max Pressure | <b>3.2</b> GPM<br>Water Flow | <b>1800</b> W<br>Motor Power |
|---------------------------------|------------------------------|------------------------------|

Image: A user applying foam to a car using the included soap bottle (foam cannon) attached to the pressure washer gun.



## SOAP BOTTLE

Soap bottle allows you to clean your car with a rich lather.

Image: A display of the five quick-connect nozzles (0°, 15°, 25°, 40°, Turbo) and their respective spray patterns, suitable for various cleaning tasks.

Your browser does not support the video tag.

Video: A demonstration of the Buyplus Electric Pressure Washer in action, showcasing its use with the foam cannon for car cleaning.

## MAINTENANCE

### 1. Cleaning Nozzles

Regularly clean the nozzles to prevent blockages. Use the included nozzle cleaning tool to clear any debris.

### 2. Winter Storage

If storing the pressure washer in an area where temperatures may drop below freezing, drain all water from the pump and hoses to prevent damage. Consider using a pump protector solution.

### 3. General Cleaning

Wipe down the unit and accessories with a damp cloth after each use. Do not use harsh chemicals.

## TROUBLESHOOTING

| Problem             | Possible Cause  | Solution   |
|---------------------|---|--|
| Unit does not start | No power supply; GFCI tripped; ON/OFF button not pressed. | Check power connection; Reset GFCI; Press ON/OFF button on gun.  |
| Low pressure        | Insufficient water supply; Clogged nozzle; Air in pump.   | Ensure full water flow; Clean nozzle; Bleed air from pump by running without nozzle until steady stream. |
| Hose not retracting | Hose tangled or obstructed; REVERSE button not pressed.   | Ensure hose is free of obstructions; Press REVERSE button firmly.  |
| Water leaks         | Loose connections; Damaged O-rings.                       | Tighten all connections; Replace damaged O-rings.  |

## SPECIFICATIONS

| Feature            | Specification                             |
|--------------------|---|
| Brand              | Buyplus                                   |
| Model Number       | 01  |
| Power Source       | AC  |
| Item Weight        | 20 Pounds                                 |
| Hose Length        | 100 Feet                                  |
| Product Dimensions | 15"L x 8"W x 20"H                         |
| Maximum Flow Rate  | 2.8 Gallons Per Minute                    |
| Batteries          | 1 Lithium Ion battery required (included) |

## WARRANTY AND SUPPORT

The Buyplus Wall Mounted Pressure Washer comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or any inquiries, please contact Buyplus customer service through the contact information provided on the warranty card or the official Buyplus website.