

Deolme B0DGSPXVYQ

Deolme Smart Oversized Electric Recliner Chair User Manual

Model: B0DGSPXVYQ

Brand: Deolme

INTRODUCTION

This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your Deolme Smart Oversized Electric Recliner Chair. Please read this manual thoroughly before use and retain it for future reference.

The Deolme Smart Oversized Electric Recliner Chair is designed for ultimate relaxation, featuring a power recline function, 360-degree swivel, and glider rocking motion. It includes integrated smart features such as voice control, USB charging ports, and built-in speakers for an enhanced user experience.

IMPORTANT SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Maximum Weight Capacity:** Do not exceed the maximum weight capacity of **450 pounds (204 kg)**. Exceeding this limit may cause damage to the chair and lead to injury.
- **Assembly:** Assembly is required. Ensure all components are correctly assembled and tightened before use. Refer to the "Setup" section for detailed instructions.
- **Children and Pets:** Keep children and pets away from the chair's moving parts, especially during recline or adjustment.
- **Power Cord:** Ensure the power cord is not pinched, tangled, or placed under the chair where it could be damaged. Use only the provided power adapter.
- **Placement:** Place the chair on a level, stable surface. Ensure there is adequate clearance around the chair for reclining and swiveling.
- **Cleaning:** Disconnect power before cleaning. Use only recommended cleaning agents and methods as described in the "Maintenance and Care" section.
- **Modifications:** Do not attempt to modify or repair the chair yourself. Contact customer support for assistance.

PACKAGE CONTENTS

Please check that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Recliner Base (1)
- Recliner Backrest (1)
- Seat Cushion (1)
- Power Adapter (1)
- Lumbar Pillow (1)
- User Manual (1)

SETUP AND ASSEMBLY

Follow these steps to assemble your Deolme Smart Oversized Electric Recliner Chair:

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the seat base. Push down firmly until the backrest clicks securely into place. Ensure both sides are fully engaged.
3. **Connect Power:** Locate the power cable extending from the back of the chair. Connect it to the provided power adapter, then plug the adapter into a standard wall outlet.
4. **Position Chair:** Place the assembled chair in your desired location, ensuring sufficient space for full recline and swivel motion.
5. **Final Check:** Gently test the recline function and swivel to ensure smooth operation.



Image: The assembled Deolme Smart Oversized Electric Recliner Chair in a room, showcasing its design and size.



Image: A close-up view of the power connection port located on the back of the recliner, where the power cable is inserted.

OPERATING INSTRUCTIONS

Power Recline Function

The chair features an electric recline mechanism, allowing adjustment from 90 to 135 degrees. You can control the recline using the side buttons or voice commands.

- **Button Control:** Locate the control panel on the side of the chair. Press the forward button to recline and the backward button to return to the upright position.
- **Voice Control:** The chair supports voice commands for recline. Use phrases like "Hi~, Open Sofa" or "Hi~, Smart Sofa" to initiate recline. Specific commands for stopping or adjusting may vary.

SMART SOFA

Switching by voice

SMART SOFA

Hi~

OPEN SOFA

OPENING THE SOFA

1



2



Read a book



Music



z z z

Sleep

Image: Visual representation of the smart sofa's voice control functionality and various recline positions for different activities like reading, music, and sleeping.



Image: The recliner shown with its footrest fully extended, demonstrating the comfortable lounging position.

Swivel and Glider Rocking

The chair offers 360-degree swivel and a gentle glider rocking motion for enhanced comfort and versatility.

- **Swivel:** The chair can rotate 270 degrees smoothly on its base, allowing you to easily change your viewing direction.
- **Glider Rocking:** The chair provides a gentle front-to-back gliding motion, ideal for relaxation or lulling children.



Image: A visual guide demonstrating the chair's three primary functions: reclining, 280-degree swivel, and 30-degree glider rocking motion.

Integrated Features

- **USB Charging Ports:** Located on the side control panel, these ports allow you to charge your mobile devices while relaxing.
- **Built-in Speakers:** The chair includes integrated speakers for an immersive audio experience. Connect your device via Bluetooth.
- **Bluetooth Audio:** To connect, enable Bluetooth on your mobile phone and search for the chair's Bluetooth name (refer to your phone's Bluetooth settings for pairing instructions). Once connected, audio from your device will play through the chair's speakers.
- **Hidden Armrest Storage:** The widened armrests feature hidden storage compartments, ideal for remote controls, books, or other small items.
- **Phone Holder:** A flexible phone holder is integrated, allowing you to comfortably view your device.

360° Surround Bluetooth Audio

By connecting it through your cell phone's bluetooth



Image: A user enjoying the chair's 360-degree surround Bluetooth audio feature, with a smartphone connected to the chair's speakers.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your recliner.

- **Cleaning Fabric:** The faux leather material is designed for easy maintenance. For general cleaning, wipe the surface with a soft, damp cloth. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild soap solution and wipe clean, then dry thoroughly. Avoid abrasive cleaners or harsh chemicals.
- **Frame and Mechanism:** Periodically check all bolts and screws to ensure they are tight. Do not overtighten. Lubricate moving parts if necessary with a silicone-based lubricant, avoiding contact with fabric.
- **Power Components:** Keep the power adapter and cords dry and free from dust. Do not expose to liquids.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading and material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not recline.	Not plugged in. Power cord damaged or loose. Power outlet not working.	Ensure the power adapter is securely plugged into the chair and a working wall outlet. Check the power cord for any visible damage. Reconnect any loose connections. Test the outlet with another device.
Bluetooth audio not connecting.	Bluetooth on device is off. Chair's Bluetooth is not discoverable. Too many devices connected.	Ensure Bluetooth is enabled on your mobile device. Try restarting the chair by unplugging and replugging the power. Disconnect other Bluetooth devices from your phone.
Chair makes unusual noises.	Loose bolts or connections. Mechanism needs lubrication.	Check and tighten all visible bolts and connections. Apply a small amount of silicone lubricant to moving metal parts.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Brand	Deolme
Model Number	B0DGSPXVYQ
Color	Dark Brown
Product Dimensions (D x W x H)	35"D x 32"W x 38.19"H
Overall Size (H x W x D)	38.19 inches H x 44.88 inches W x 60.62 inches D (fully reclined)
Maximum Weight Recommendation	450 Pounds (204 kg)
Item Weight	130.6 pounds (59.2 kg)
Reclining Angle	90 - 135 degrees
Swivel Angle	270 degrees
Material	Faux Leather (Soft Fabric), Sponge Fill
Special Features	Electric Recline, Swivel, Glider Rocking, Voice Control, USB Ports, Built-in Speakers, Hidden Armrest Storage, Phone Holder

Product size



Weight Capacity
350Lbs



Image: Detailed product dimensions and weight capacity diagram for the Deolme Smart Oversized Electric Recliner Chair.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Deolme customer service. Keep your purchase receipt and model number (B0DGSPXVYQ) handy when contacting support.

Contact Information: Please refer to the product packaging or the retailer's website for the most up-to-date customer service contact details.

Protection Plans: Additional protection plans may be available for purchase through your retailer. These plans typically offer extended coverage beyond the manufacturer's warranty.

© 2024 Deolme. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question