

okulaku Y101

okulaku 10-inch Kids Tablet Y101 User Manual

Model: Y101

INTRODUCTION

Welcome to the user manual for your new okulaku 10-inch Kids Tablet Y101. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. Please read these instructions carefully to ensure optimal performance and a safe user experience for your child.

1. SETUP

1.1 What's in the Box

Upon opening the package, ensure all items are present:

- okulaku 10-inch Kids Tablet Y101
- Protective Stand Case
- Charging Cable
- Power Adapter
- User Manual (this document)

1.2 Initial Charging

Before first use, fully charge the tablet. Connect the charging cable to the tablet's charging port and the power adapter to a wall outlet. A full charge typically takes several hours. The tablet is equipped with a large capacity battery designed for up to 6 hours of use on a full charge.



Image: Tablet connected to a charger, displaying a 'Fast charging' icon.

1.3 Power On/Off

- To power on: Press and hold the power button located on the side of the tablet until the screen lights up.
- To power off: Press and hold the power button, then select 'Power off' from the options that appear on the screen.

1.4 Initial Configuration

Upon first power-on, follow the on-screen prompts to:

- Select your preferred language.
- Connect to a Wi-Fi network.
- Set up date and time.
- Configure parental control settings (recommended).



Image: A mother and two children interacting with the tablet, highlighting its fast Wi-Fi connectivity.

2. OPERATING INSTRUCTIONS

2.1 Basic Navigation

The tablet operates using a touchscreen interface:

- **Tap:** Select an item or open an application.
- **Swipe:** Scroll through pages or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Home Button:** Returns to the main home screen.
- **Back Button:** Returns to the previous screen.

2.2 Parental Controls

The tablet comes with pre-installed parental control functions to manage your child's usage. The default password for parental controls is **0000**.

Parents can:

- Select appropriate content for their child.
- Set screen time limits.
- Monitor the content viewed by the child.

When the child accesses the iWaWa application, the tablet is locked to the dashboard, allowing access only to content you have defined.



Image: Tablet showing the parental control interface, allowing parents to manage accounts, time limits, content, and security.

2.3 Pre-installed Educational Apps

The tablet includes a variety of pre-installed educational content, games, videos, and applications suitable for children aged 3 to 12 years. Examples include Montessori, STEM, DIY, Kids TV, and First Learning. Children can engage in drawing, spelling, math, and age-appropriate video content.



Image: Tablet screen showing pre-installed educational applications for children.

2.4 Wi-Fi Connectivity

The tablet supports dual-band 2.4G + 5G high-speed Wi-Fi, including Wi-Fi 6, for improved network speed and stability. To connect to Wi-Fi:

1. Go to **Settings**.
2. Select **Network & Internet**.
3. Tap **Wi-Fi** and turn it on.
4. Select your desired network and enter the password if prompted.

2.5 Storage Expansion

The tablet comes with 32GB of internal storage, which can be expanded up to 64GB using a microSD card (not included). Insert the microSD card into the designated slot to increase storage capacity for more apps, photos, and videos.

3. MAINTENANCE

3.1 Cleaning the Tablet

To clean the tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid using harsh chemicals or abrasive materials.

3.2 Battery Care

To prolong battery life:

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures.
- Use the original charger and cable provided.

3.3 Software Updates

Periodically check for software updates to ensure your tablet has the latest features and security enhancements. You can usually find this option in **Settings > System > System update**

4. TROUBLESHOOTING

4.1 Common Issues and Solutions

Issue	Possible Solution
Tablet does not turn on	Ensure the tablet is fully charged. Press and hold the power button for at least 10-15 seconds.
Tablet not charging	Check if the charging cable and adapter are securely connected. Try a different power outlet. Ensure the charging port is clean and free of debris.
Screen freezes or is unresponsive	Press and hold the power button for about 10 seconds to force a restart. If the issue persists, consider a factory reset (see below).
Wi-Fi connection issues	Restart the tablet and your Wi-Fi router. Ensure you are within range of the Wi-Fi signal and have entered the correct password.
Poor audio quality	Check the volume settings. Ensure the speaker is not obstructed. If using headphones, check their connection and functionality.

4.2 Factory Reset

A factory reset will erase all data on the tablet and restore it to its original factory settings. This can resolve persistent software issues. **Backup any important data before proceeding.**

1. Go to **Settings**.
2. Select **System**.
3. Tap **Reset options**.
4. Select **Erase all data (factory reset)**.
5. Confirm your choice.

5. SPECIFICATIONS

Feature	Detail
Brand	okulaku
Model Number	Y101
Operating System	Android
Screen Size	10 Inches
Screen Resolution	1280 x 800 Pixels (IPS FHD)
Processor Brand	Allwinner (Quad-core)
RAM	2 GB
Internal Storage (ROM)	32 GB (Expandable up to 64 GB)
Wireless Technology	Wi-Fi 6 (802.11ax), 2.4G + 5G Dual-band
Special Features	Child Safety, Educational Concept, Parental Control
Battery Life	Up to 6 hours (typical usage)
Compatible Devices	Keyboard, Mouse, Headphones

6. WARRANTY INFORMATION

The okulaku 10-inch Kids Tablet Y101 comes with a **1-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by accidents, misuse, unauthorized repairs, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

7. SUPPORT

For further assistance, technical support, or warranty inquiries, please contact okulaku customer service through the retailer where you purchased the product or visit the official brand website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question