

[manuals.plus](#) /› [VEVOR](#) /› [VEVOR Remote Control Robot Dog Toy User Manual - Model BG1536](#)

VEVOR BG1536

VEVOR Remote Control Robot Dog Toy User Manual

Model: BG1536

1. INTRODUCTION

Thank you for choosing the VEVOR Remote Control Robot Dog Toy. This interactive robotic pet is designed to provide engaging playtime with various control options, including remote, touch, and voice commands. Please read this manual carefully to ensure proper setup, operation, and maintenance of your robot dog.

2. WHAT'S IN THE Box

- 1 x Robot Dog Toy
- 1 x Remote Control
- 1 x Charging Cable
- 1 x Battery
- 1 x Screwdriver
- 1 x User Manual



Image: The VEVOR Robot Dog Toy box contents, showing the robot dog, remote control, charging cable, battery, screwdriver, and user manual.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the underside of the robot dog.
2. Use the provided screwdriver to open the battery compartment.
3. Connect the included Lithium-Ion battery to the robot dog's internal connector.
4. Place the battery inside the compartment and secure the cover with the screwdriver.

CHARGE AND PLAY SAFELY

Detachable Charging for Security



Image: The robot dog with an inset showing the removable battery for easy and safe charging.

3.2 Remote Control Batteries

The remote control requires 2 AAA batteries (not included). Insert them into the remote control's battery compartment, ensuring correct polarity.

3.3 Charging the Robot Dog

Use the provided charging cable to recharge the robot dog's battery. A full charge takes approximately 2 hours and provides about 40 minutes of playtime. The removable battery design ensures safe recharging.

4. OPERATING INSTRUCTIONS

The VEVOR Robot Dog offers multiple ways to interact and control its functions.

4.1 Power On/Off

Locate the power switch on the underside of the robot dog. Slide the switch to the 'ON' position to power on the toy. Slide to 'OFF' to power off.

4.2 Remote Control Functions

The 2.4GHz remote control allows for precise command execution. Refer to the remote's button layout for

specific actions:

- **Movement:** Use directional buttons to move the robot dog forward, backward, turn left, or turn right.
- **Follow Mode:** Press and hold the dedicated follow button on the remote. The robot dog will use its advanced sensors to track and follow your child.
- **Pre-programmed Actions:** Buttons for actions like singing, dancing, sitting, doing push-ups, lying down, greeting, and various cute moves.
- **Programming Mode:** Activate programming mode to create custom sequences of actions.



Image: The robot dog in follow mode, tracking the remote control's signal.

PROGRAMMABLE MODE

2.4GHz Remote Control



Image: Demonstrating the programmable mode using the remote control.

4.3 Touch Control

The robot dog features touch-sensitive areas on its chin and sides of the buttocks. Touching these areas can trigger various responses, such as barking, performing stunts, or showing affection.

DIVERSE CONTROL OPTIONS

Fun to play in any way



Image: The robot dog responding to voice commands, demonstrating smart control options.

4.4 Voice Control

The robot dog responds to specific voice commands. Ensure you are in a quiet environment for optimal voice recognition. Commands include actions like sing, dance, sit, and more.

4.5 Programmable Functions

Utilize the remote control to program a sequence of movements and actions. This feature allows for creative play and custom routines for the robot dog.

ENDLESS FUN WITH FANCY COMBINATIONS

Dozens of Action Modes



Sing



Sit Down



Stand on Head



Dance



Push-ups



Lie Down

Image: The robot dog demonstrating various action modes including singing, sitting, dancing, and push-ups.

4.6 Official Product Video

Your browser does not support the video tag.

Video: Official VEVOR Remote Control Robot Dog Toy demonstration, showcasing its features and movements.

5. MAINTENANCE

To ensure the longevity of your VEVOR Robot Dog Toy, follow these maintenance guidelines:

- **Cleaning:** Wipe the robot dog with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Always remove the battery if the toy will not be used for an extended period. Recharge the battery fully before storing and periodically during storage to maintain its health.

6. TROUBLESHOOTING

If you encounter any issues with your VEVOR Robot Dog, please refer to the following common solutions:

- Robot not responding:** Ensure both the robot dog and the remote control have fresh or fully charged batteries and are powered on. Check that there are no obstructions between the remote and the robot.
- Limited movement:** Verify that the robot dog is on a flat, smooth surface. Performance may be affected on thick carpets or uneven terrain.
- Voice commands not working:** Speak clearly and directly to the robot dog in a quiet environment. Ensure the robot is in voice control mode if applicable.

7. SPECIFICATIONS

Item Model Number	BG1536
Product Dimensions	9.25 x 5.71 x 9.65 inches
Item Weight	1.54 pounds
Manufacturer Recommended Age	36 months - 3 years
Batteries	1 Lithium Ion battery (included)
Battery Life	Approximately 40 minutes
Charging Time	Approximately 2 hours
Manufacturer	VEVOR

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official VEVOR website. Keep your purchase receipt for any warranty claims.