



Manuals.plus /

› MoNiBloom /

› MoNiBloom 55" Curio Display Cabinet Instruction Manual

MoNiBloom DSC-003-T4-27-NT

MoNiBloom 55" Curio Display Cabinet Instruction Manual

Model: DSC-003-T4-27-NT | Brand: MoNiBloom

INTRODUCTION

Thank you for choosing the MoNiBloom 55" Curio Display Cabinet. This 4-tier bamboo showcase is designed to elegantly display your collectibles, figures, books, and artworks while providing practical storage. Crafted from durable bamboo and transparent acrylic panels, it offers both stability and clear visibility of your cherished items. This manual provides essential information for assembly, operation, and maintenance to ensure long-lasting enjoyment of your new display cabinet.



Image Description: The MoNiBloom 55" Curio Display Cabinet, showcasing its natural bamboo frame and transparent acrylic doors, filled with various display items in a modern living room setting.

SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep small parts and packaging materials away from children.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- Do not overload shelves.
- Place the cabinet on a flat, stable surface to prevent tipping.
- Consider anchoring the cabinet to a wall, especially in households with children or pets, to prevent accidental tipping. Wall anchoring hardware may be included or purchased separately.
- Handle acrylic panels with care to avoid scratches or damage.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Bamboo Frame Components
- 4-Tier Shelves
- Acrylic Door Panels
- Assembly Hardware (screws, magnetic catches, etc.)
- Instruction Manual

SETUP AND ASSEMBLY

The MoNiBloom 55" Curio Display Cabinet is designed for easy assembly. Follow the steps below carefully. It is recommended to assemble the cabinet in the location where it will be used due to its size and weight.

Before You Begin:

- Clear a spacious area for assembly.
- Gather necessary tools (e.g., screwdriver).
- Remove the protective film from all acrylic panels *before* assembly to ensure a clean finish and prevent film from getting trapped in joints.

Assembly Steps:

1. **Prepare the Base:** Attach the side bamboo frames to the bottom shelf using the provided hardware. Ensure all connections are secure.
2. **Install Shelves:** Carefully slide the remaining 3 shelves into the designated slots in the side frames.
3. **Attach Top Frame:** Secure the top bamboo frame to the assembled structure.
4. **Install Back Panels:** Slide the back panels into the grooves on the rear of the cabinet.
5. **Attach Door Hardware:** Install the magnetic catches and any handles onto the door panels as per the detailed instructions in your package.
6. **Mount Doors:** Carefully attach the flip-top acrylic door panels to the cabinet. The push-in and hoverable design allows for easy opening and closing.
7. **Final Check:** Verify that all components are correctly assembled and all fasteners are tight.

Assembly Video Reference:

For a visual guide on the assembly process, please refer to the video below. Note: The video demonstrates assembly for a 5-tier cabinet, but the general steps and principles apply to your 4-tier model.



Video Description: This video provides a step-by-step guide for assembling a similar display cabinet. It illustrates the process of attaching panels, installing shelves, and mounting doors. While the video shows a 5-tier model, the assembly techniques are applicable to your 4-tier MoNiBloom cabinet. Ensure to remove protective films from acrylic panels before assembly.

OPERATING INSTRUCTIONS

Using the Flip-Top Doors:

- The cabinet features flip-top doors for easy access to your displayed items.
- To open, gently push the bottom edge of the door panel. The magnetic catch will release, and the door will flip

upwards.

- The doors are designed to hover in the open position, providing unobstructed access without taking up additional space.
- To close, gently pull the door panel downwards until the magnetic catch engages, securing the door in place.
- The magnetic suction ensures the doors remain securely closed, helping to keep dust out.



FLIP-UP DOOR DESIGN

HOVERABLE CABINET DOORS

Image Description: A close-up view of the MoNiBloom display cabinet's flip-up door design. The image shows a door partially open, demonstrating its hoverable mechanism, allowing easy access to the items inside the cabinet.



Image Description: A detailed shot highlighting the push-in invisible style door handle of the MoNiBloom display cabinet. This design ensures a sleek appearance while providing a functional way to open the doors.

MAINTENANCE

Cleaning:

- The cabinet features a smoothly painted surface that is waterproof and easy to clean.
- For general cleaning, wipe surfaces with a soft, damp cloth.
- Avoid using abrasive cleaners or harsh chemicals, as these may damage the finish or acrylic panels.
- For acrylic panels, use a soft cloth and a mild, non-abrasive cleaner specifically designed for acrylic or plastic.
- Regular dusting will help maintain the cabinet's appearance and keep your displayed items pristine.



Image Description: A close-up image demonstrating the smoothly painted and waterproof surface of the MoNiBloom display cabinet. A water droplet is visible on the bamboo, highlighting its easy-to-clean property.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|---|---|
| Cabinet feels unstable/wobbly | Loose fasteners; uneven floor. | Ensure all screws are tightened. Move to a level surface or use shims if necessary. Consider wall anchoring. |
| Doors do not close properly | Misaligned magnetic catches; obstruction. | Check alignment of magnetic catches and adjust if needed. Ensure no items are blocking the door's path. |
| Protective film difficult to remove after assembly | Film was not removed prior to assembly. | Use a thin, non-abrasive tool (e.g., plastic card) to carefully lift edges. This is why it's recommended to remove film <i>before</i> assembly. |

SPECIFICATIONS

- **Brand:** MoNiBloom
- **Model:** DSC-003-T4-27-NT
- **Color:** Natural
- **Material:** Acrylic, Bamboo
- **Product Dimensions:** 13.5"D x 27.5"W x 55"H
- **Item Weight:** 34.6 Pounds
- **Number of Shelves:** 4
- **Mounting Type:** Free Standing
- **Assembly Required:** Yes
- **Special Feature:** Display Products, Flip Door Design, Magnetic Suction
- **Recommended Uses:** Art & Crafts, Collectibles, Books, Decorations

PRODUCT DIMENSIONS

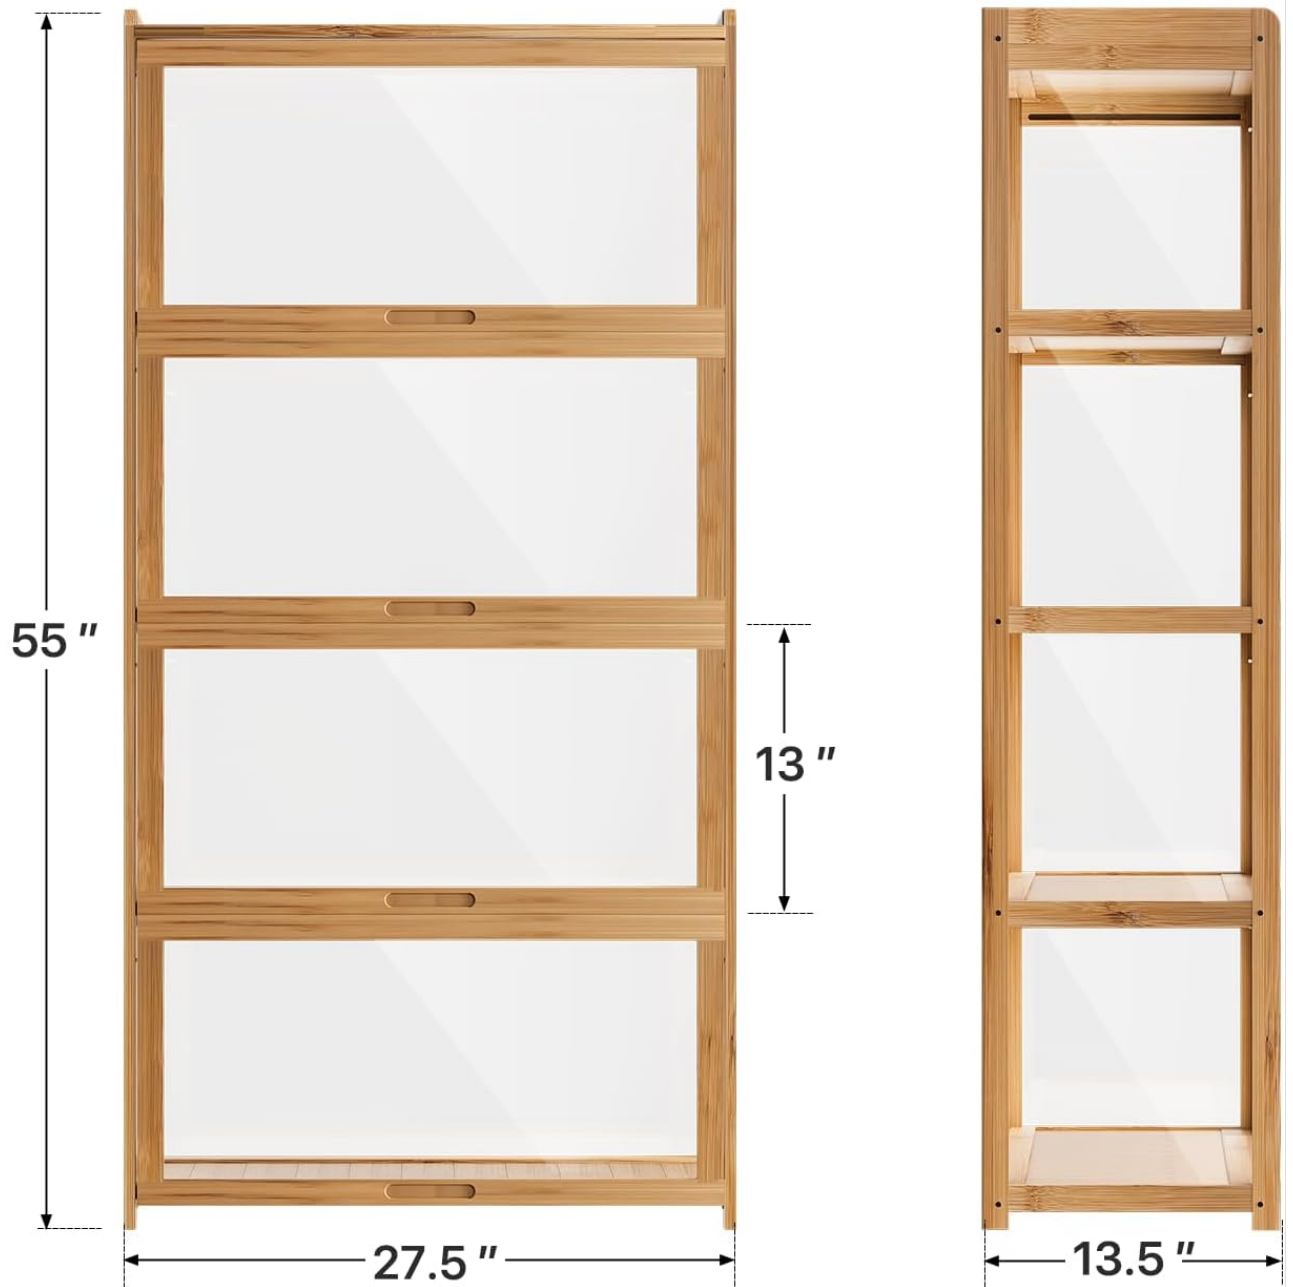


Image Description: A diagram illustrating the key dimensions of the MoNiBloom 55" Curio Display Cabinet, including its height (55"), width (27.5"), and depth (13.5"), along with shelf spacing (13").

WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact MoNiBloom customer service through the retailer where you purchased the product. Please have your model number (DSC-003-T4-27-NT) and purchase date available.