

[Manuals.plus](#) /

› [Beyution](#) /

› Replacement Remote Control User Manual for Furrion Entertainment System DV3300 DV3100

Beyution dv3100 remote

Replacement Remote Control User Manual

For Furrion Entertainment System DV3300, DV3100, DV3100-RC, DV3300S-BL

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your new replacement remote control. Designed for seamless compatibility with Furrion Entertainment Systems, this remote offers a straightforward solution for controlling your DV3300, DV3100, DV3100-RC, and DV3300S-BL models. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

PRODUCT FEATURES

- **Model:** DV3100 Replacement Remote Control
- **Connectivity:** Infrared (IR) technology
- **Operating Distance:** Up to 10 meters (approximately 33 feet)
- **Material:** Durable ABS plastic with soft rubber buttons
- **Ergonomic Design:** Lightweight and comfortable to grip
- **No Programming Required:** Ready to use out of the box, no setup or pairing needed
- **Responsive Buttons:** Buttons offer good elasticity for precise control
- **Enhanced Performance:** Features upgraded smart chips for stable performance and fast response





Figure 1: Front view of the DV3100 Replacement Remote Control, displaying all functional buttons.

SETUP

Battery Installation

The remote control requires two AAA 1.5V batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Rear view of the remote control, illustrating the battery compartment with batteries installed.

Initial Use

This replacement remote control is designed to work immediately with compatible Furrion Entertainment Systems (DV3300, DV3100, DV3100-RC, DV3300S-BL) without any programming or pairing. Simply point the remote towards your entertainment system and begin operation.

OPERATING INSTRUCTIONS

The remote control provides full functionality for your Furrion Entertainment System. Below are common button functions:

Button	Function
PWR	Power On/Off the entertainment system.
EJECT	Eject disc from the DVD/CD player.
AUX / AV IN	Select auxiliary or AV input sources.
DVD USB / AM/FM	Switch between DVD/USB playback and AM/FM radio modes.
SEL	Select menu options or confirm settings.
Navigation Arrows (Up, Down, Left, Right)	Navigate through menus and options.
OK	Confirm selection.
+ / - (Volume)	Adjust volume level.
SETUP	Access system setup menu.
Play/Pause, Stop, Fast Forward, Rewind, Skip	Control media playback.
Number Buttons (0-9, 10+)	Direct input for channels, tracks, or numerical settings.
MUTE	Mute/unmute audio.
ZOOM	Adjust zoom level for video playback.
AUDIO	Select audio tracks or modes.
SUBT	Toggle subtitles on/off.
PROG	Access programming functions.
OSD	Display On-Screen Display information.

For specific functions related to your Furrion Entertainment System model, please refer to your system's original user manual.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries at the same time with new ones of the same type (AAA 1.5V). Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the remote. Do not use abrasive cleaners, alcohol, or solvents.

Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote is unresponsive or has limited range:**
 - Ensure there are no obstructions between the remote control and the entertainment system's IR receiver.
 - Check and replace the batteries if they are low or depleted. Ensure they are inserted with correct polarity.
 - Verify that the remote is pointed directly at the entertainment system.
- **Specific buttons do not work:**
 - Ensure the remote is in the correct mode (e.g., DVD, Radio) if applicable for the function you are trying to use.
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris that might be obstructing button presses.
- **Remote control is damaged or still not working:**

If the remote control you received is damaged or does not work after following the troubleshooting steps, please contact the seller for assistance. They will provide a satisfactory solution.

SPECIFICATIONS

Attribute	Detail
Product Dimensions	7 x 1.5 x 0.5 inches
Item Weight	1.9 ounces
Item Model Number	dv3100 remote
Brand	Beyution
Special Features	Ergonomic, No Programming Required
Color	Black
Max Number of Supported Devices	18 (for general remote capabilities, though this specific remote is for Furrion systems)
Compatible Devices	Furrion Entertainment Systems (DV3300, DV3100, DV3100-RC, DV3300S-BL)

WARRANTY AND SUPPORT

As a replacement product, specific warranty terms may vary. For any issues regarding the functionality or condition of the remote control, please contact the seller directly through your purchase platform. They are committed to providing a satisfactory solution for any concerns you may have.

For further assistance or inquiries, please reach out to the seller via email as indicated on your purchase documentation

or product listing. Provide your order details for quicker support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DGTQ3Z64>

More documents and user manuals: <https://manuals.plus/>