



[Manuals.plus](#) /

› [Emasme](#) /

› Emasme 5-Gun Safe Digital Lock Instruction Manual WN35KR-145

## Emasme WN35KR-145

# Emasme 5-Gun Safe Digital Lock Instruction Manual (Model WN35KR-145)

### INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Emasme 5-Gun Safe, Model WN35KR-145. Please read this manual thoroughly before operating the safe and retain it for future reference. This gun cabinet is designed to securely store rifles, pistols, and other valuables, featuring a digital lock system and dual alarm functions.



*Figure 1: Emasme 5-Gun Safe with Digital Lock*

The Emasme 5-Gun Safe is a robust storage solution for firearms and valuables. It features a digital keypad for quick access, along with emergency key access. The safe is constructed from durable steel and includes internal organizational features such as removable shelves, pistol pockets, and a gun rack. For enhanced security, it incorporates a dual alarm system that activates upon incorrect password attempts or physical vibration.

## **SETUP AND INSTALLATION**

### **Unboxing and Initial Inspection**

Your Emasme 5-Gun Safe comes pre-assembled, eliminating the need for complex installation. Upon receiving the product, carefully unbox it and inspect for any signs of damage. Ensure all included components are present: the gun cabinet body, instruction manual, 4 keys, 1 USB Type-C charging cable, and 5 expansion bolts.



Figure 2: Product Dimensions (13.78"W x 11.81"D x 57.09"H)

### Anchoring the Safe (Anti-Tipping Measures)

To prevent tipping and ensure maximum security, it is highly recommended to secure the gun safe to a wall or floor using the provided expansion bolts. This is a critical safety measure, especially in households with children.



Figure 3: Diagram for securing the safe with expansion bolts

Procedure:

1. Position the safe in your desired location (e.g., living room, bedroom, office).
2. Mark the drilling points on the wall or floor through the pre-drilled holes at the back and bottom of the safe.
3. Drill holes at the marked points using an appropriate drill bit for your wall/floor material.
4. Insert the expansion bolts into the drilled holes.
5. Align the safe with the bolts and tighten them securely to firmly anchor the safe.

## Video: Installation Instruction

*Video 1: Step-by-step guide for assembling and securing the gun safe.*

## OPERATING INSTRUCTIONS

### Unlocking Methods

Your Emasme 5-Gun Safe offers multiple ways to unlock for convenience and emergency access:

1. **Password + Handle:** Enter your programmed digital password, then turn the handle to open.
2. **Emergency Key + Handle:** In case of forgotten password or battery failure, use the emergency key to unlock, then turn the handle.
3. **USB Type-C + Password + Handle:** If batteries are depleted, connect a USB Type-C power source to the external port, then enter your password and turn the handle.



Figure 4: Visual guide to the three unlocking methods

## Setting/Changing Digital Password

Refer to the detailed instructions in the included manual for programming and changing your digital password. It typically involves pressing a 'setting' button located inside the safe (usually on the back of the door or near the battery compartment), entering your desired code, and confirming.

## Alarm and Silence Functions

The safe is equipped with a dual alarm system for enhanced security:

- **Wrong Password Alarm:** If 5 incorrect passwords are entered consecutively, the safe will sound an alarm for 60 seconds.
- **Vibration Alarm:** The safe will activate an alarm if subjected to minor shaking, bumping, or violent unlocking attempts.
- **Silence Mode:** For discreet access, you can switch the safe to silent mode. This allows the safe to open quietly without making any noise. Consult the manual for instructions on activating/deactivating silence mode.



Figure 5: Illustration of the dual alarm system

## Video: How to Use the 5-Gun Safe

Video 2: Demonstration of basic operation and features of the 5-Gun Safe.

## FEATURES AND STORAGE

The Emasme 5-Gun Safe is designed for versatile and secure storage:

- **Capacity:** External dimensions of 57.09"H x 13.78"W x 11.81"D, capable of holding 5-6 rifles and accommodating longer shotguns.
- **Internal Organization:** Equipped with a separate magazine lock box, 2 pistol pockets, 2 ammunition storage units, and a removable shelf.
- **Adjustable Interior:** Removable shelves allow customization to fit various rifle lengths and other items.
- **LED Lighting:** Integrated LED lights facilitate access to contents in low-light conditions.
- **Door Opening Angle:** The door opens to a 120° angle for easy access.
- **Anti-Theft Design:** Features 20mm anti-drilling and anti-prying construction with 5 locking bolts.



Figure 6: Overview of the safe's capacity and included accessories



Figure 7: Removable shelf and rifle rack for customizable interior space

## SAFETY INFORMATION

Always follow the provided instructions for safe installation and use. Keep the product out of reach of children and pets. Do not attempt to disassemble or modify the product. In case of any malfunction, contact the manufacturer immediately.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your Emasme 5-Gun Safe.

- **Safe not opening with digital code:**
  - Ensure batteries are not depleted. Use the USB Type-C power source or emergency key if needed.

- Verify the correct password is being entered.
- Check if the keypad is active (press '#' to activate).
- **Alarm sounding unexpectedly:**
  - If the safe is being shaken or bumped, the vibration alarm will activate.
  - If incorrect codes are entered multiple times, the wrong password alarm will activate. Enter the correct code to silence the alarm.
- **Lost/Forgotten Password:**
  - Use the emergency key to open the safe.
  - Refer to the manual for instructions on resetting the password using the internal setting button.
- **Depleted Batteries:**
  - Replace the 4 AA batteries located in the internal battery compartment.
  - Alternatively, use the USB Type-C charging cable with an external power bank to temporarily power the keypad for access.

For any issues not covered here, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Emasme
Model Name	Gun Safe (WN35KR-145)
Color	Black
Product Dimensions	11.81"D x 13.78"W x 57.09"H
Item Weight	37 Pounds
Material	Metal (Steel)
Lock Type	Electronic Combination Lock
Special Features	Alarm System, Anti-Theft
Mounting Type	Floor Mount (Wall anchoring recommended)
Number of Shelves	1 (Removable)
Included Components	Gun cabinet body, manual, 4 keys, USB Type-C cable, 5 expansion bolts

## WARRANTY AND SUPPORT

Emasme provides a one-year after-sales service for product quality from the source manufacturing factory. Lifetime key matching service is also available. For any inquiries or assistance, our professional customer service team offers 24-hour email service.