

PHILIPS HD4995/00

Philips HD4995/00 2100W Induction Cooktop User Manual

Model: HD4995/00

1. INTRODUCTION

Thank you for choosing the Philips HD4995/00 2100W Induction Cooktop. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- **Electrical Safety:** Ensure the power supply voltage matches the rating on the appliance. Do not immerse the cooktop in water or any other liquid. Do not operate with a damaged cord or plug.
- **Hot Surface Warning:** The ceramic plate will be hot after cooking. Avoid touching the surface immediately after use.
- **Proper Cookware:** Use only induction-compatible cookware with a flat bottom. Non-magnetic cookware will not heat.
- **Ventilation:** Ensure adequate ventilation around the cooktop. Do not block air vents.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Supervise children if they are near the appliance during operation.
- **Surge Protection:** This appliance features Triple MOV for up to 4kW surge protection, designed to sustain high voltage fluctuations and reduce PCB damage.

3. PRODUCT OVERVIEW

The Philips HD4995/00 Induction Cooktop features a sleek design with a soft-touch control panel and a crystal glass surface for efficient and convenient cooking.



Image: Front view of the Philips HD4995/00 Induction Cooktop, showcasing its black ceramic plate and soft-touch control panel at the bottom.

Control Panel

The cooktop is equipped with a user-friendly soft-touch control panel. Key functions include:

- **Power On/Off:** To activate or deactivate the cooktop.
- **Power/Temperature Adjustment:** Buttons to increase or decrease heating intensity.
- **Preset Menus:** 11 dedicated buttons for various cooking modes.
- **Digital Display:** Shows power level, temperature, or timer settings.



2100 Watts



11 Pre Set
Modes



Feather Touch
Buttons

Image: A hand pressing a button on the soft-touch control panel of the Philips HD4995/00 Induction Cooktop, highlighting its ease of use.

4. SETUP

1. **Unpacking:** Carefully remove the cooktop from its packaging. Retain packaging materials for future transport or service.
2. **Placement:** Place the induction cooktop on a flat, stable, and heat-resistant surface. Ensure there is sufficient space around the appliance for proper ventilation (at least 10 cm from walls or other objects).
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the outlet meets the power requirements of the appliance.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Place induction-compatible cookware centrally on the cooking zone.
2. Press the Power On/Off button on the cooktop. The digital display will illuminate.

3. Select your desired cooking mode or adjust the power/temperature using the '+' and '-' buttons.
4. To turn off, press the Power On/Off button again. The cooktop will beep and the display will turn off.

5.2 Using Preset Menus

The Philips HD4995/00 features 11 preset menus for common cooking tasks. Simply place your cookware and press the corresponding preset button. The cooktop will automatically adjust power and temperature for optimal results.



Tested for
1000
hours life

Designed for Long Product Life

Disclaimer: *As per internal testing & validation with cycle time of 60 min on & 30 min off.

Image: The Philips HD4995/00 Induction Cooktop with a pan containing food, demonstrating its use in a kitchen setting.

5.3 Cookware Compatibility

Induction cooktops require cookware made of ferromagnetic materials. To check if your cookware is compatible, hold a magnet to the bottom of the pan. If the magnet sticks, the cookware is suitable for induction cooking.

6. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your induction cooktop.

1. **Before Cleaning:** Always unplug the cooktop and allow it to cool completely before cleaning.
2. **Surface Cleaning:** Wipe the crystal glass surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for ceramic or induction cooktops.
3. **Control Panel:** Wipe the control panel with a soft, dry cloth. Do not use excessive water.
4. **Air Vents:** Keep the air vents clear of dust and debris to prevent overheating.
5. **Do Not Use:** Avoid abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.



Clean Polished Crystal Glass

Image: An angled view of the Philips HD4995/00 Induction Cooktop, highlighting its clean, polished crystal glass surface.

7. TROUBLESHOOTING

If you encounter issues with your induction cooktop, refer to the following table for common problems and solutions.

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| Cooktop does not turn on. | No power supply; power cord not plugged in; fuse blown. | Check power connection; check household fuse/circuit breaker. |
| Cookware not heating. | Cookware not induction-compatible; cookware not centered; pan too small. | Use induction-compatible cookware; center the pan; use appropriate pan size. |
| Display shows an error code. | Specific internal error. | Refer to the specific error code in the full manual or contact customer support. |
| Unusual noise during operation. | Normal fan operation; vibration from cookware. | This is usually normal. If excessive, ensure cookware is stable. |

If the problem persists after attempting these solutions, please contact Philips customer support.

8. SPECIFICATIONS

| Feature | Detail |
|---------------------|---|
| Model Number | HD4995/00 |
| Power Consumption | 2100W |
| Power Source | Corded Electric |
| Dimensions (LxWxH) | 34.8 x 10.5 x 45.2 Centimeters |
| Item Weight | 2 kg 370 g |
| Special Features | Cool Touch, Digital Display, Lightweight, Portable, Triple MOV for 4kW Surge protection |
| Preset Menus | 11 |
| Included Components | Induction Cooktop & User Manual |

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Philips HD4995/00 Induction Cooktop comes with a **3-year warranty on the coil** from the date of purchase. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.



Warranty on Coil

Image: The Philips HD4995/00 Induction Cooktop with an overlay indicating a '3 Year Warranty on Coil'.

9.2 Customer Support

For any service, repair, or technical assistance, please contact Philips customer support. You can find contact details on the official Philips website or in the included warranty card.

Worry less about repairs & damages

Tested for
1000
hours life

PHILIPS
QUALITY
PROMISE

3 Year
Warranty
on Coil

Image: Technicians working in a Philips quality assurance lab, symbolizing the brand's commitment to product reliability and support.