

GoPro HERO13 Black

GoPro HERO13 Black Action Camera User Manual

Model: HERO13 Black (CHDHX-131-XX)

1. PRODUCT OVERVIEW

The GoPro HERO13 Black is a high-performance action camera designed for capturing immersive footage in various environments. It features 5.3K video recording, 27MP photo capabilities, live streaming, and webcam functionality. This manual provides essential information for setting up, operating, and maintaining your camera and its accessories.



Image 1.1: The GoPro HERO13 Black action camera, showcasing its compact design and packaging.

2. WHAT'S IN THE BOX

Your GoPro HERO13 Black bundle includes the following components:

- GoPro HERO13 Black Camera
- GoPro Enduro Rechargeable Li-Ion Battery
- Curved Adhesive Mount
- Mounting Buckle + Thumbscrew
- 2 X Extreme 128GB MicroSDHC Memory Card
- High Speed USB Memory Card Reader
- Suction Cup Mount
- Floating Handle Grip
- Strap
- 360-Degree Rotation Clip
- Insurance Tether Straps
- Wrist Strap
- Handheld Monopod

- Bicycle Handlebar Mount
- Chest Strap Mount
- Head Strap Mount
- Wrench
- Wrist Mount With Screw
- Tripod Mount Adapters
- Car Ring Case
- Helmet Extension Arm
- Helmet Strap Mount
- Mini Tripod
- 2 X Switch Support
- 2 X Surface J-Hook Buckle
- 3 X Basic Mount
- 3 X Flat Mounts
- 2 X Curved Mounts
- 4 X Screws
- 5 X Adhesive Pads
- 13 X Anti-Fog Inserts



3. GETTING STARTED: INITIAL SETUP

3.1. Charging the Battery

1. Open the side door of your GoPro HERO13 Black.
2. Insert the included Enduro Rechargeable Li-Ion Battery.
3. Connect the camera to a USB power source using the provided USB cable. The front status light will indicate charging.
4. Charging is complete when the front status light turns off.

3.2. Inserting a MicroSD Card

A high-speed MicroSD card (UHS-I, V30 or higher) is required for recording. Two 128GB MicroSDHC cards are included in this bundle.

1. With the side door open, locate the MicroSD card slot.
2. Insert the MicroSD card with the label facing the front of the camera until it clicks into place.
3. Close the side door securely to maintain waterproofing.

3.3. Powering On/Off

- **To Power On:** Press the Mode button (side button).
- **To Power Off:** Press and hold the Mode button for 3 seconds.

4. OPERATING YOUR GoPro HERO13 BLACK

4.1. Changing Modes

Press the Mode button repeatedly to cycle through Video, Photo, and TimeWarp modes. You can also swipe left or right on the rear touch screen to change modes.

4.2. Recording Video / Taking Photos

- **To Start Recording/Capture:** Press the Shutter button (top button).
- **To Stop Recording:** Press the Shutter button again.

4.3. Using the Touch Screen

The rear touch screen allows you to:

- Swipe down for settings and preferences.
- Swipe up for media playback.
- Tap to select options or change settings.

4.4. Voice Control

The HERO13 Black supports voice commands for hands-free operation. Say "GoPro, start recording" or "GoPro, take a photo" to control your camera.

4.5. Connecting to the GoPro Quik App

Download the GoPro Quik app on your mobile device to control your camera remotely, view footage, and edit content.

1. Enable Bluetooth and Wi-Fi on your mobile device.
2. Open the GoPro Quik app and follow the on-screen instructions to pair your camera.

5. MOUNTING ACCESSORIES

The bundle includes a wide array of mounts to suit various activities. Ensure all mounts are securely attached before use.



Image 5.1: Examples of various mounting configurations for the GoPro HERO13 Black, including head strap, chest strap, and backpack clip.



Image 5.2: Detailed view of the suction cup mount with 180-degree rotation and the flexible mini tripod, demonstrating their versatility.

- **Adhesive Mounts:** Use on clean, smooth surfaces. Allow 24 hours for adhesive to cure before heavy use.
- **Strap Mounts (Head, Chest, Wrist):** Adjust straps for a snug fit.
- **Handlebar/Seatpost Mount:** Securely clamp to cylindrical objects.
- **Suction Cup Mount:** Attach to smooth, non-porous surfaces like car windows or surfboards. Ensure the lever is fully engaged for strong suction.
- **Mini Tripod/Monopod:** Provides stable placement or extended reach for selfies and group shots.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the camera and lens with a soft, lint-free cloth. For waterproof components, rinse with fresh water after saltwater exposure and allow to air dry.
- **Battery Care:** Store batteries in a cool, dry place. Avoid fully discharging batteries for extended periods.
- **Storage:** Store the camera and accessories in the provided protective case when not in use to prevent damage.
- **Waterproofing:** Ensure all doors are securely closed before exposing the camera to water. The HERO13 Black is waterproof without an additional housing to a certain depth (refer to specifications).

7. TROUBLESHOOTING

Issue	Possible Solution
Camera not turning on	Ensure the battery is charged. Try removing and reinserting the battery.
Recording stops unexpectedly	Check if the MicroSD card is full or corrupted. Use a recommended high-speed MicroSD card. Ensure the battery has sufficient charge.
Poor video quality	Clean the camera lens. Check video resolution settings. Ensure adequate lighting.
Camera not connecting to Quik app	Ensure Wi-Fi and Bluetooth are enabled on both devices. Restart both the camera and the mobile device. Try re-pairing the camera in the app.
Touch screen unresponsive	Restart the camera. Ensure the screen is clean and dry.

8. SPECIFICATIONS

Feature	Detail
Brand	GoPro
Model Number	CHDHX-131-XX
Video Capture Resolution	5.3K
Photo Resolution	27MP
Flash Memory Type	Micro SDXC
Video Capture Format	MP4
Supported Audio Format	AAC, MP3
Connectivity Technology	USB
Camcorder Type	Action Camera
Lens Type	Wide Angle
Compatible Devices	Personal Computer
Item Weight	3.39 pounds
Package Dimensions	13.78 x 11.34 x 6.22 inches

9. WARRANTY AND SUPPORT

For warranty information, technical support, and additional resources, please visit the official GoPro support website. You can also find FAQs and community forums for further assistance.

Official GoPro Store: [GoPro Store on Amazon](#)

