

Lomiluskr B0DGW2YWHY

Lomiluskr Colorful Wireless Keyboard Instruction Manual

Model: B0DGW2YWHY

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Lomiluskr Colorful Wireless Keyboard. This compact, 84-key membrane keyboard offers dual-mode connectivity (Bluetooth and 2.4GHz wireless) and is compatible with various operating systems and devices. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Lomiluskr Wireless Keyboard x 1
- Magnetic Bear x 1
- AAA Batteries x 2
- Type-C to USB-A Adapter x 1
- Instruction Manual x 1



Image: Contents of the Lomilusk Colorful Wireless Keyboard package, including the keyboard, magnetic bear, AAA batteries, USB adapter, and manual.

3. PRODUCT OVERVIEW

The Lomilusk Colorful Wireless Keyboard features a compact 84-key layout, designed for efficiency without sacrificing essential functions. Its retro round keycaps and gradient color scheme provide a distinct aesthetic. The keyboard supports both Bluetooth and 2.4GHz wireless connections, offering versatility across multiple devices and operating systems.



Image: Front view of the Lomilusk Colorful Wireless Keyboard in black, showcasing its compact layout and round keycaps.

Product Parameters



Size: 323*134*35 mm / 12.73*5.28*1.38 inches

Weight: 474 g / 1.04 lb

Connection method: 2.4G + bluetooth

Number of keys: 84 keys (no numeric keypad area)

Battery: 2 AAA batteries

Compatible systems: Windows/Mac/iOS/Android

Compatible devices: PC/Laptop/Tablet/Smartphone

Image: A close-up view of the keyboard's aesthetic gradient colored, comfortable membrane keys and retro typewriter-style round keycaps.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the underside of the keyboard.
2. Open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

4.2 Magnetic Bear Attachment

The included magnetic bear can be attached to the designated magnetic area at the top center of the keyboard. This accessory is optional and can be removed or placed separately as desired.



Image: The Lomilusk keyboard with the cute magnetic bear attached to its top center, highlighting its placement.

5. OPERATING INSTRUCTIONS

5.1 Dual Mode Connection (2.4GHz Wireless & Bluetooth)

Your keyboard supports two connection modes: 2.4GHz wireless via USB receiver and Bluetooth. You can connect up to two Bluetooth devices and one 2.4GHz wireless device simultaneously.

5.1.1 2.4GHz Wireless Connection

1. Locate the 2.4GHz USB receiver, typically stored in a compartment on the keyboard's underside.
2. Plug the USB receiver into an available USB-A port on your computer or device. If your device only has USB-C ports, use the provided Type-C to USB-A adapter.
3. The keyboard should automatically connect.

Aesthetic Gradient Color Comfortable Membrane Keys Retro Typewriter Round Keycaps



Image: A close-up view showing the dedicated storage area for the 2.4G wireless USB receiver on the keyboard's underside.

5.1.2 Bluetooth Connection

The keyboard supports connection to two Bluetooth devices (BT1 and BT2).

1. Turn on the keyboard.
2. Press and hold **Fn + PrtSc** (for BT1) or **Fn + Insert** (for BT2) for 3-5 seconds until the indicator light flashes, indicating pairing mode.
3. On your device (PC, laptop, tablet, smartphone), enable Bluetooth and search for new devices.
4. Select "Lomilusk Keyboard" (or similar) from the list of available devices to pair.
5. Once paired, the indicator light will stop flashing.

Bluetooth + 2.4G Dual-mode Wireless Connection



Image: A detailed view of the keyboard's back, illustrating the Bluetooth and 2.4G dual-mode wireless connection capabilities.

5.1.3 Switching Between Connected Devices

To switch between connected devices:

- For 2.4GHz wireless: Press **Fn + Del**.
- For Bluetooth Device 1: Press **Fn + PrtSc**.
- For Bluetooth Device 2: Press **Fn + Insert**.

5.1.4 Switching System Modes

The keyboard is compatible with Windows, macOS, iOS, and Android systems. To optimize key functions for your operating system, switch modes as follows:

- For Windows: Press **Fn + Q**
- For macOS: Press **Fn + W**
- For iOS/Android: Press **Fn + E**

5.2 Multimedia Shortcut Keys

The keyboard includes 13 multimedia shortcut keys. To activate these functions, press the **Fn** key simultaneously with the corresponding function key (F1-F12, PrtSc, Insert, Del).

- **Fn + F1:** Media Player
- **Fn + F2:** Volume Down
- **Fn + F3:** Volume Up
- **Fn + F4:** Mute
- **Fn + F5:** Previous Track
- **Fn + F6:** Next Track
- **Fn + F7:** Play/Pause
- **Fn + F8:** Stop
- **Fn + F9:** Home
- **Fn + F10:** Mail
- **Fn + F11:** My Computer
- **Fn + F12:** Search
- **Fn + PrtSc:** Switch to Bluetooth Device 1
- **Fn + Insert:** Switch to Bluetooth Device 2
- **Fn + Del:** Switch to 2.4GHz Wireless Mode

6. MAINTENANCE

6.1 Cleaning

To clean your keyboard, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the finish or keycaps. For cleaning between keys, use compressed air or a small brush.

6.2 Battery Replacement

When the keyboard's performance degrades or the low battery indicator (if present) activates, replace the two AAA batteries following the installation steps in Section 4.1.

7. TROUBLESHOOTING

If you encounter issues with your keyboard, refer to the following common solutions:

- **Keyboard not connecting:** Ensure batteries are correctly installed and charged. For 2.4GHz, verify the USB receiver is properly inserted. For Bluetooth, ensure the keyboard is in pairing mode and your device's Bluetooth is enabled. Try re-pairing the device.
- **Keys not responding or delayed:** Check battery level. Ensure the keyboard is within range of your device (typically up to 10 meters for wireless connections). Avoid interference from other wireless devices.
- **Incorrect key functions:** Verify that the keyboard is set to the correct system mode (Fn+Q for Windows, Fn+W for macOS, Fn+E for iOS/Android).
- **Low battery indicator always blinking:** If this occurs with new batteries, try replacing them with a different set or contact support.

8. SPECIFICATIONS

Size	323 x 134 x 35 mm (12.73 x 5.28 x 1.38 inches)
Weight	474 g (1.04 lb)

Connection Method	Bluetooth + 2.4G Wireless
Number of Keys	84 keys (Tenkeyless layout)
Battery	2 x AAA batteries (included)
Compatible Systems	Windows, macOS, iOS, Android
Compatible Devices	PC, Laptop, Tablet, Smartphone
Material	Acrylonitrile Butadiene Styrene (ABS)

Package Contents



Keyboard x 1



Manual x 1



Magnetic Bear x 1



Adapter x 1



AAA Battery x 2

Image: Diagram illustrating the dimensions and key specifications of the Lomiluskr Colorful Wireless Keyboard.

9. WARRANTY AND SUPPORT

All Lomiluskr products undergo quality inspection before shipping. If any quality issues arise with the product within one year of purchase, a refund or free replacement is offered. For any questions or support needs, please contact Lomiluskr customer service.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DGW2YWHY>

More documents and user manuals: <https://manuals.plus/>