

NBD NBD-C23-WH-UK-2409 Father

NBD 60MP Digital Camera User Manual

Model: NBD-C23-WH-UK-2409 Father

Brand: NBD

INTRODUCTION

Thank you for choosing the NBD 60MP Digital Camera. This camera is designed for ease of use, making it ideal for beginners while offering advanced features like 4K video recording, a selfie assist screen, and 16x optical zoom. This manual provides detailed instructions to help you get the most out of your new camera.

SAFETY INFORMATION

- Do not expose the camera to water or excessive moisture. This product is not water resistant.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from direct sunlight and high temperatures.
- Use only the specified batteries and charger provided with the camera.
- Do not attempt to disassemble or repair the camera yourself. Contact customer support for assistance.
- Keep out of reach of small children.

PACKAGE CONTENTS

Please check that all the following items are included in your package:

- NBD 60MP Digital Camera
- 32GB TF Card
- USB Cable
- 2 x Rechargeable Lithium-Ion Batteries
- Charger
- Camera Strap
- User Manual (this document)



Image: The NBD 60MP Digital Camera shown with all its included accessories, such as the camera body, two rechargeable batteries, a 32GB TF card, a USB cable, and a USB charger.

SETUP

1. Charging the Batteries

Before first use, fully charge both included lithium-ion batteries. Insert a battery into the charger and connect the charger to a power source using the USB cable. The indicator light on the charger will show the charging status.

2. Inserting the Battery and TF Card

1. Open the battery compartment cover on the bottom of the camera.
2. Insert a charged battery into the compartment, ensuring the correct orientation.
3. Insert the 32GB TF card into the designated slot until it clicks into place. Ensure the card is inserted correctly to avoid damage.

4. Close the battery compartment cover securely.

3. Attaching the Camera Strap

Thread the camera strap through the strap eyelet on the side of the camera and secure it firmly. This helps prevent accidental drops.

OPERATING THE CAMERA

Power On/Off

Press and hold the power button (usually located on the top or side of the camera) to turn the camera on or off.

Basic Photography

The NBD camera features a 60MP primary camera for high-resolution photos. Simply point and shoot for intuitive operation.



Image: The camera's interface displaying a selection of 20 color effects and 8 speed knob modes, including P Auto, Exposure adjustments, Beauty, Beach Scene, Color Filter, Night Scene, and Special Effect.

Selfie Assist Screen

The camera includes a secondary selfie screen for easy self-portraits and vlogging. To switch between the main screen and the selfie screen, use the dedicated button or menu option. This allows for hassle-free framing when taking selfies or recording vlogs.

FRONT SELFIE SCREEN

Handy selfie camera



Image: A person holding the NBD Digital Camera, utilizing its front selfie screen to capture a group photo, demonstrating its convenience for self-portraits and vlogging.

Zoom Functionality

The camera features a 16x optical zoom system, combining 10x optical zoom and 6x digital zoom. Use the zoom controls (W/T buttons) to adjust the focal length for capturing distant subjects or wide-angle shots.

10x optical zoom*6x digital zoom




Image: The NBD Digital Camera illustrating its 10x optical zoom and 6x digital zoom capabilities, which combine for a 16x super zoom. Example photos are shown at 4x, 8x, and 16x magnification, highlighting the camera's ability to capture clear images across a broad zoom range.

4K Video Recording with Anti-Shake

Record high-quality 4K HD videos. The built-in anti-shake functionality helps stabilize your footage, reducing blur from camera movement. To start/stop recording, press the dedicated video recording button.

ANTI - SHAKE

ANTI - SHAKE **ON**

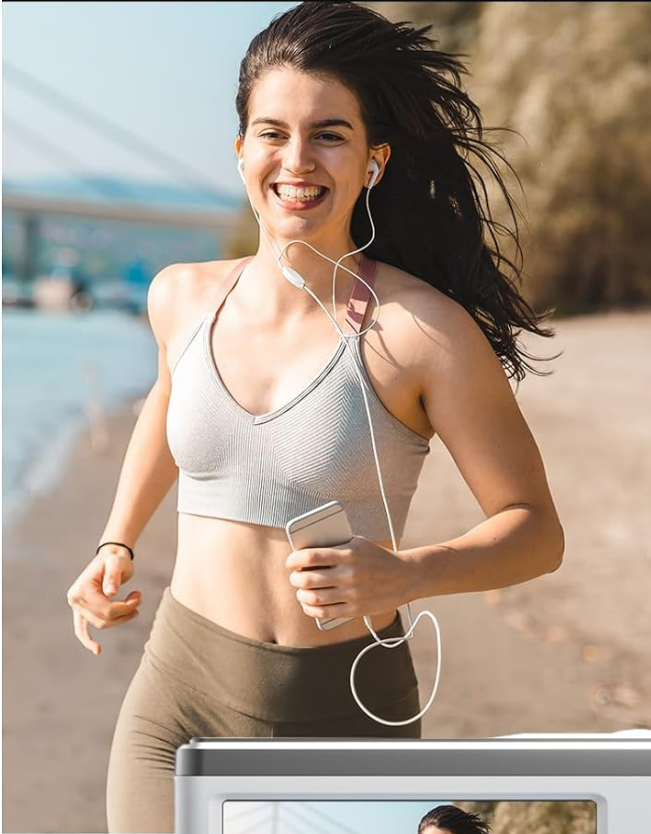

ANTI - SHAKE **OFF**

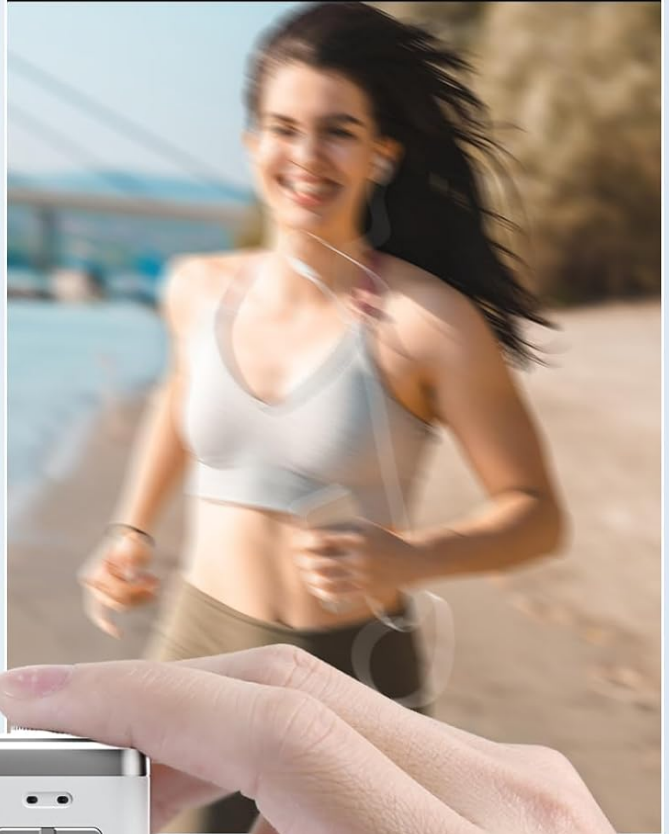


Image: A side-by-side comparison demonstrating the effectiveness of the camera's anti-shake feature. The left image, with anti-shake ON, shows a clear and stable shot of a person running, while the right image, with anti-shake OFF, appears blurry due to motion.

Versatile Shooting Modes

Explore various shooting modes to suit different scenarios:

- **Beauty Feature:** Enhances portraits for a more flattering look.
- **Macro Mode:** For stunning close-ups of small subjects, capturing intricate details.
- **Scene Modes:** Includes settings for landscapes, portraits, night scenes, and more, optimizing camera settings for specific environments.
- **Color Effects:** Apply various filters and color adjustments to your photos.

TRUE PIXEL, NEAR OR FAR



Image: The NBD Digital Camera illustrating the difference between normal shooting, capturing a broad landscape, and macro shooting, which provides a highly detailed close-up of a purple flower with water droplets.

MAINTENANCE

- **Cleaning the Lens and Screen:** Use a soft, lint-free cloth specifically designed for camera lenses to gently wipe away dust or smudges. Do not use abrasive cleaners.
- **Battery Care:** Store batteries in a cool, dry place when not in use. Avoid fully discharging batteries frequently to prolong their lifespan.
- **Storage:** When not using the camera for extended periods, remove the battery and store the camera in a dry, dust-free environment, preferably in a camera bag.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is dead or incorrectly inserted.	Ensure battery is charged and inserted correctly. Try the spare battery.
Images are blurry.	Anti-shake is off, insufficient light, or dirty lens.	Activate anti-shake. Ensure adequate lighting. Clean the lens.
Cannot record video.	TF card is full or not inserted.	Check TF card storage. Ensure TF card is inserted correctly.
Camera freezes.	Software glitch.	Remove and reinsert the battery to reset the camera.

If you encounter issues not listed here or if the solutions do not resolve the problem, please contact NBD customer support.

SPECIFICATIONS

Brand	NBD
Model Name	NBD-C23-WH-UK-2409 Father
Primary Camera Resolution	60 MP
Effective Still Resolution	48 MP
Optical Zoom	16x (10x Optical + 6x Digital)
Video Resolution	4K HD
Image Stabilization	Yes (Anti-shake)
Focus Type	Manual and Auto Focus
Photo Sensor Technology	CMOS
Supported File Format	JPEG, MP4
Batteries	2 Lithium Ion batteries (included)
Weight	Approx. 140 grams (camera body) / 227 g (Package Weight)
Color	White
Water Resistance Level	Not Water Resistant

Camera≈140g

The perfect travel companion



Image: The NBD Digital Camera being held, emphasizing its lightweight design of approximately 140 grams, making it an ideal travel companion.

WARRANTY AND SUPPORT

Your NBD Digital Camera comes with a **three-month warranty** covering free replacements and refunds for any manufacturing defects or issues not caused by misuse.

For any queries, technical assistance, or warranty claims, our dedicated support team is available to provide prompt assistance within 24 hours. Please refer to the contact information provided on the product packaging or the official NBD website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question