

EBTOOLS EBTOOLSswqunmzg4t0-11

EBTOOLS 14 Inch HD Laptop User Manual

Model: EBTOOLSswqunmzg4t0-11 | Brand: EBTOOLS

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your EBTOOLS 14 Inch HD Laptop. Designed for both business and study, this laptop features a 14-inch Full HD display, a Celeron J4025 processor, 8GB RAM, and a 512GB SSD, running on Windows 11 Pro. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your device.

2. SAFETY INFORMATION

- Do not expose the laptop to extreme temperatures, direct sunlight, or high humidity.
- Avoid placing heavy objects on the laptop.
- Use only the provided power adapter to charge the device.
- Keep liquids away from the laptop to prevent electrical shock or damage.
- Do not attempt to disassemble or repair the laptop yourself. Contact qualified service personnel.
- Ensure proper ventilation when using the laptop to prevent overheating.

3. WHAT'S IN THE BOX

Upon unpacking, please verify that all items listed below are present:

- 1 x EBTOOLS 14 Inch HD Laptop
- 1 x Power Adapter (US Plug)
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

The EBTOOLS 14 Inch HD Laptop is designed for efficiency and portability, featuring a robust set of components for

daily tasks.

4.1 Key Features

- **Powerful Performance:** Equipped with a Celeron J4025 processor for quick startups and smooth operation.
- **High Definition Display:** A 14-inch Full HD screen with 1920x1080 resolution provides clear and vibrant visuals.
- **Portable Design:** Thin and lightweight, making it easy to carry for on-the-go use.
- **Efficient System:** Pre-installed with Windows 11 Pro, compatible with various office software.
- **Long Battery Life:** A 5000mAh lithium-ion battery ensures extended usage.

4.2 Physical Components and Interfaces

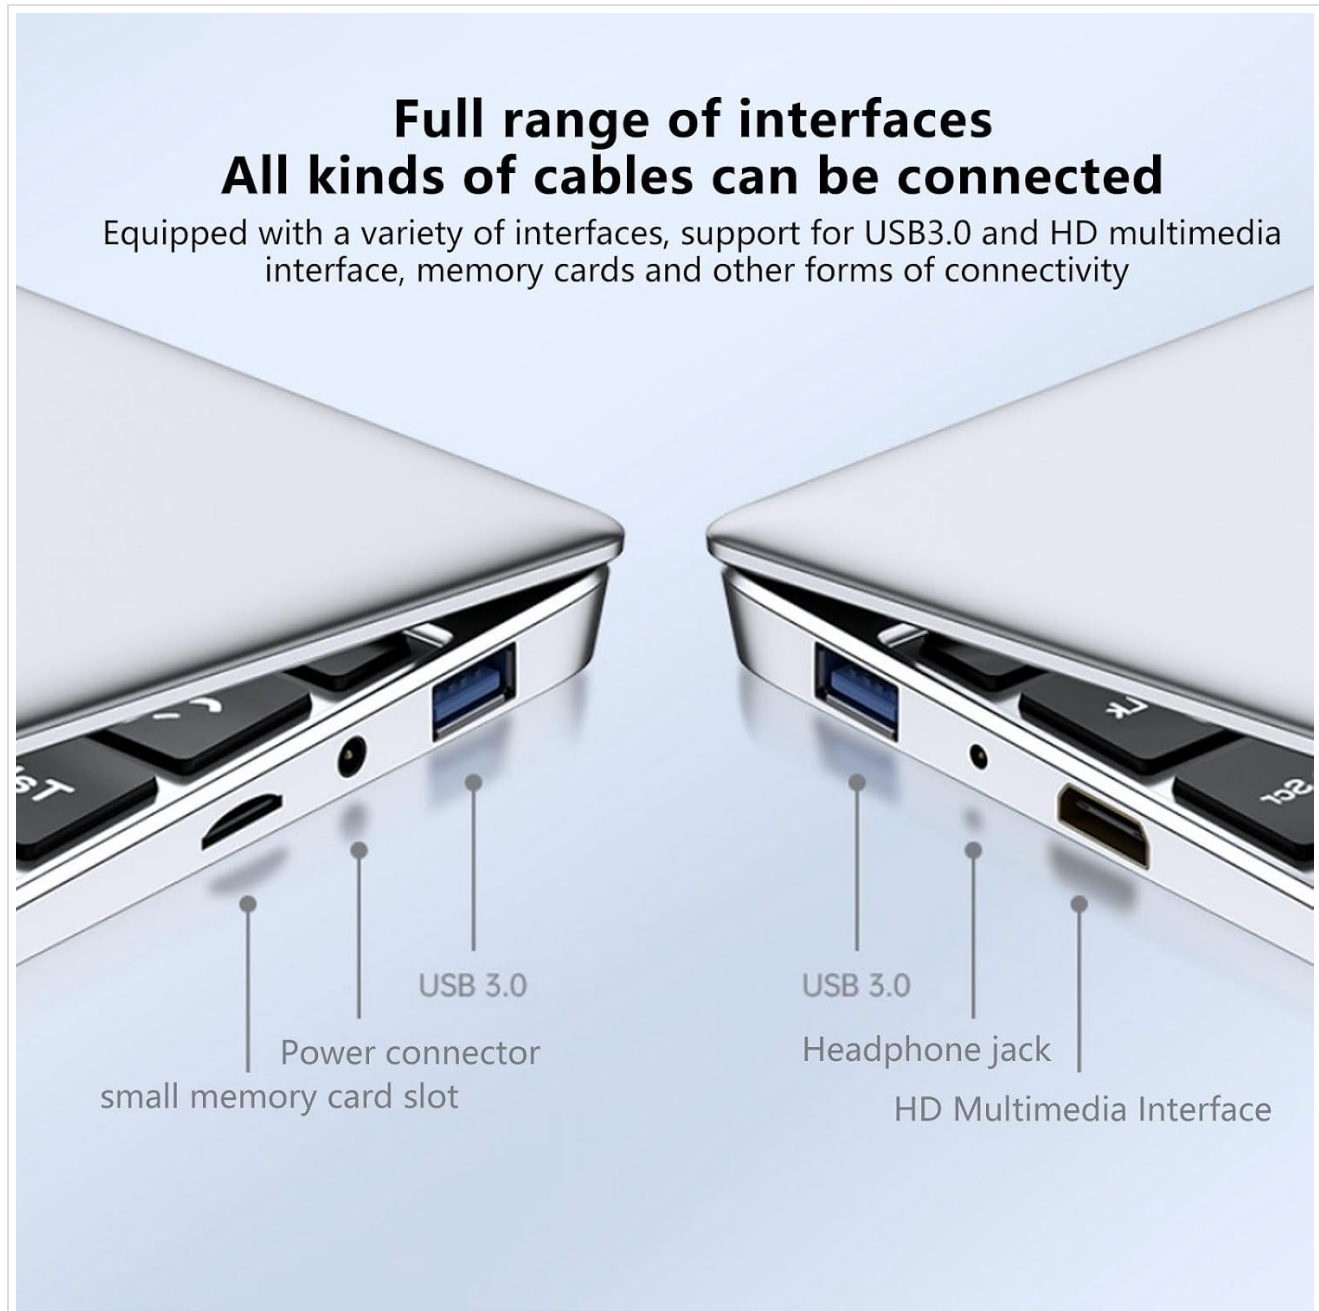


Figure 4.2.1: The 14-inch ultra-clear screen with narrow bezels, offering an immersive visual experience.

5000mah High Capacity Battery Freedom from battery anxiety

Large capacity, using high density polymer batteries, endurance to maintain a full range of energy to keep constantly charged, give you a sense of security on the go!



Figure 4.2.2: Overview of the laptop's interfaces, including two USB 3.0 ports, a small memory card slot, a 3.5mm audio jack, and an HD Multimedia Interface (HDMI).

Gaming and entertainment at the same time

Be your all around assistant

Faster action, more smooth running ability, easy to play the current popular mainstream games to enjoy the pleasure of gaming. Other office design software can also be easily handled



Figure 4.2.3: The integrated high-definition front camera, suitable for online classes and video conferencing, featuring a noise-canceling microphone.

14 inch ultra clear screen Satisfy your visual senses

Four side narrow edge design, 14 inch size, accounting for about 92% of the screen, narrow border to 0.4cm, wide field of vision, bring excellent enjoyment to both eyes, high standards of color certification, every touch of color are delicate to let you marvel!



Figure 4.2.4: The laptop's slim and lightweight design, emphasizing its portability and ease of carrying.

Slim and lightweight **Portable and space saving**

Ultra thin and lightweight shell, with unique technological aesthetics, easy to carry, carefully crafted and polished, about 24% lighter than the traditional shell, with a delicate feel.



Figure 4.2.5: The laptop supports dual-band wireless connectivity (2.4G and 5G) for smoother and more stable network access.

High Definition Cameras Make video distance closer

Equipped with a high definition front camera, whether it is online class or video chatting are clearly displayed, and comes with a noise canceling microphone, calls are clear and no noise. High Definition Camera Clearer picture, auto balance exposure
Noise canceling microphone, Clearer calls with less noise



Figure 4.2.6: The laptop is equipped with a 5000mAh high-capacity lithium-ion battery, providing extended usage time.

Dual band wireless Smoother and more stable connection

The advantages of dual band wireless fidelity devices are stronger and more stable wireless fidelity wireless signal. Higher transmission speeds and allow wireless devices to save more power



Figure 4.2.7: The laptop's performance allows for smooth gaming and entertainment, as well as handling various office and design software.

5. SETUP

5.1 Initial Charging

1. Connect the power adapter to the laptop's power connector.
2. Plug the power adapter into a wall outlet.
3. Allow the laptop to charge for at least 30 minutes before the first use, or until the battery indicator shows a sufficient charge.

5.2 First Power-On and Windows 11 Pro Setup

1. Open the laptop lid.
2. Press the power button (usually located on the keyboard or side) to turn on the laptop.

3. Follow the on-screen instructions to complete the initial setup of Windows 11 Pro. This includes selecting your language, region, connecting to a Wi-Fi network, and creating a user account.
4. Once setup is complete, your laptop is ready for use.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Sleep Mode

- **Power On:** Press the power button.
- **Shut Down:** Click the Start button in Windows, then select Power > Shut down.
- **Restart:** Click the Start button, then select Power > Restart.
- **Sleep Mode:** Close the laptop lid or click the Start button, then select Power > Sleep.

6.2 Using the Touchpad and Keyboard

- The touchpad functions as a mouse. Tap to click, use two fingers to scroll, and pinch to zoom.
- The keyboard is a standard compact layout. Familiarize yourself with function keys (Fn) for brightness, volume, and other shortcuts.

6.3 Connecting to Networks

- **Wi-Fi:** Click the Wi-Fi icon in the taskbar, select your network, enter the password, and click Connect.
- **Bluetooth:** Go to Settings > Bluetooth & devices, turn on Bluetooth, and pair with your desired device.

6.4 Connecting External Devices

- **USB Devices:** Insert USB drives, mice, keyboards, or other peripherals into the USB 3.0 ports.
- **External Display:** Connect an external monitor or TV using the HD Multimedia Interface (HDMI) port.
- **Memory Card:** Insert a compatible memory card into the memory card slot for expanded storage.
- **Audio Devices:** Plug headphones or external speakers into the 3.5mm sound interface.

7. MAINTENANCE

7.1 Cleaning the Laptop

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Do not spray liquid directly onto the screen.
- **Chassis and Keyboard:** Use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters openings.
- **Ports:** Use compressed air to gently clear dust from ports.

7.2 Battery Care

- Avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place if not used for extended periods, with the battery charged to about 50%.
- Do not expose the battery to high temperatures.

7.3 Software Updates

- Regularly check for and install Windows updates to ensure system stability and security. Go to Settings > Windows Update.

8. TROUBLESHOOTING

If you encounter issues with your laptop, refer to the following common solutions:

- **Laptop does not power on:** Ensure the power adapter is securely connected and the battery has sufficient charge. Try pressing and holding the power button for 10-15 seconds.
- **Display issues (no image, flickering):** Ensure the laptop is powered on. If an external monitor is connected, try disconnecting it. Restart the laptop.
- **Wi-Fi connectivity problems:** Check if Wi-Fi is enabled in Windows settings. Restart your router and the laptop. Ensure you are within range of the Wi-Fi signal.
- **Slow performance:** Close unnecessary applications. Check for available Windows updates. Ensure sufficient free space on the SSD.
- **Peripheral not recognized:** Ensure the device is properly connected to the correct port. Try connecting it to a different port or restarting the laptop.

For persistent issues, please refer to the support section.

9. SPECIFICATIONS



Figure 9.1: The EBTOOLS 14 Inch HD Laptop in a typical workspace setting.

Feature	Specification
Brand	EBTOOLS
Model Name	EBTOOLSwqunmegg4t0-11
Screen Size	14 Inches
Display Resolution	1920 x 1080 pixels (Full HD)
Processor	Intel Celeron J4025
RAM Memory	8 GB LPDDR4
Storage	512 GB SSD
Operating System	Windows 11 Pro
Graphics Card	Integrated UHD Graphics 600 (128 MB)

Bluetooth	BT 4.2
Wi-Fi	2.4G, 5G
USB Ports	2 x USB 3.0
Video Output	1 x Small HD Multimedia Interface (HDMI)
Audio Interface	1 x 3.5mm Sound Interface
Memory Card Slot	1 x Memory Card Slot (supports up to 2TB, not included)
Camera	0.3MP
Battery Type	Lithium battery
Battery Capacity	5000mAh
Speakers	Built-in stereo speakers 4Ω 2.0W
Microphone	Built-in high performance microphone
Shell Material	ABS

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact EBTOOLS customer service. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question