

[Manuals.plus](#) /

› [Torchlet](#) /

› Torchlet WL001 Battery Operated Wall Sconce Instruction Manual

## Torchlet WL001

# Torchlet WL001 Battery Operated Wall Sconce Instruction Manual

Model: WL001 | Brand: Torchlet

## INTRODUCTION

Thank you for choosing the Torchlet WL001 Battery Operated Wall Sconce. This manual provides detailed instructions for safe installation, operation, and maintenance of your new wall lights. Please read thoroughly before use.

## WHAT'S IN THE BOX

- Battery Sconces (2 units)
- Remote Control (1 unit)
- Type-C Charging Cable (2 units)
- Set of Screws (2 sets)
- Operation Guide (1 unit)

## SAFETY INFORMATION

- Ensure the installation surface is clean and dry.
- Do not expose to water or excessive humidity.
- Keep out of reach of children.
- Use only specified 5V2A charging cables.
- Do not attempt to disassemble or modify the product.

## SETUP AND INSTALLATION

## Tools Required:

- Drill
- Screwdriver
- Hammer


1. **Step 1: Mark Punch Points:** Choose your desired installation location. Use the iron plate as a template to mark two drilling points on the wall. Ensure the location allows for the desired rotation of the lampposts.



Image: A hand marking two points on a wall with a pencil, indicating where to drill for the sconce's mounting plate.

2. **Step 2: Install Expansion Nails:** Drill two small holes at the marked points. Insert the provided expansion nails into the drilled holes.

## OURS

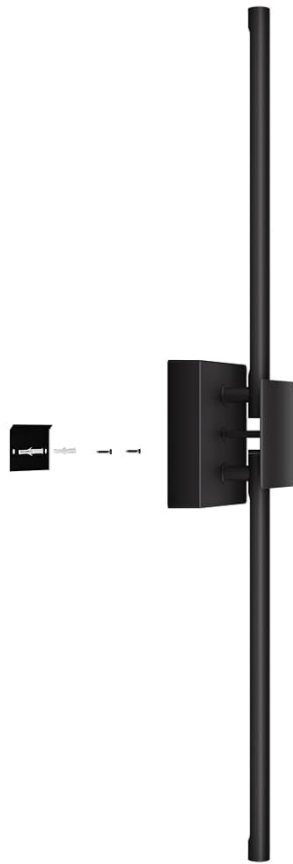

**Easy to Install:**  
No additional wiring or electricians required

## OTHERS



Image: A close-up of a hand inserting a white plastic expansion nail into a small drilled hole in a white wall.

3. **Step 3: Install the Iron Plate:** Align the iron plate with the installed expansion nails and secure it to the wall using the provided screws.

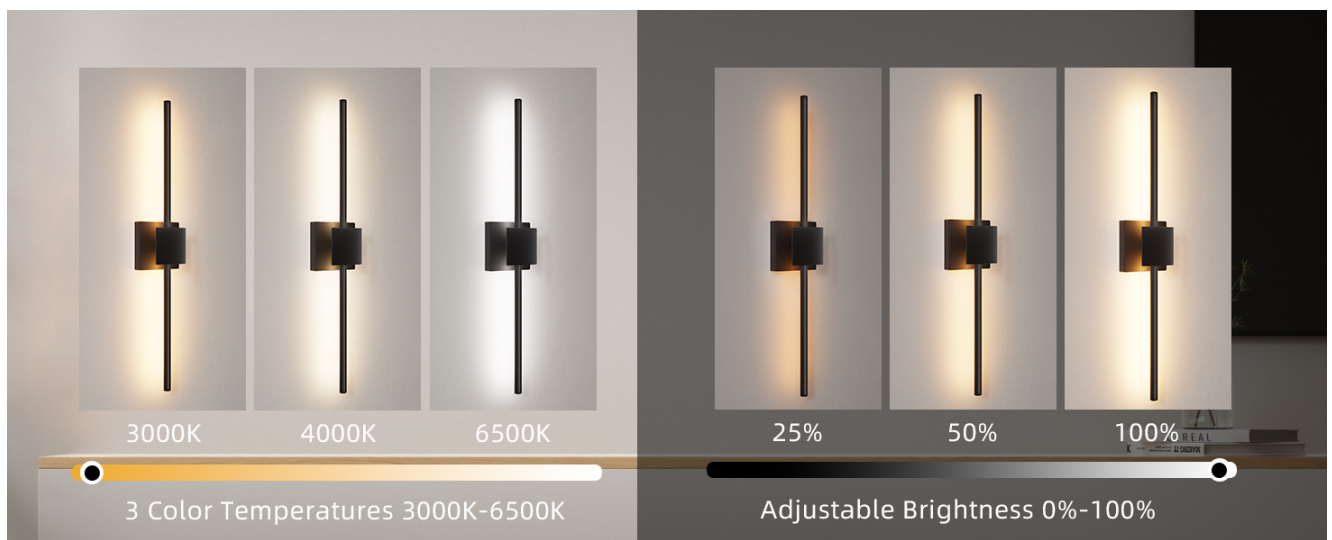


Image: A black rectangular iron plate with two screw holes is being attached to a wall with screws.

4. **Step 4: Hang the Sconce:** Carefully align the back slot of the wall sconce with the installed iron plate and slide it

down to secure. Ensure the sconce is stable. Note: The two lampposts can be rotated independently to achieve various aesthetic configurations. Ensure the main body is symmetrical on the plate for stability.

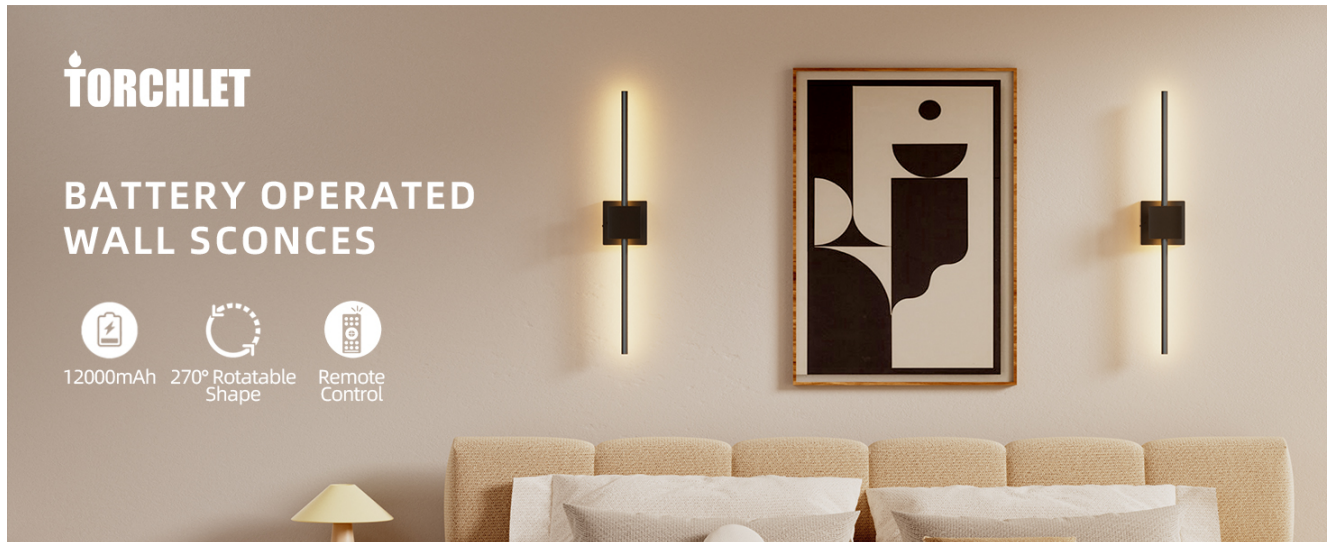


Image: A black wall sconce is being slid onto a wall-mounted plate. Another image shows the sconce with its two light bars rotated into different artistic positions.

## Installation Video:

Your browser does not support the video tag.

Video: An official Torchlet video demonstrating the step-by-step process of installing the wall sconces, including drilling, mounting the plate, and attaching the light fixture.

## CHARGING INSTRUCTIONS

Your Torchlet wall sconces are equipped with a 12000mAh rechargeable battery. For optimal performance, follow these charging guidelines:

- **First Charge:** Charge for 12 hours before initial use.
- **Subsequent Charges:** Charge for approximately 6 hours.
- **Charging Cable:** Always use a 5V2A Type-C charging cable. Using other cables may result in longer charging times.
- **Battery Life:** A full charge provides 30-50 hours of continuous operation, depending on the selected brightness level.

# 12000mAh Large Battery Capacity

Type-c port, one charge, use 30-50h

# 12000mAh



**6H**  
Full charged

**30H**  
Normal use

**50H**  
Darkest light

Image: A wall sconce is shown horizontally, plugged in with a Type-C cable. Text indicates '12000mAh Large Battery Capacity', '6H Full charged', '30H Normal use', and '50H Darkest light'.

## OPERATING INSTRUCTIONS

### Power On/Off

- **Manual Switch:** Press the small button on the side of the sconce to turn it on or off.
- **Remote Control:** Use the 'ON' and 'OFF' buttons on the remote control.

### Remote Control Functions

The included remote control allows for convenient adjustment of your wall sconces. Ensure the remote is pointed directly at the sconce's sensor (within 5 meters / 16 feet).

- **Brightness Adjustment:** Use the '+' and '-' buttons to cycle through 25%, 50%, and 100% brightness levels.

- **Color Temperature Selection:** Choose between 3000K (Warm Light), 4500K (Natural Light), and 6500K (White Light) using the dedicated buttons.
- **Timer Function:** Set the lights to automatically turn off after 1H, 2H, 4H, 6H, or 8H using the respective timer buttons.

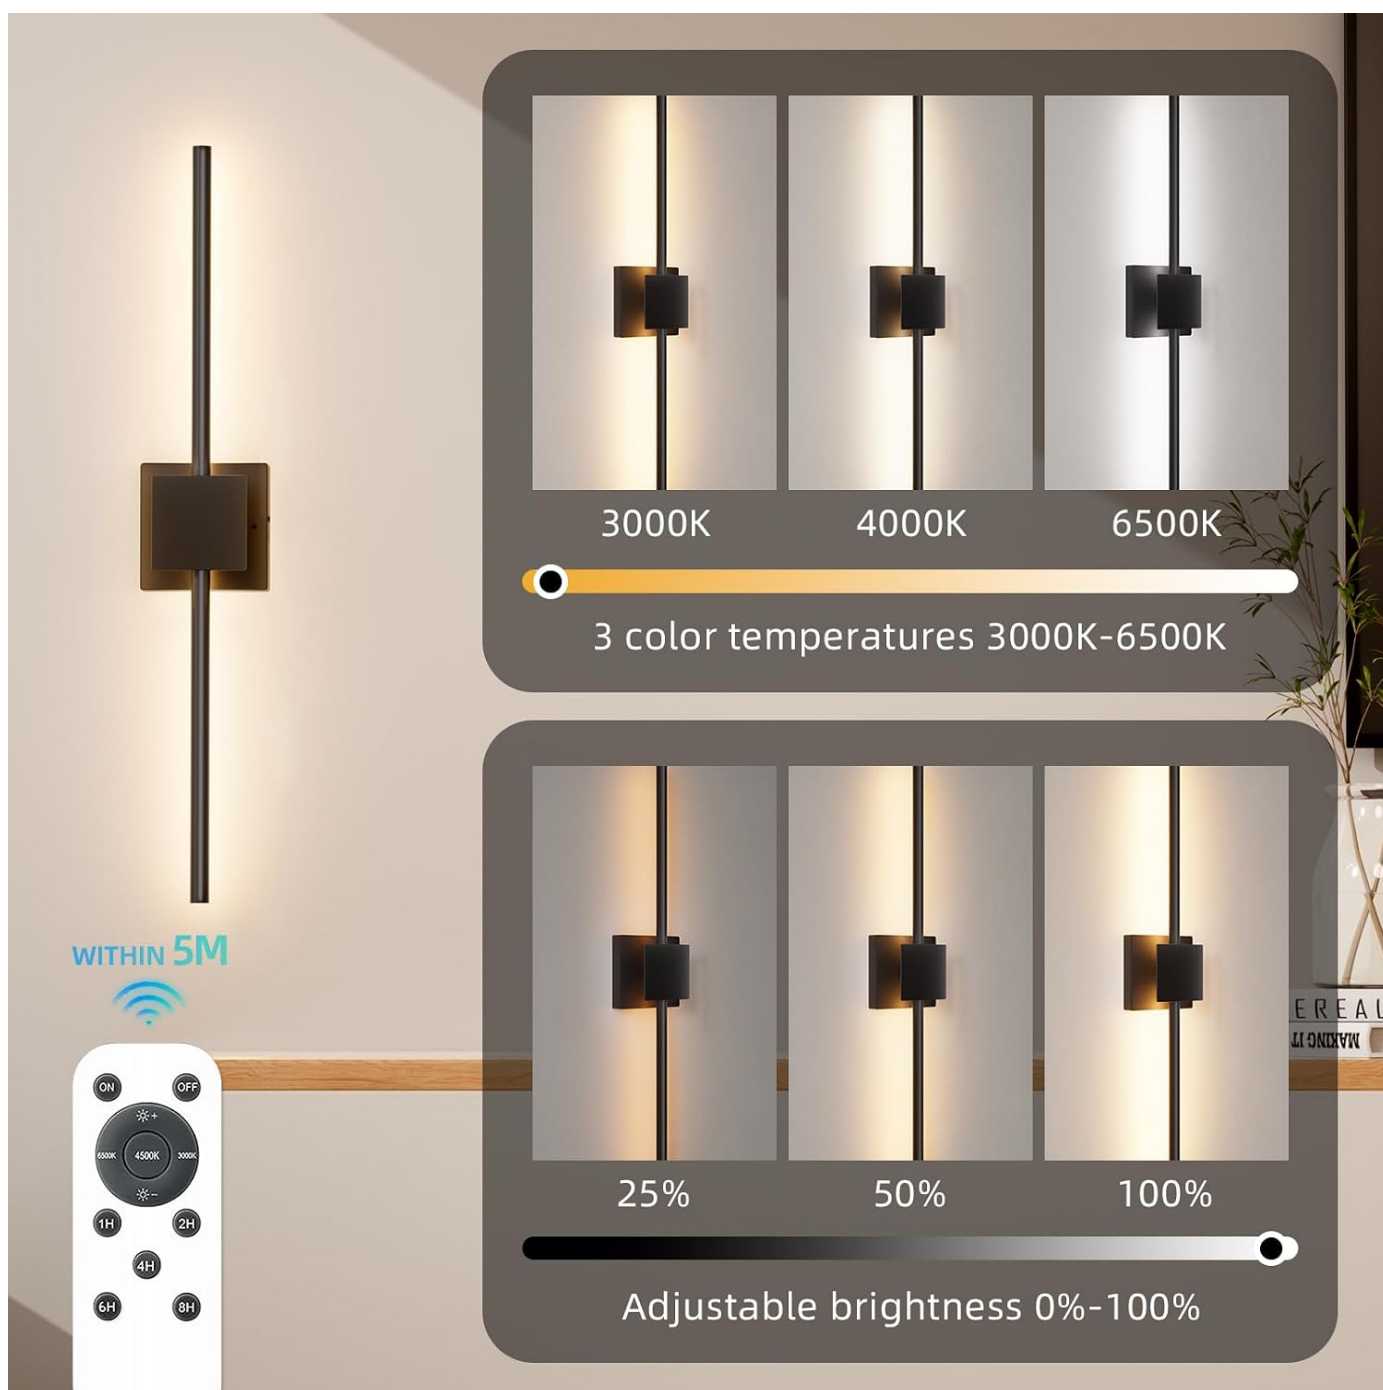


Image: A wall sconce is displayed alongside its remote control. The image illustrates three color temperatures (3000K, 4000K, 6500K) and three brightness levels (25%, 50%, 100%).

## Operation Video:

Your browser does not support the video tag.

Video: An official Torchlet video demonstrating the various features of the wall sconce, including changing color temperatures, adjusting brightness, and using the remote control.

## MAINTENANCE

- **Cleaning:** Wipe the sconce with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Battery Care:** Recharge the battery regularly to maintain its lifespan. Avoid fully discharging the battery frequently.
- **Remote Control Battery:** If the remote control is unresponsive, replace its battery.

## TROUBLESHOOTING

### Light does not turn on with remote after charging:

- Check if the remote control battery is depleted. Replace if necessary.
- If replacing the remote battery doesn't work, press the manual switch on the sconce first, then try using the remote control.

### Remote control is unresponsive or inconsistent:

- Ensure the remote is pointed directly at the sconce's sensor.
- Verify the remote control battery is not low.
- Ensure there are no obstructions between the remote and the sconce.

### Sconce does not hold a charge:

- Ensure you are using a 5V2A Type-C charging cable.
- Verify the charging cable is securely connected to both the sconce and the power source.
- If the issue persists, contact customer support.

## SPECIFICATIONS

|                        |                                              |
|------------------------|----------------------------------------------|
| Brand                  | Torchlet                                     |
| Model Name             | WL001                                        |
| Color                  | Black                                        |
| Material               | Metal, Plastic                               |
| Product Dimensions     | 28.3 inches (Length)                         |
| Power Source           | Battery Powered                              |
| Battery Capacity       | 12000mAh                                     |
| First Charge Time      | 12 hours                                     |
| Subsequent Charge Time | 6 hours                                      |
| Operating Time         | 30-50 hours (depending on brightness)        |
| Light Source Type      | LED                                          |
| Color Temperatures     | 3000K (Warm), 4500K (Natural), 6500K (White) |

|                   |                                                   |
|-------------------|---------------------------------------------------|
| Brightness Levels | 25%, 50%, 100% (Dimmable)                         |
| Control Method    | Remote, Manual Switch                             |
| Special Features  | Independently Rotatable Lampposts, Timer Function |
| Installation Type | Wall Mount                                        |
| Number of Items   | 2 (Set of Two)                                    |

## WARRANTY AND SUPPORT

Torchlet products come with a standard manufacturer's warranty. For specific warranty details, product support, or any inquiries, please refer to the contact information provided with your purchase or visit the official Torchlet website. Optional protection plans are available for purchase separately. Please check Amazon for details on 3-Year and 4-Year Protection Plans.

© 2026 Torchlet. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question