

Replacement IR Remote Control

Generic Replacement IR Remote Control User Manual

For Select Projector Models: Ekasn AN28, A29, A10, A12; BloBlo CP801; Blaupunkt BPS1080WPS; Elephas T20, W13; Everycom M7

1. INTRODUCTION

This document provides instructions for the Generic Replacement IR Remote Control. This remote is designed as a direct infrared (IR) replacement for the original remote controls of specific projector models. It is crucial to verify compatibility before use.

Important Note: This is a replacement remote control. While it is designed to replicate the functions of your original remote, some advanced or specific functions may vary or not be fully supported depending on your projector model. Always refer to your projector's original manual for detailed functionality of your device.

2. COMPATIBILITY VERIFICATION

Before proceeding with setup, ensure this remote control is compatible with your projector. This remote is intended for use with the following projector models:

- **Ekasn:** AN28, A29, A10, A12
- **BloBlo:** CP801
- **Blaupunkt:** BPS1080WPS
- **Elephas:** T20, W13
- **Everycom:** M7

Visually compare this replacement remote with your original remote control. The appearance and button layout should be identical or very similar for optimal functionality.



Image 1: Front view of the replacement remote control. This image displays the power button, navigation pad with OK button, back button, and volume controls.

3. SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 2: Rear view of the remote control with the battery cover detached, revealing the two AAA battery slots. This illustrates the correct orientation for battery insertion.

4. OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote's IR emitter (located at the top of the remote) and the IR receiver on your projector.

Basic Functions:

- **Power Button (●):** Press to turn the projector on or off.
- **Navigation Pad (Arrows):** Use the Up, Down, Left, and Right arrows to navigate through menus and selections.
- **OK Button:** Press to confirm a selection or enter a menu item.
- **Back/Return Button (↶):** Returns to the previous screen or menu.
- **Volume Controls (– / +):** Adjusts the audio volume of the projector.
- **Mute Button (⏸):** Mutes or unmutes the audio.
- **Source/Input Button (⌂):** Selects the input source (e.g., HDMI, USB).
- **Menu Button (≡):** Accesses the projector's main menu.

Point the remote directly at the projector's IR receiver for best performance. Obstructions between the remote and the projector can interfere with the signal.

5. MAINTENANCE

Battery Replacement:

When the remote control's range decreases or it becomes unresponsive, it is time to replace the batteries. Follow the battery installation steps in Section 3.

- Always replace both AAA batteries at the same time.
- Do not mix old and new batteries, or different types of batteries.

- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

Cleaning:

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with the correct polarity (+/-).
 - Replace old batteries with fresh AAA batteries.
 - Check for any obstructions between the remote and the projector's IR receiver.
 - Ensure you are within the effective range of the projector's IR receiver.
 - Verify that the remote control is indeed compatible with your specific projector model (refer to Section 2).
- **Some functions do not work:**
 - As a replacement remote, some specific or advanced functions of your original projector remote may not be fully replicated. This is normal for universal or replacement remotes.
 - Ensure you are pointing the remote directly at the projector.


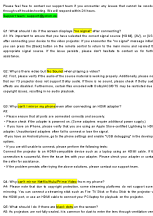

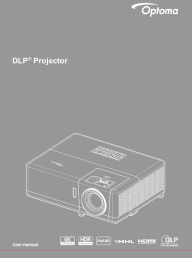
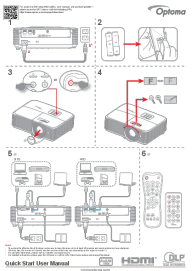

7. SPECIFICATIONS

Product Type	Replacement IR Remote Control
Power Source	2 x AAA Batteries (not included)
Color	Black
Max Supported Devices	1 (Specific Projector)
Compatible Projector Models	Ekasn AN28, A29, A10, A12; BloBlo CP801; Blaupunkt BPS1080WPS; Elephas T20, W13; Everycom M7
Manufacturer	Easytry (Brand: Generic)

8. SUPPORT

For further assistance or inquiries regarding this replacement remote control, please refer to the seller's contact information on the platform where the product was purchased. It is recommended to have your order details and projector model information ready when contacting support.



 <p>MH733 Mini Projector</p> <p>4000 ANSI LUMENS Full HD 1080p Resolution 16000:1 Contrast Ratio Long Lamp Life USB Reader Network Connectivity</p> <p>BenQ</p>	<p>BenQ MH733 Projector: High Brightness Full HD Presentation Solution</p> <p>Discover the BenQ MH733 projector, featuring 4000 ANSI Lumens, Full HD 1080p resolution, and a 16000:1 contrast ratio for exceptional presentations. Learn about its long lamp life, USB reader, and network connectivity options.</p>
 <p>Yoton Projector Y3</p>	<p>Yoton Projector Y3 Frequently Asked Questions and Solutions</p> <p>Find solutions to common issues with the Yoton Projector Y3, including no signal, no sound, phone mirroring problems, black dots, overheating, remote control malfunctions, and blurry images. Contact Yoton support for further assistance.</p>
 <p>VT46 Portable Projector</p> <p>NEC</p>	<p>NEC VT46 Portable Projector User's Manual - Setup, Operation, and Troubleshooting Guide</p> <p>Comprehensive user manual for the NEC VT46 portable projector, covering setup, installation, connections, basic operation, on-screen menu navigation, maintenance, troubleshooting, specifications, and service information.</p>
 <p>Optoma DLP Projector</p>	<p>Optoma DLP Projector User Manual</p> <p>Comprehensive user manual for Optoma DLP projectors, covering setup, operation, maintenance, and troubleshooting. Learn about connections, keypad functions, remote control, and safety instructions for optimal performance.</p>
 <p>Optoma Quick Start Guide</p>	<p>Optoma Projector Quick Start Guide: Setup, Connections, and Safety</p> <p>Quickly set up and operate your Optoma projector with this essential guide. Learn about connections, remote control functions, image adjustments, and crucial safety information. Access the full user manual and support at www.optoma.com.</p>
 <p>Veemi Mini Projector</p>	<p>Veemi Mini Projector: Connection Guide and Troubleshooting</p> <p>This guide provides instructions for connecting iOS and Android devices to your Veemi projector, along with troubleshooting tips for common issues like blurry images, no sound via HDMI, and connection problems. Learn how to use screen mirroring and other features.</p>